
Table of Contents

| | |
|--|-----------|
| GETTING STARTED | 1 |
| PACKING CHECKLIST | 1 |
| VIEWS OF PROJECTOR PARTS..... | 2 |
| <i>Front-right View</i> | 2 |
| <i>Top view—On-screen Display (OSD) buttons and LEDs</i> | 3 |
| <i>Rear view</i> | 4 |
| <i>Bottom view</i> | 5 |
| REMOTE CONTROL PARTS | 6 |
| REMOTE CONTROL OPERATING RANGE..... | 8 |
| PROJECTOR AND REMOTE CONTROL BUTTONS..... | 8 |
| <i>Remote Control</i> | 8 |
| SETUP AND OPERATION | 9 |
| INSERTING THE REMOTE CONTROL BATTERIES | 9 |
| CONNECTING INPUT DEVICES | 10 |
| STARTING AND SHUTTING DOWN THE PROJECTOR..... | 11 |
| SETTING AN ACCESS PASSWORD (SECURITY LOCK)..... | 13 |
| ADJUSTING THE PROJECTOR LEVEL | 15 |
| ADJUSTING THE ZOOM, FOCUS AND KEYSTONE | 16 |
| ADJUSTING THE VOLUME | 17 |
| ON-SCREEN DISPLAY (OSD) MENU SETTINGS | 18 |
| OSD MENU CONTROLS | 18 |
| <i>Navigating the OSD</i> | 18 |
| SETTING THE OSD LANGUAGE | 19 |
| OSD MENU OVERVIEW | 20 |
| OSD SUB-MENU OVERVIEW | 21 |
| IMAGE MENU..... | 22 |
| <i>Color Manager</i> | 23 |
| COMPUTER MENU..... | 24 |
| VIDEO/AUDIO MENU | 25 |
| INSTALLATION I MENU | 26 |
| INSTALLATION II MENU..... | 27 |
| <i>OSD Menu Setting</i> | 28 |
| <i>Peripheral Test</i> | 29 |
| <i>Lamp Hour Reset</i> | 29 |
| <i>Factory Reset</i> | 30 |
| <i>Status</i> | 30 |
| MAINTENANCE AND SECURITY | 31 |
| REPLACING THE PROJECTION LAMP..... | 31 |
| <i>Resetting the Lamp</i> | 33 |
| CLEANING THE PROJECTOR..... | 34 |
| <i>Cleaning the Lens</i> | 34 |
| <i>Cleaning the Case</i> | 34 |
| USING THE KENSINGTON® LOCK | 35 |
| TROUBLESHOOTING | 36 |
| COMMON PROBLEMS AND SOLUTIONS | 36 |
| TIPS FOR TROUBLESHOOTING | 36 |
| LED ERROR MESSAGES..... | 37 |
| IMAGE PROBLEMS..... | 37 |
| LAMP PROBLEMS..... | 38 |
| REMOTE CONTROL PROBLEMS | 38 |
| AUDIO PROBLEMS | 38 |
| HAVING THE PROJECTOR SERVICED | 38 |
| SPECIFICATIONS | 39 |


SPECIFICATIONS..... 39
 Input/output connectors 39
PROJECTION DISTANCE V.S. PROJECTION SIZE..... 40
TIMING MODE TABLE 41
PROJECTOR DIMENSIONS 43
REGULATORY COMPLIANCE 44
 FCC WARNING 44
 CANADA 44
 SAFETY CERTIFICATIONS 44
 EN 55022 WARNING 44




GETTING STARTED

Packing Checklist


Carefully unpack the projector and check that the following items are included:

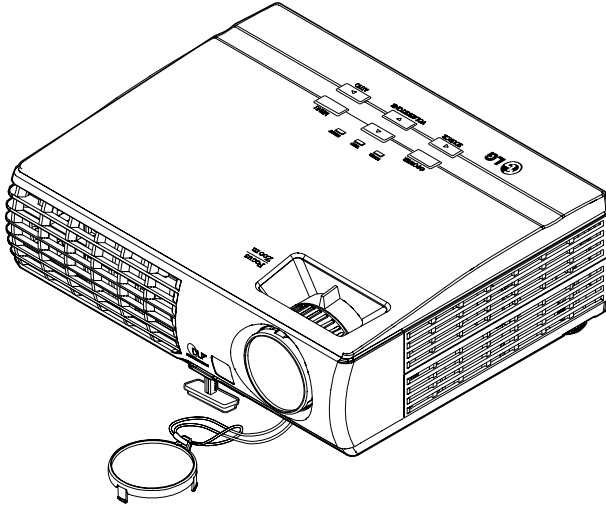


DLP PROJECTOR

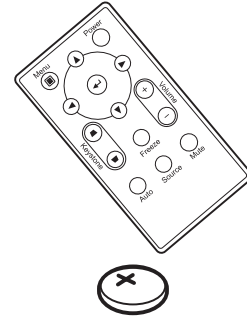

*REMOTE CONTROL
(WITH ONE 3V CR2025 BATTERY)*

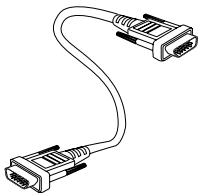

RGB CABLE

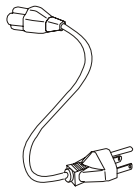

POWER CORD



*AUDIO CABLE
(OPTIONAL)*



*COMPONENT CABLE
(OPTIONAL)*




*VIDEO CABLE
(OPTIONAL)*



*S-VIDEO CABLE
(OPTIONAL)*



*RGB TO COMPONENT
ADAPTER (OPTIONAL)*

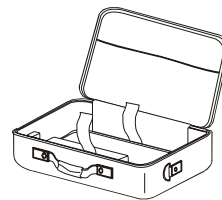

CARRYING CASE



*CD-ROM (THIS
USER'S MANUAL)*


Contact your dealer immediately if any items are missing, appear damaged, or if the unit does not work. It is recommended that you keep the original packing material should you ever need to return the equipment for warranty service.

Caution:

Avoid using the projector in dusty environments.

Views of Projector Parts

Front-right View

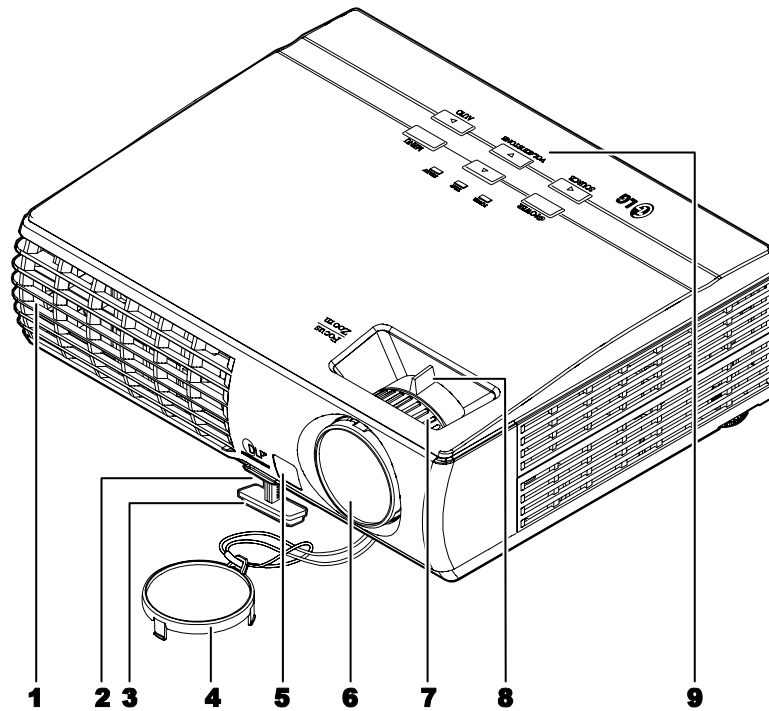


| ITEM | LABEL | DESCRIPTION | SEE PAGE: |
|------|------------------------|--|-----------|
| 1. | Ventilation opening | To keep the projector lamp cool | |
| 2. | Height-adjuster button | Push to release height adjuster | 15 |
| 3. | Height adjuster | Adjusts level of projector | |
| 4. | Lens cap | Covers lens to protect when not in use | |
| 5. | IR receiver | Receiver for IR signal from remote control | 6 |
| 6. | Lens | Remove lens cap before use | |
| 7. | Focus ring | Focuses the projected image | 16 |
| 8. | Zoom ring | Enlarges the projected image | |
| 9. | Function keys | See Top view—On-screen Display (OSD) buttons and LEDs. | 3 |

Important:


Ventilation openings on the projector allow for good air circulation, which keeps the projector lamp cool. Do not obstruct any of the ventilation openings.


Top view—On-screen Display (OSD) buttons and LEDs

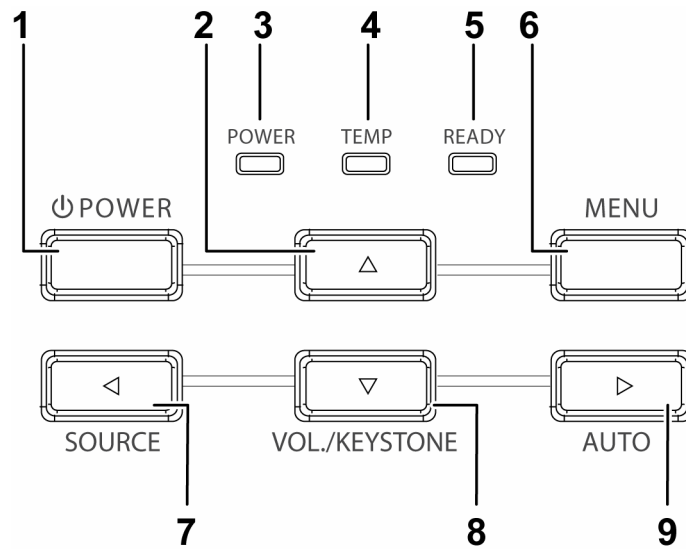

| ITEM | LABEL | DESCRIPTION | | SEE PAGE: |
|------|---------------------------------|---|---|-----------|
| 1. | ⏻ (POWER) | Turns the projector On or Off | | |
| 2. | ▲ (Up cursor) | Navigates and changes settings in the OSD | | 18 |
| 3. | POWER LED | Green | Power On | |
| | | Off | Power Off (AC Off) | |
| | | Flashing | Error code | |
| 4. | TEMP LED | On | System over temperature | |
| | | Off | Normal State | |
| 5. | READY LED | Orange | Lamp is ready to be powered-on. | |
| | | Flashing | Lamp not ready (Warm-up/shutting down/cooling) (see LED Error Messages on page 37) | |
| 6. | MENU | Open and exits the OSD buttons | | |
| 7. | ◀ (Left cursor) / SOURCE/ | Detects the input device Navigates and changes settings in the OSD | | 18 |
| 8. | ▼ (Down cursor) / VOL./KEYSTONE | Quick Menu – For Keystone, Audio Volume Navigates and changes settings in the OSD | | 17 |
| 9. | ▶ (Right cursor) / AUTO/ | Optimizes image size, position, and resolution Navigates and changes settings in the OSD | | 7, 18 |

Rear view

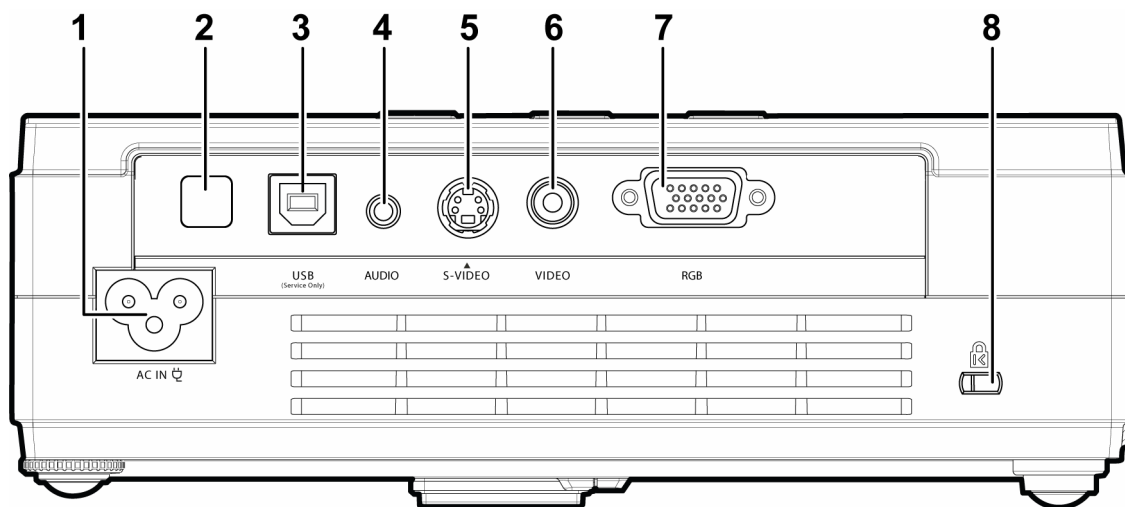


| ITEM | LABEL | DESCRIPTION | SEE PAGE: |
|------|---|---|-----------|
| 1. | AC IN | Connect the POWER CABLE | 11 |
| 2. | Rear IR receiver (Optional) | Receiver for IR signal from remote control | |
| 3. | USB (Service Only) | Connect the USB CABLE from a computer (service only) | 10 |
| 4. | AUDIO | Connect the AUDIO CABLE from the input device | |
| 5. | S-VIDEO | Connect the S-VIDEO CABLE from a video device | |
| 6. | VIDEO | Connect the VIDEO CABLE from a video device | |
| 7. | RGB | Connect the RGB CABLE from a computer and components | |
| 8. |  (Security Lock) | Secure to permanent object with a Kensington® Lock system | 35 |

Note:


If your video equipment has both S-VIDEO and RCA jacks (composite video) connect to the S-VIDEO connector. S-VIDEO provides a better quality signal.

Bottom view

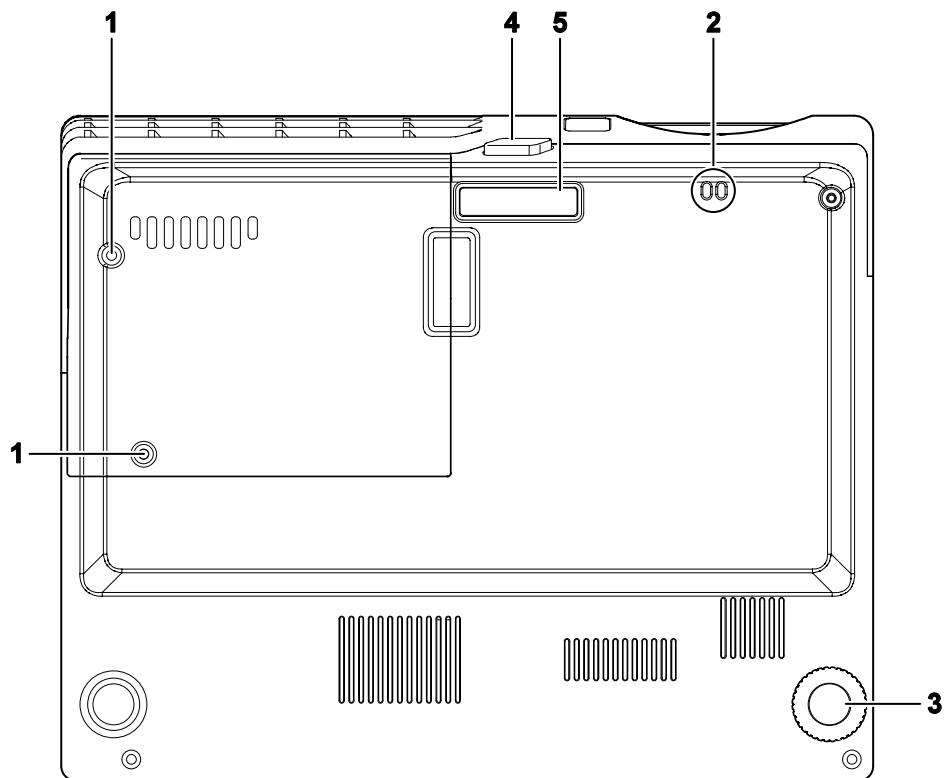

| ITEM | LABEL | DESCRIPTION | SEE PAGE: |
|------|------------------------|---|-----------|
| 1. | Lamp cover | Remove when changing the lamp. | 31 |
| 2. | Lens cap hook | To fasten the lens cap cover. | 15 |
| 3. | Tilt adjustor | Rotate adjuster lever to adjust angle position. | |
| 4. | Height adjustor button | Push to release adjustor. | |
| 5. | Height adjustor | Adjuster drops down when adjuster button is pushed. | |

Remote Control Parts

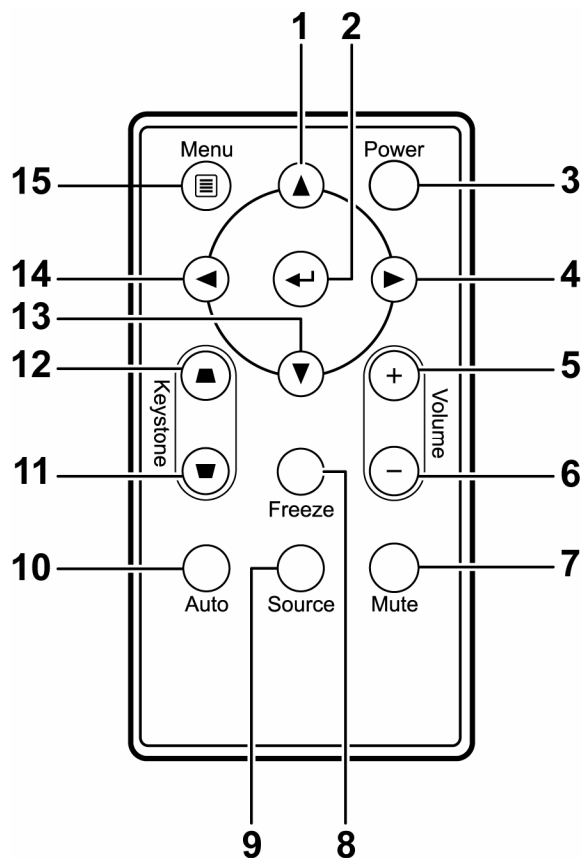

Important:

1. Avoid using the projector with bright fluorescent lighting turned on. Certain high-frequency fluorescent lights can disrupt remote control operation.

2. Be sure nothing obstructs the path between the remote control and the projector. If the path between the remote control and the projector is obstructed, you can bounce the signal off certain reflective surfaces such as projector screens.

3. The buttons and keys on the projector have the same functions as the corresponding buttons on the remote control. This user's manual describes the functions based on the remote control.

| ITEM | LABEL | DESCRIPTION | SEE PAGE: |
|-------------|-----------------|--|------------------|
| 1. | Up cursor | Navigates and changes settings in the OSD | 18 |
| 2. | Enter | Changes settings in the OSD | |
| 3. | Power | Turns the projector On or Off | 11 |
| 4. | Right cursor | Navigates and changes settings in the OSD | 18 |
| 5. | Volume + | Increase volume | 17 |
| 6. | Volume - | Decrease volume | |
| 7. | Mute | Mutes the built-in speaker | |
| 8. | Freeze | Freeze/unfreezes the on-screen picture | |
| 9. | Source | Detects the input device | |
| 10. | Auto | Auto adjustment for frequency, tracking, size, position (RGB only) | |
| 11. | Keystone top | Corrects image-trapezoid (wider top) effect | 16 |
| 12. | Keystone bottom | Corrects image trapezoid (wider bottom) effect | |
| 13. | Down cursor | Navigates and changes settings in the OSD | 18 |
| 14. | Left cursor | Navigates and changes settings in the OSD | |
| 15. | Menu | Opens the OSD | |


Remote Control Operating Range

The remote control uses infrared transmission to control the projector. It is not necessary to point the remote directly at the projector. Provided you are not holding the remote perpendicular to the sides or the rear of the projector, the remote will function well within a radius of about 7 meters (23 feet) and 15 degrees above or below the projector level. If the projector does not respond to the remote control, move a little closer.

Projector and Remote Control Buttons

The projector can be operated using the remote control or the buttons on the top of the projector. All operations can be carried out with the remote control; however, the buttons on the projector are limited in use. The following illustration shows the corresponding buttons on the remote control and on the projector.


Remote Control

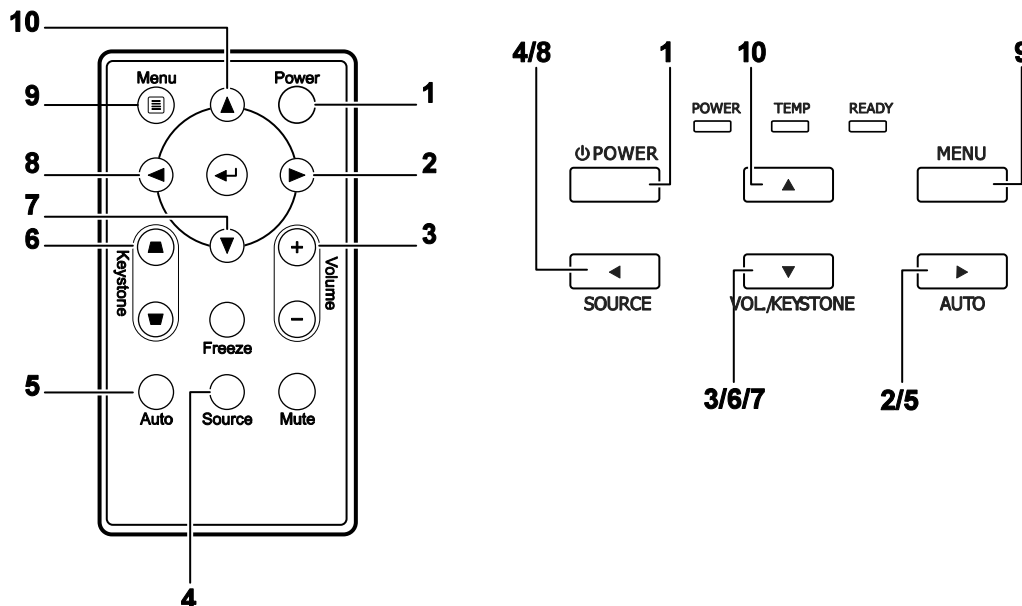


Some buttons on the projector have multiple functions. For example, item 3/6/7 on the projector functions as the keystone button, volume adjuster, and as the down cursor key.

Inserting the Remote Control Batteries


1. Remove the battery compartment cover by sliding the cover in the direction of the arrow. (A) Pull out the cover. (B)

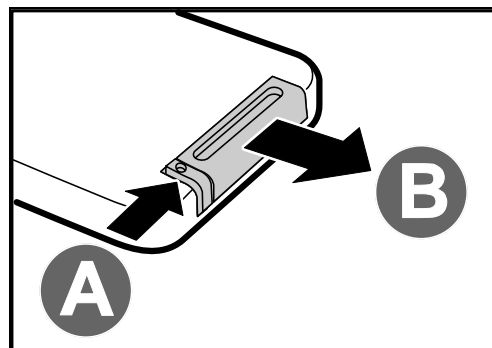

2. Insert the battery with the positive side facing up.

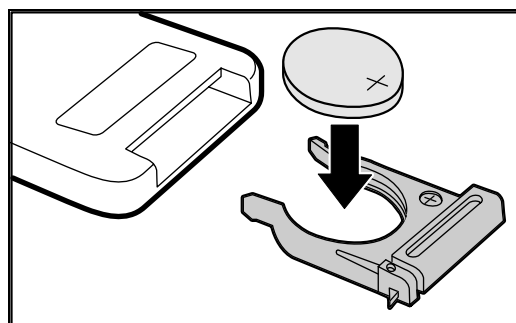

3. Replace the cover.

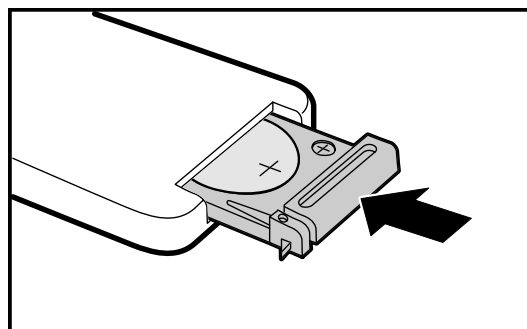


Caution:

1. Only use a 3V lithium battery (CR2025).
2. Dispose of used batteries according to local ordinance regulations.
3. Remove the battery when not using the projector for prolonged periods.

Connecting Input Devices

A PC or notebook computer and video devices can be connected to the projector at the same time. Video devices include DVD, VCD, and VHS players, as well as movie camcorders and digital still cameras. Check the user manual of the connecting device to confirm it has the appropriate output connector.

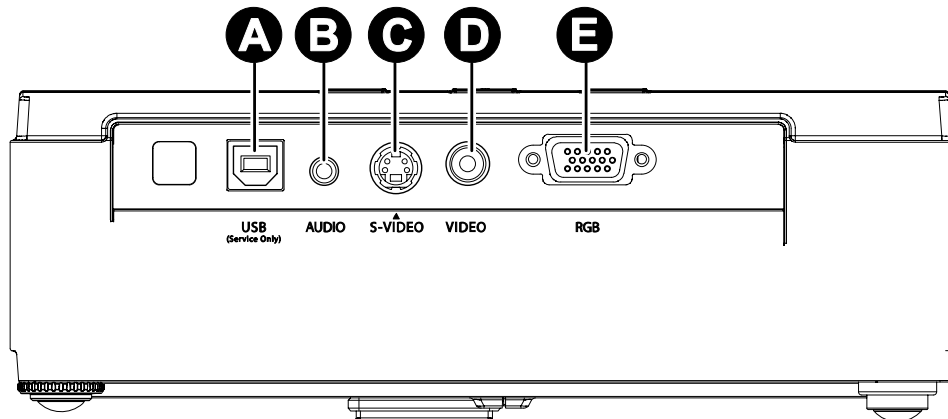


| ITEM | LABEL | DESCRIPTION |
|------|--------------------|---|
| A | USB (Service Only) | Connect the USB CABLE from a computer (service only). |
| B | AUDIO | Connect the AUDIO CABLE from the computer's audio-out connector. Connect the AUDIO CABLE (mini jack-to-RCA x 2) from a video device. |
| C | S-VIDEO | Connect the S-VIDEO CABLE from a video device. |
| D | VIDEO | Connect the VIDEO CABLE from a video device. |
| E | RGB | Connect the RGB CABLE from a computer. Connect DVD input YCbCr / YPbPr, through optional RGB to COMPONENT ADAPTOR. |

Warning:

As a safety precaution, disconnect all power to the projector and connecting devices before making connections.

Starting and Shutting down the Projector

1. Connect the power cord to the projector.
Connect the other end to a wall outlet.
The **POWER** and **READY** LEDs on the projector light.

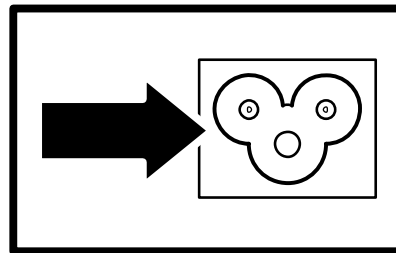


2. Turn on the connected devices.


3. Ensure the **READY** LED displays a solid orange and not a flashing orange.
Then press the **POWER** button to turn on the projector.

The projector splash screen displays and connected devices are detected.

See Setting an Access Password (Security Lock) on page 13 if security lock is enabled.

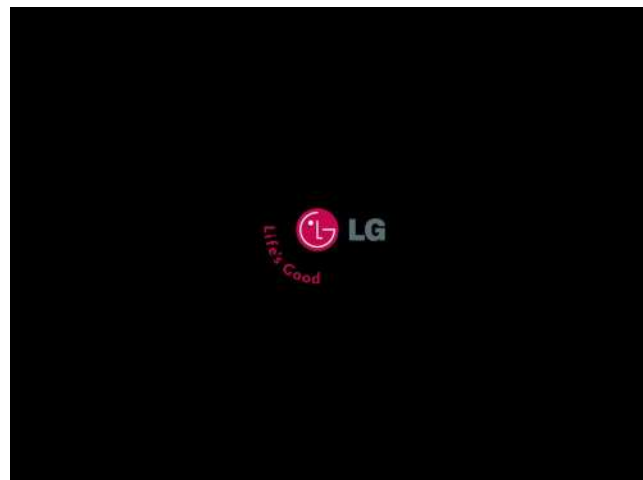

4. If more than one input device is connected, press the **SOURCE** button and use **▲▼** to scroll among devices.
(Component is supported through the RGB to COMPONENT ADAPTER.)

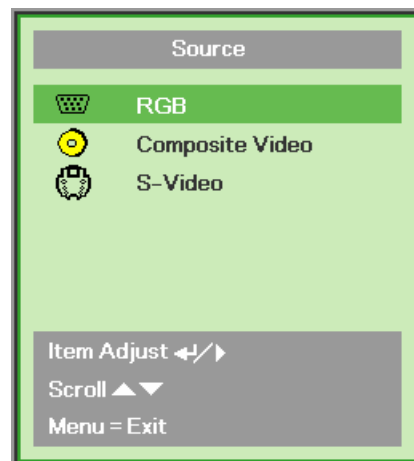

- **RGB:** Analog RGB
Component: DVD input YCbCr / YPbPr, or HDTV input YPbPr via HD15 connector
- **Composite Video:** Traditional composite video
- **S-Video:** Super video (Y/C separated)

- 5.** When the “Power Off? /Press Power again” message appears, press the **POWER** button. The projector turns off.



Caution:

1. *Be sure to remove the lens cap before starting projector.*
2. *Do not unplug the power cord until the READY LED stops flashing—indicating the projector has cooled down.*



Setting an Access Password (Security Lock)

You can use the four (arrow) buttons to set a password and prevent unauthorized use of the projector. When enabled, the password must be entered after you power on the projector. (See Navigating the OSD on page 18 and Setting the OSD Language on page 19 for help on using OSD menus.)


Important:

Keep the password in a safe place. Without the password, you will not be able to use the projector. If you lose the password, contact your reseller for information on clearing the password.

1. Press the **MENU** button to open the OSD menu.
2. Press the cursor **◀▶** button to move to the **Installation I** menu.

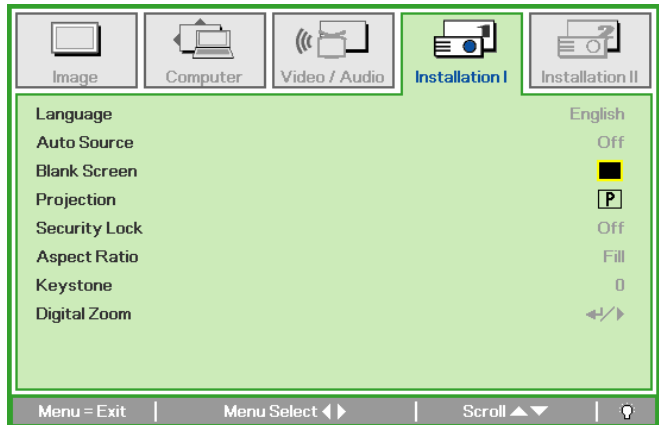
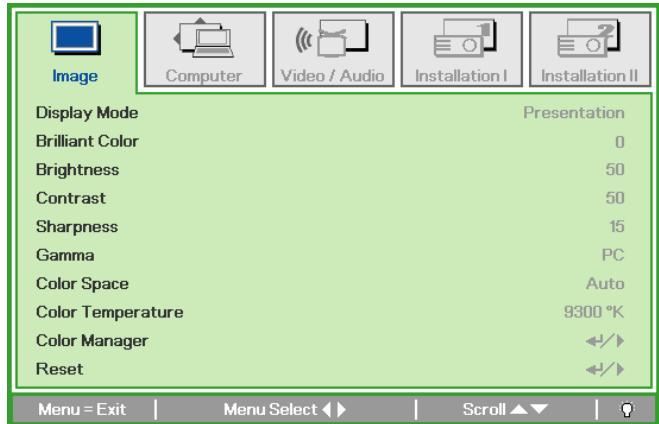


3. Press the cursor **▲▼** button to select **Security Lock**.
4. Press the cursor **◀▶** button to enable or disable security lock function.
A password dialog box automatically appears.

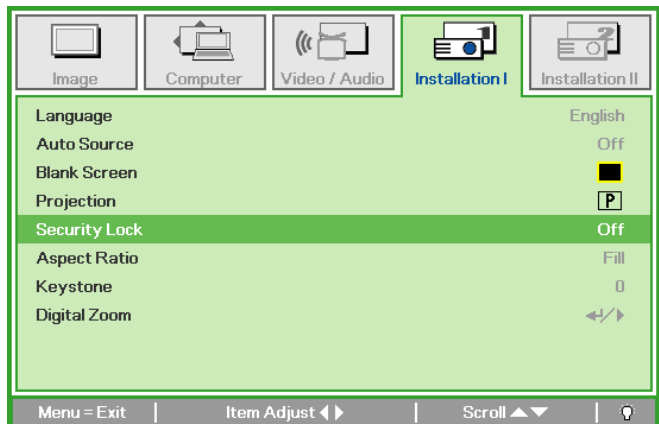


5. You can use the cursor buttons ▲▼◀▶ either on keypad or IR remote control for password entry. You can use any combination including the same arrow five times, but not less than five.

Press the cursor buttons in any order to set the password. Push the **MENU** button to exit the dialog box.

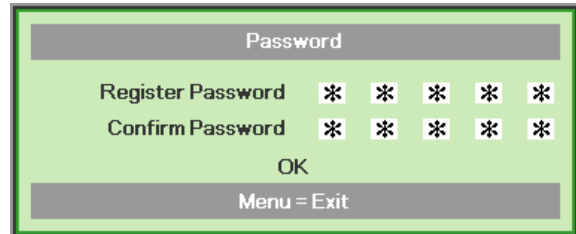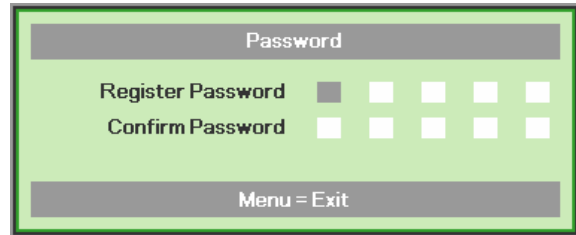


6. The password confirm menu appears when user presses the power-on key in case the **Security Lock** is enabled. Enter the password in the order you set it at step 5. In case you forget the password, please contact the service center. Service center will validate the owner and help reset the password.

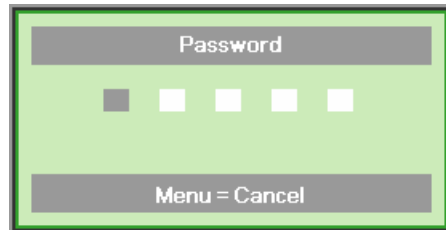

Adjusting the Projector Level

Take note of the following when setting up the projector:


- *The projector table or stand should be level and sturdy.*
- *Position the projector so that it is perpendicular to the screen.*
- *Ensure the cables are in a safe location. You could trip over them.*

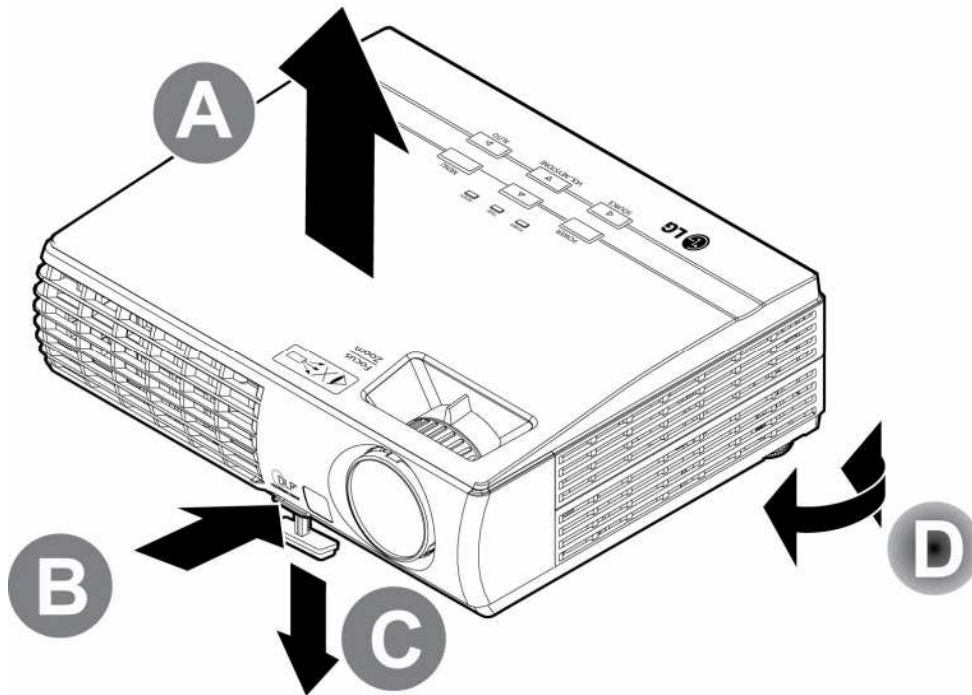

- 1.** To raise the level of the projector, lift the projector [A] and press the height-adjuster button [B].
The height adjuster drops down [C].
- 2.** To lower the level of the projector, press the height-adjuster button and push down on the top of the projector.
- 3.** To adjust the angle of the picture, turn the tilt-adjuster [D] right or left until the desired angle has been achieved.


Adjusting the Zoom, Focus and Keystone

1. Use the **Image-zoom** control (on the projector only) to resize the projected image and screen size **B**.

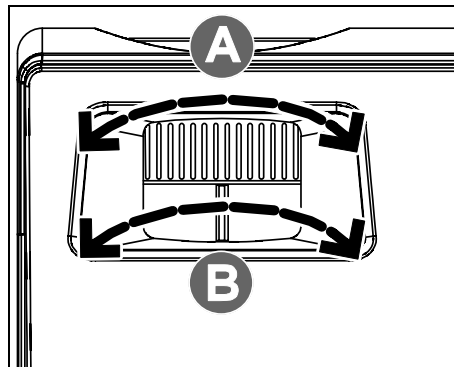

2. Use the **Image-focus** control (on the projector only) to sharpen the projected image **A**.

3. Use the **KEYSTONE** buttons (on the projector or the remote control) to correct image-trapezoid (wider top or bottom) effect.

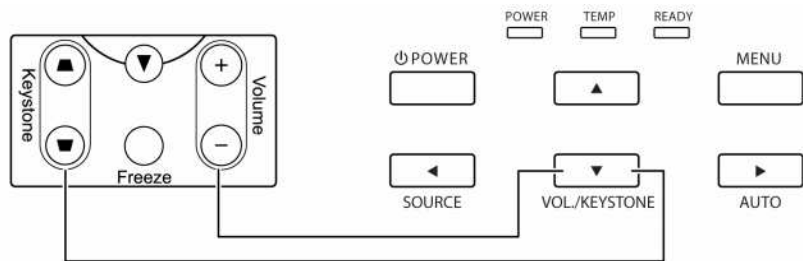


Remote control and OSD panel

4. The keystone control appears on the display.




Adjusting the Volume

1. Press the **Volume +/-** buttons on the remote control.
The volume control appears on the display.

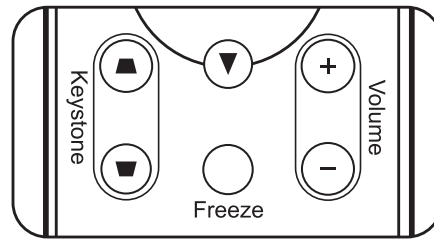

2. Press the **Down Cursor** button on the keypad to adjust **Volume +/-**.

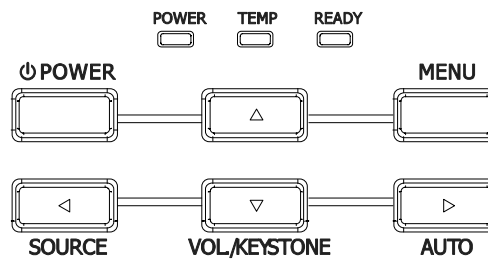

3. Press the **MUTE** button to turn off the volume (This feature is available only on the remote).




ON-SCREEN DISPLAY (OSD) MENU SETTINGS

OSD Menu Controls


The projector has an OSD that lets you make image adjustments and change various settings.

Navigating the OSD

You can use the remote control cursor buttons or the buttons on the top of the projector to navigate and make changes to the OSD. The following illustration shows the corresponding buttons on the remote control and on the projector.

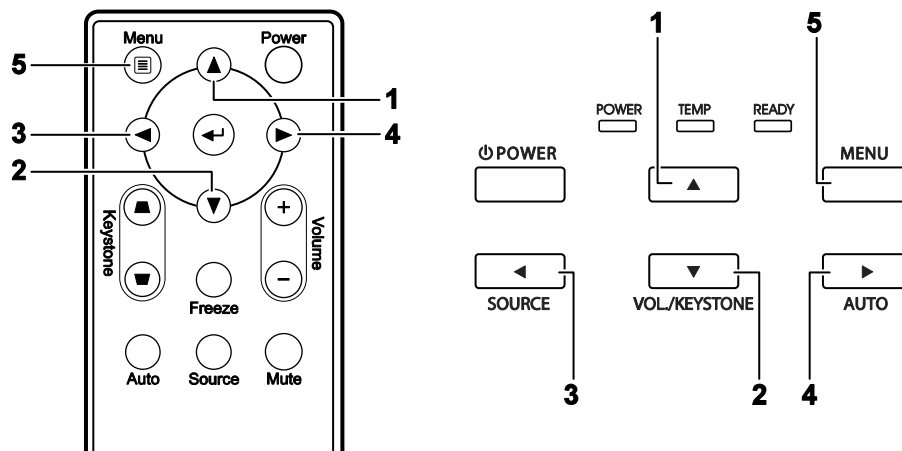

1. To enter the OSD, press the **MENU** button.
2. There are five menus. Press the cursor ◀▶ button to move through the menus.
3. Press the cursor ▲▼ button to move up and down in a menu.
4. Press ◀▶ to change values for settings.
5. Press **MENU** to close the OSD or leave a submenu.

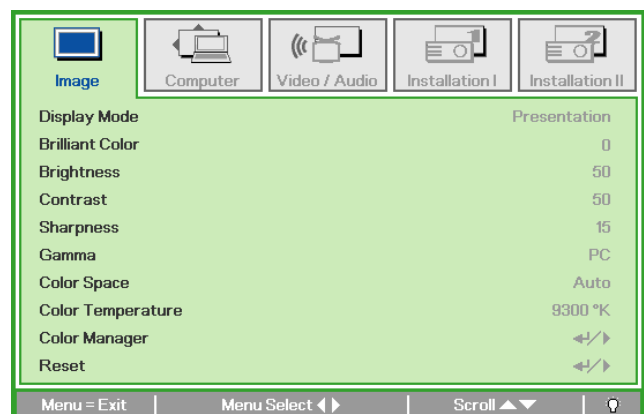


Note:

Depending on the video source, not all items in the OSD are available. For example, the **Horizontal/Vertical Position** items in the Computer menu can only be modified when connected to a PC. Items that are not available cannot be accessed and are grayed out.

Setting the OSD Language

Set the OSD language to your preference before continuing.

1. Press the **MENU** button. Press the cursor ◀▶ button to navigate to Installation I.

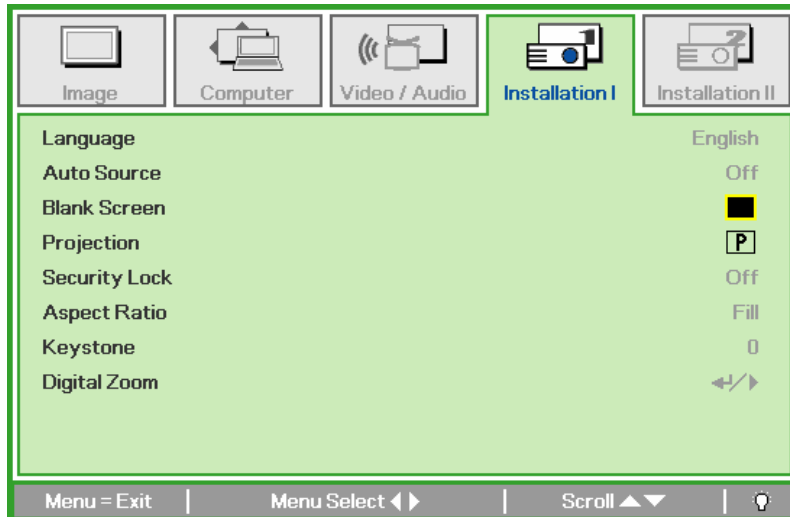


2. Press the cursor ▲▼ button until **Language** is highlighted.



3. Press the cursor ◀▶ button until the language you want is highlighted.
4. Press the **MENU** button twice to close the OSD.

OSD Menu Overview

Use the following illustration to quickly find a setting or determine the range for a setting.

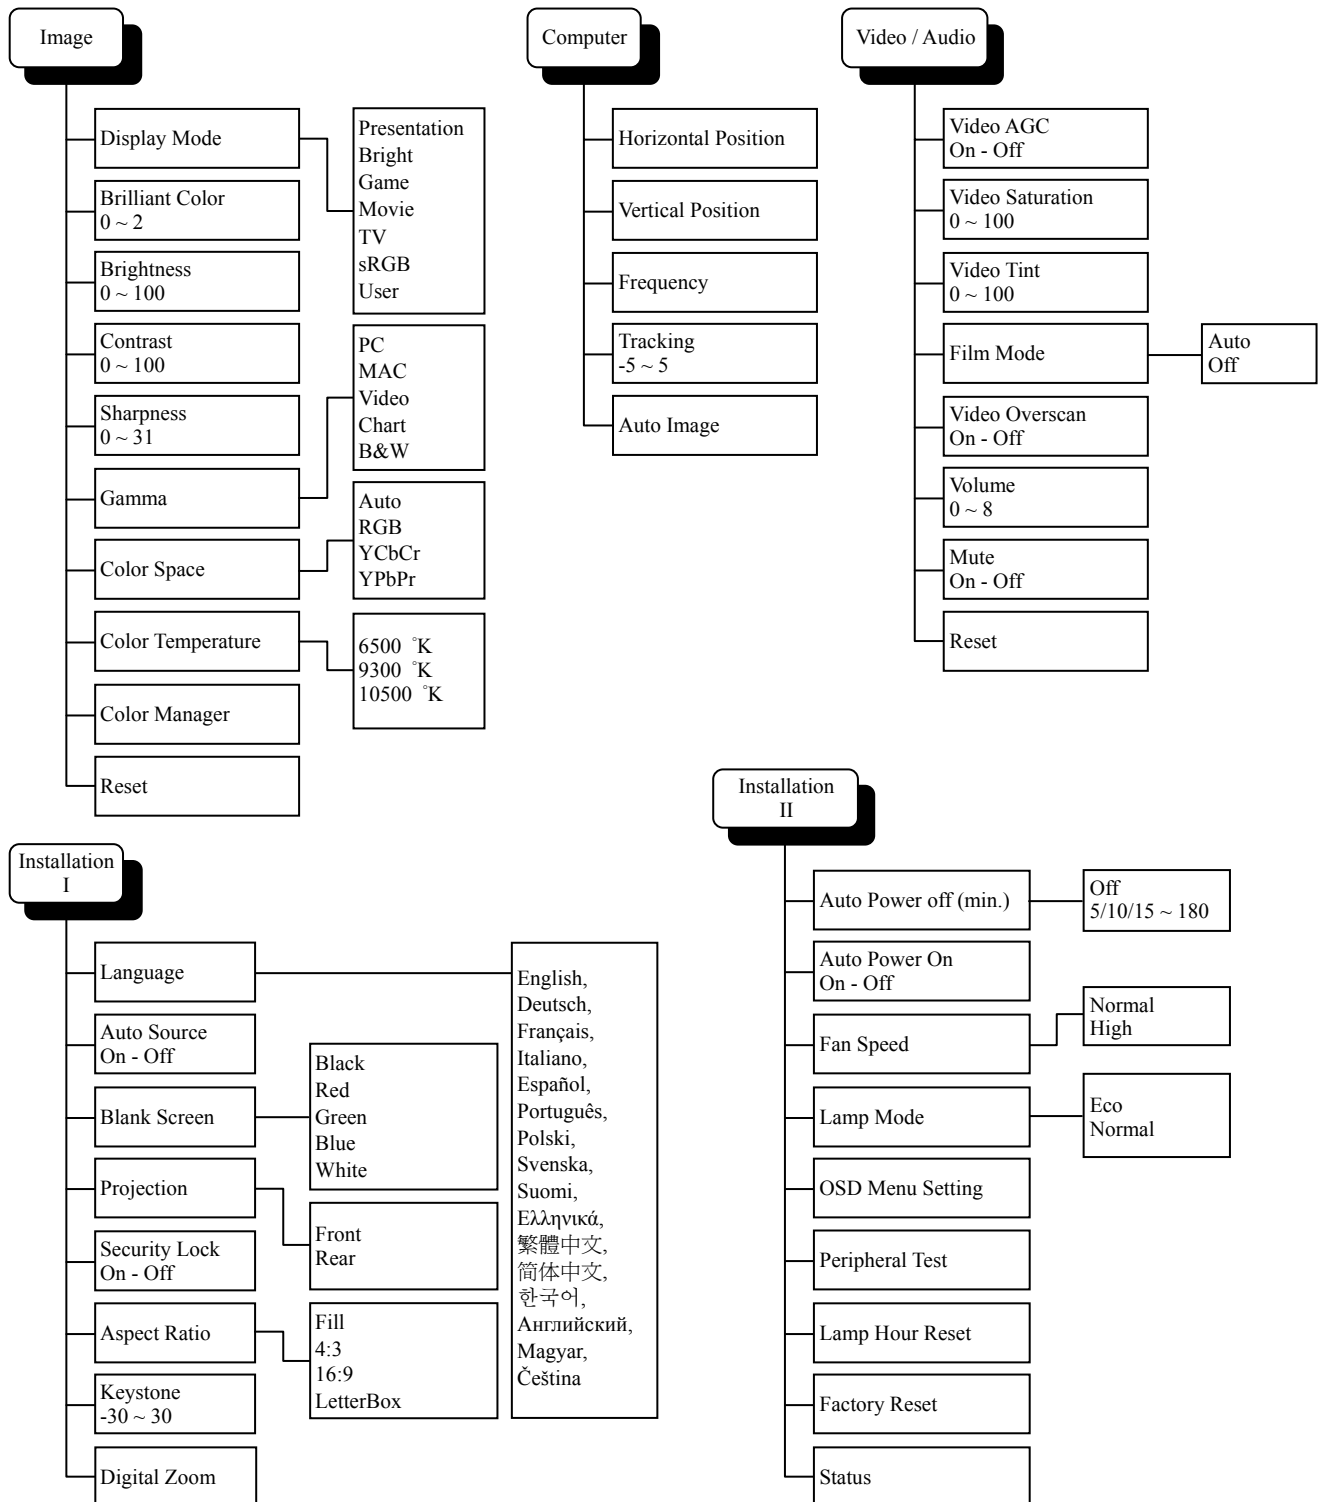

OSD Sub-Menu Overview


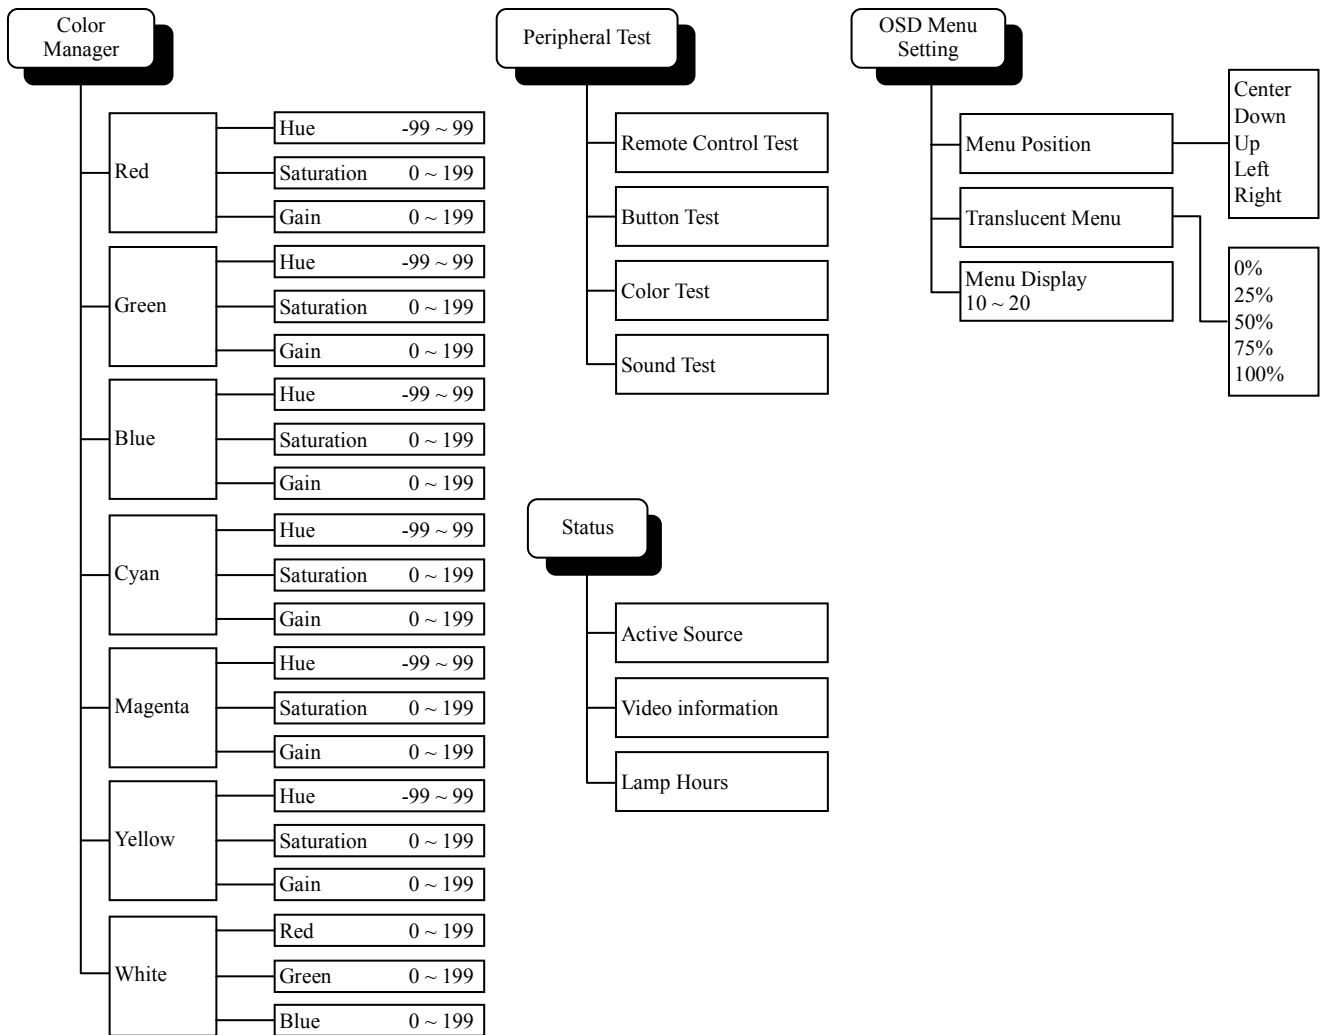


Image Menu


Press the **MENU** button to open the **OSD** menu. Press the cursor **◀▶** button to move to the **Image Menu**. Press the cursor **▲▼** button to move up and down in the **Image** menu. Press **◀▶** to change values for settings.

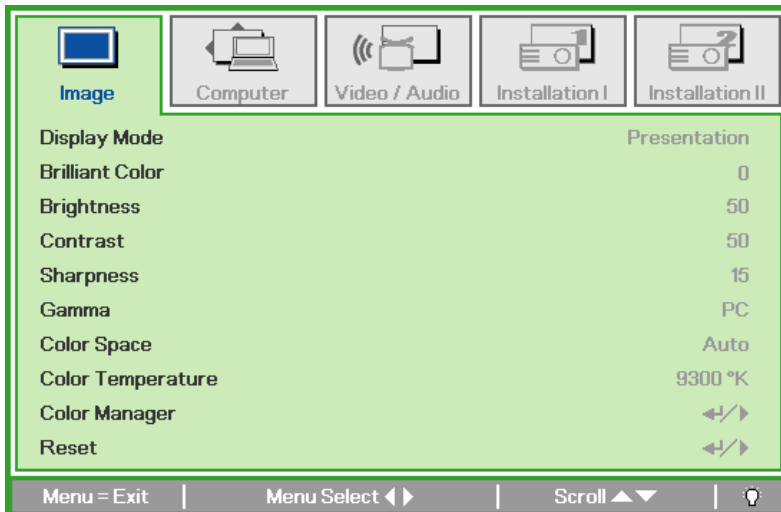

| ITEM | DESCRIPTION |
|-------------------|--|
| Display Mode | Press the cursor ◀▶ button to set the display mode. |
| Brilliant Color | Press the cursor ◀▶ button to adjust the Brilliant Color value. |
| Brightness | Press the cursor ◀▶ button to adjust the display brightness. |
| Contrast | Press the cursor ◀▶ button to adjust the display contrast. |
| Sharpness | Press the cursor ◀▶ button to adjust the display sharpness level. |
| Gamma | Press the cursor ◀▶ button to adjust the gamma correction of the display. |
| Color Space | Press the cursor ◀▶ button to adjust the color space. |
| Color Temperature | Press the cursor ◀▶ button to select different color temperature. |
| Color Manager | Press Enter / ▶ to enter the color manager menu. See Color Manager on page 23 for more information. |
| Reset | Press Enter / ▶ to reset all settings to default values. |

Color Manager


Press ◀ (Enter) / ▶ to enter the color manger sub menu.

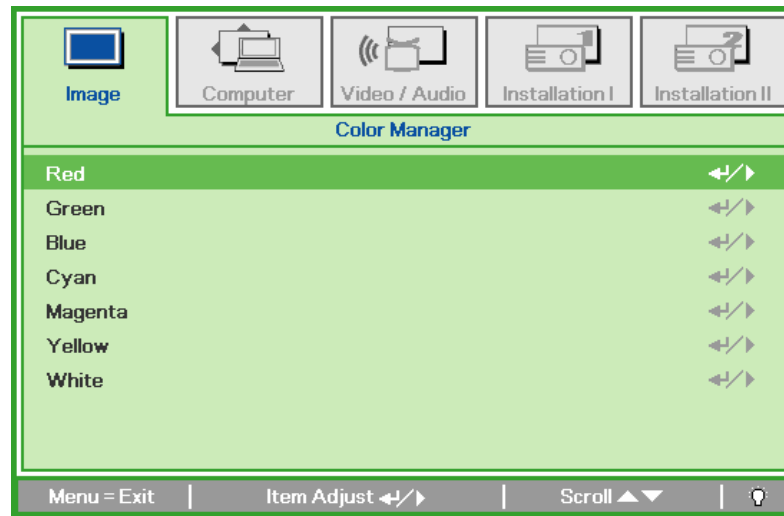

| ITEM | DESCRIPTION |
|---------|---|
| Red | Select to enter the Red Color Manager. Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |
| Green | Select to enter the Green Color Manager. Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |
| Blue | Select to enter the Blue Color Manager. Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |
| Cyan | Select to enter the Cyan Color Manager. Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |
| Magenta | Select to enter the Magenta Color Manager. Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |
| Yellow | Select to enter the Yellow Color Manager. Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |
| White | Select to enter the White Color Manager. Press the ◀▶ buttons to adjust the Hue, Saturation, and Gain. |

Computer Menu


Press the **MENU** button to open the **OSD** menu. Press the cursor **◀▶** button to move to the **Computer** menu. Press the cursor **▲▼** button to move up and down in the computer menu. Press **◀▶** to change values for settings.

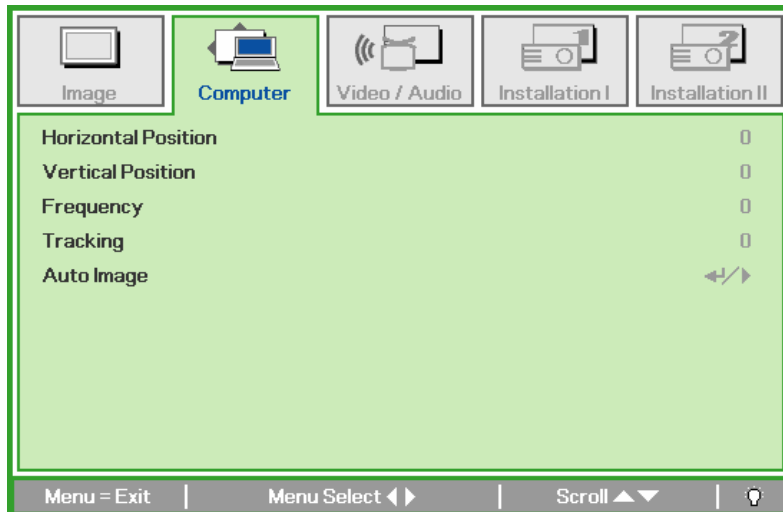

| ITEM | DESCRIPTION |
|---------------------|---|
| Horizontal Position | Press the cursor ◀▶ button to adjust the display position to left or right. |
| Vertical Position | Press the cursor ◀▶ button to adjust the display position to up or down. |
| Frequency | Press the cursor ◀▶ button to adjust the A/D sampling clock. |
| Tracking | Press the cursor ◀▶ button to adjust the A/D sampling dot. |
| Auto Image | Press ↵ (Enter) / ▶ to automatically adjustment for phase, tracking, size and position. |

Video/Audio Menu

Press the **MENU** button to open the **OSD** menu. Press the cursor **◀▶** button to move to the **Video/Audio** menu. Press the cursor **▲▼** button to move up and down in the **Video/Audio** menu. Press **◀▶** to change values for settings.

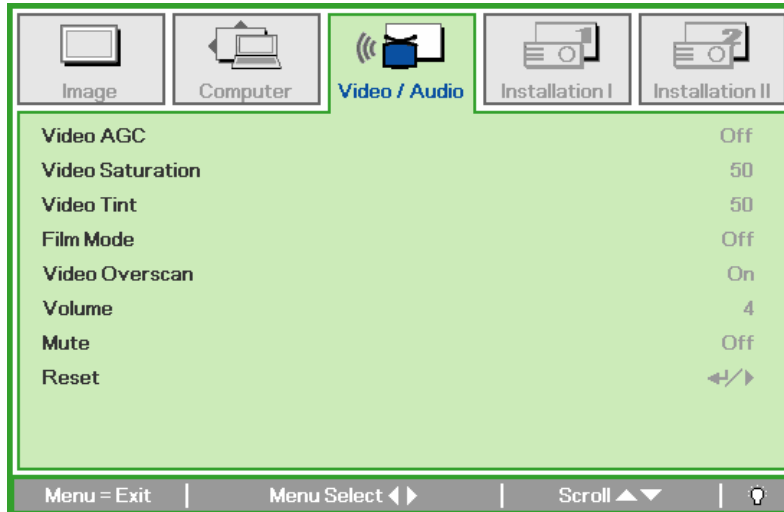


| ITEM | DESCRIPTION |
|------------------|---|
| Video AGC | Press the ◀▶ buttons to enable or disable the Automatic Gain Control for video source. |
| Video Saturation | Press the ◀▶ buttons to adjust the video saturation. |
| Video Tint | Press the ◀▶ buttons to adjust the video tint/hue. |
| Film Mode | Press the ◀▶ buttons to select a different film mode. |
| Video Overscan | Press the ◀▶ buttons to enable or disable video over scan. |
| Volume | Press the ◀▶ buttons to adjust the audio volume level. |
| Mute | Press the ◀▶ buttons to turn On or Off the speaker. |
| Reset | Press Enter / ▶ to reset all settings to default values. |

Note:

Video jaggging may occur when playing interlace video. To overcome this issue, open the Video / Audio menu and adjust the Film Mode feature.

Installation I Menu


Press the **MENU** button to open the **OSD** menu. Press the cursor **◀▶** button to move to the **Installation I** menu. Press the cursor **▲▼** button to move up and down in the **Installation I** menu. Press **◀▶** to change values for settings.

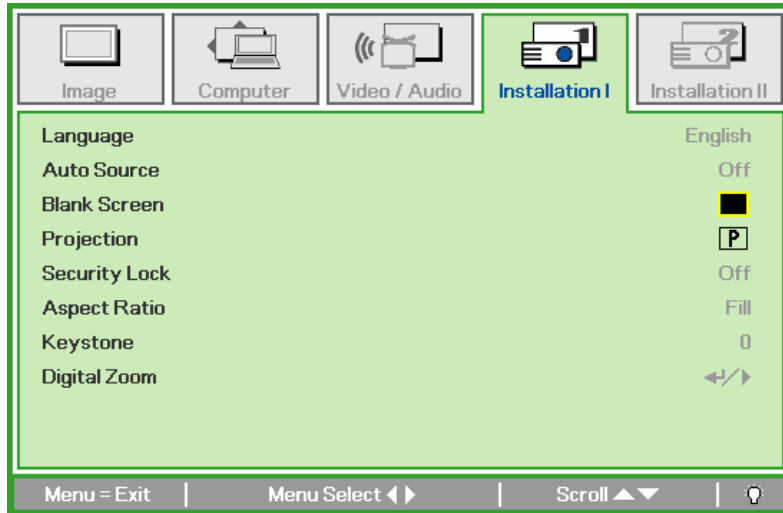

| ITEM | DESCRIPTION |
|---------------|--|
| Language | Press the cursor ◀▶ button to select a different localization Menu. |
| Auto Source | Press the cursor ◀▶ button to enable or disable the automatically searching of all input port to find out the valid source. |
| Blank Screen | Press the cursor ◀▶ button to select different color to blank the screen. |
| Projection | Press the cursor ◀▶ button to choose from two projection methods: |
| Security Lock | Press the cursor ◀▶ button to enable or disable security lock function. |
| Aspect Ratio | Press the cursor ◀▶ button to adjust the video aspect ratio. Note: The Aspect Ratio function is only accessible when the Digital Zoom is not active. |
| Keystone | Press the cursor ◀▶ button to adjust the display keystone. |
| Digital Zoom | Press Enter / ▶ to enter the Digital Zoom menu. Press ▲ to zoom in; press ▼ to zoom out. Use the ◀▶ buttons to employ the Pan function. Note: You must zoom in before the Pan menu is accessible. Note: Digital zoom is disabled in SXGA/SXGA+/UXGA resolutions. |


Installation II Menu

Press the **MENU** button to open the **OSD** menu. Press the cursor ◀▶ button to move to the Installation II menu. Press the cursor ▲▼ button to move up and down in the Installation II menu.

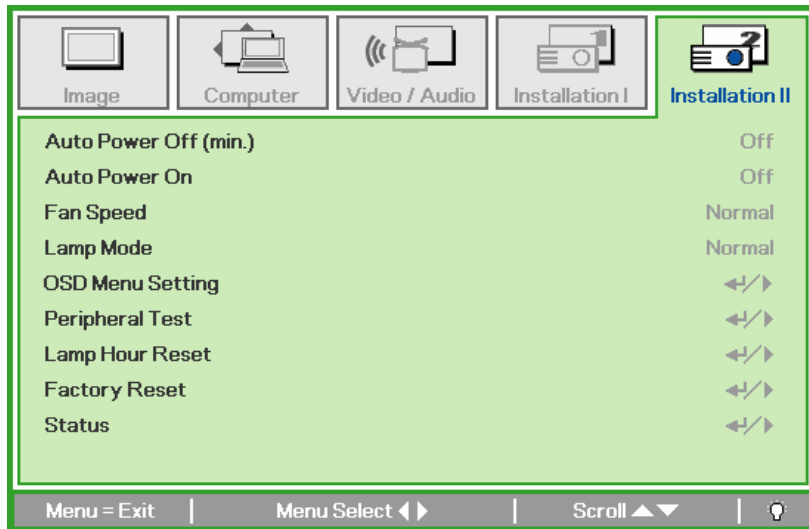


| ITEM | DESCRIPTION |
|-----------------------|---|
| Auto Power Off (min.) | Press the cursor ◀▶ button to enable or disable automatic shutdown of lamp when no signal. |
| Auto Power On | Press the cursor ◀▶ button to enable or disable automatic power On when AC power is supplied. |
| Fan Speed | Press the cursor ◀▶ button to toggle between Normal and High fan speeds. Note: We recommend selecting high speed in high temperatures, high humidity, or high altitude areas. |
| Lamp Mode | Press the cursor ◀▶ button to select the lamp mode for higher brightness or lower brightness to save lamp life. |
| OSD Menu Setting | Press ◀ (Enter) / ▶ to enter the OSD setting menu. See page 18 for more information on OSD setting menu. |
| Peripheral Test | Press ◀ (Enter) / ▶ to enter the Peripheral Test menu. See page 29 for more information on Peripheral Test. |
| Lamp Hour Reset | Press ◀ (Enter) / ▶ to confirm lamp hour reset. Press Menu to cancel. See page 29 for more information on Lamp Hour Reset. |
| Factory Reset | Press ◀ (Enter) / ▶ to reset the entire item to default value. See page 30 for more information on Factory Reset. |
| Status | Press ◀ (Enter) / ▶ to enter the Status menu. See page 30 for more information on Status. |

OSD Menu Setting

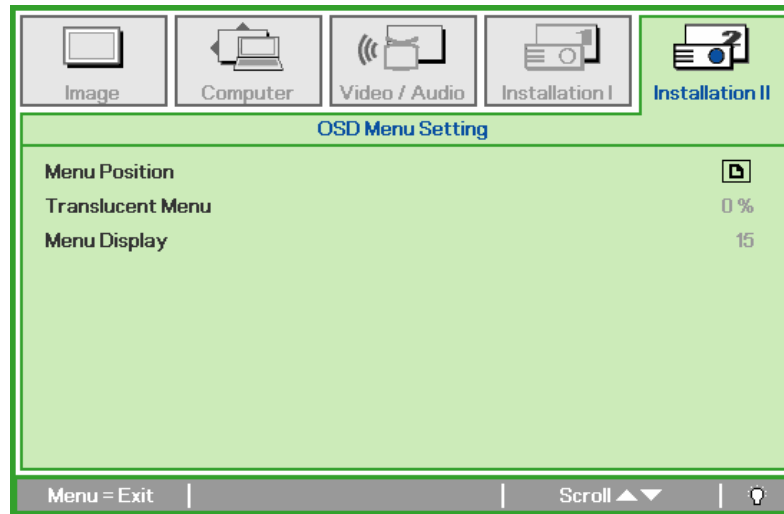


| ITEM | DESCRIPTION |
|------------------|---|
| Menu Position | Press ◀▶ button to select different OSD location. |
| Translucent Menu | Press ◀▶ button to select OSD background translucent level. |
| Menu Display | Press ◀▶ button to select OSD timeout delay. |

Peripheral Test

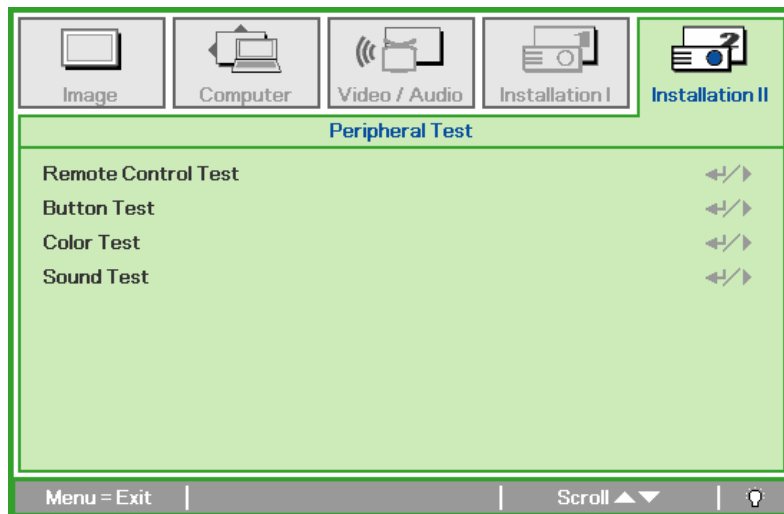

| ITEM | DESCRIPTION |
|---------------------|---|
| Remote Control Test | Press ◀ (Enter) / ▶ to test the IR remote controller for diagnostic. |
| Button Test | Press ◀ (Enter) / ▶ to test the button on keypad. |
| Color Test | Press ◀ (Enter) / ▶ to select different colors on screen. |
| Sound Test | Press ◀ (Enter) / ▶ to test the sound function of the internal speaker. |


Lamp Hour Reset

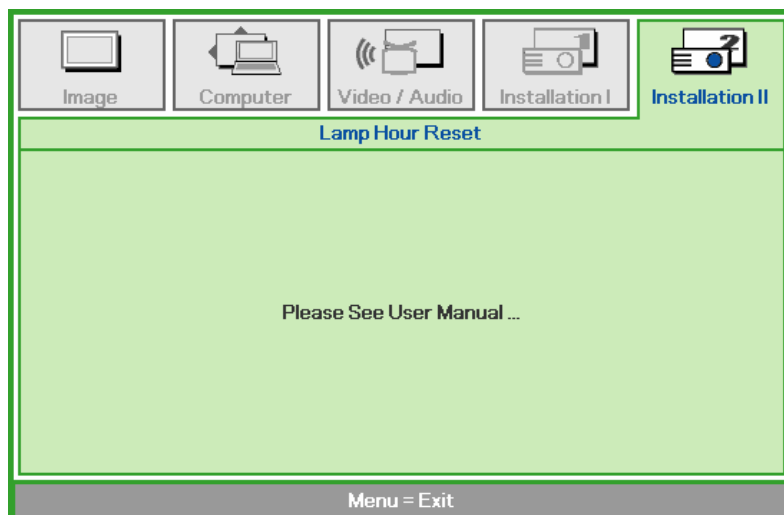

Please refer to Resetting the Lamp on page 33 to reset the lamp hour counter.


Factory Reset

Press the cursor ▲▼ button to move up and down in the **Installation II** menu. Select the **Factory Reset** sub menu and press ← (Enter) / ► to reset all the menu items to the factory default values.

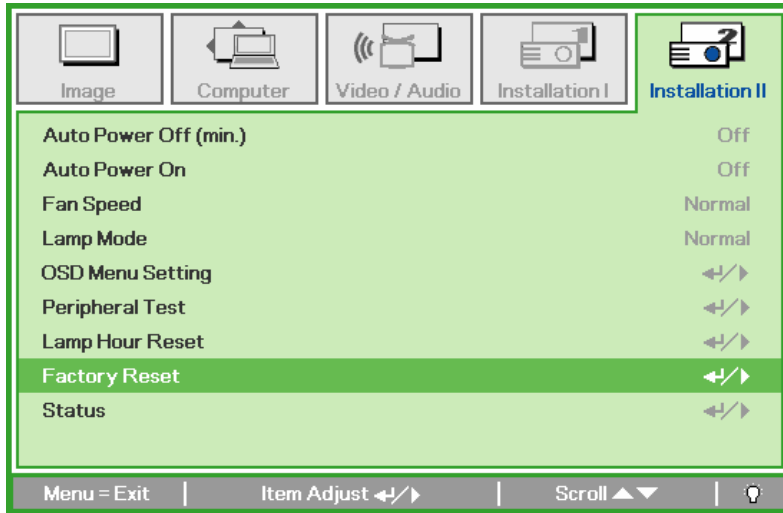

Status

Press the cursor ▲▼ button to move up and down in the **Installation II** menu. Select the **Installation II** sub menu and press ← (Enter) / ► to enter the **Status** sub menu.

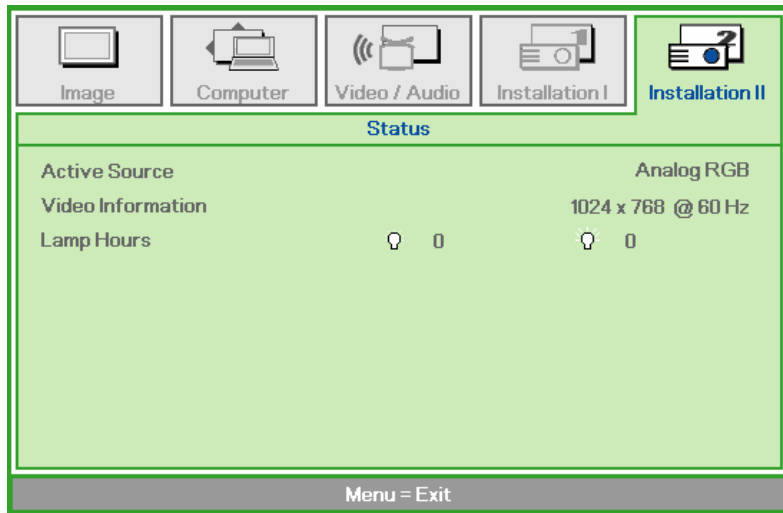

| ITEM | DESCRIPTION |
|-------------------|---|
| Active Source | Display the activated source. |
| Video Information | Displays resolution/video information for RGB source and color standard for Video source. |
| Lamp Hours | Lamp hour used information is displayed. ECO and Normal counter are separated. |

MAINTENANCE AND SECURITY

Replacing the Projection Lamp

The projection lamp should be replaced when it burns out. It should only be replaced with a certified replacement part, which you can order from your local dealer.


Important:

- a. The fluorescent lamp used in this product contains a small amount of mercury
- b. Do not dispose this product with general household waste.
- c. Disposal of this product must be carried out in accordance with the regulations of your local authority.

Warning:


Be sure to turn off and unplug the projector at least 30 minutes before replacing the lamp. Failure to do so could result in a severe burn.

1. Loosen the two captive screws on the lamp compartment cover (A).
2. Remove the lamp compartment cover (B).

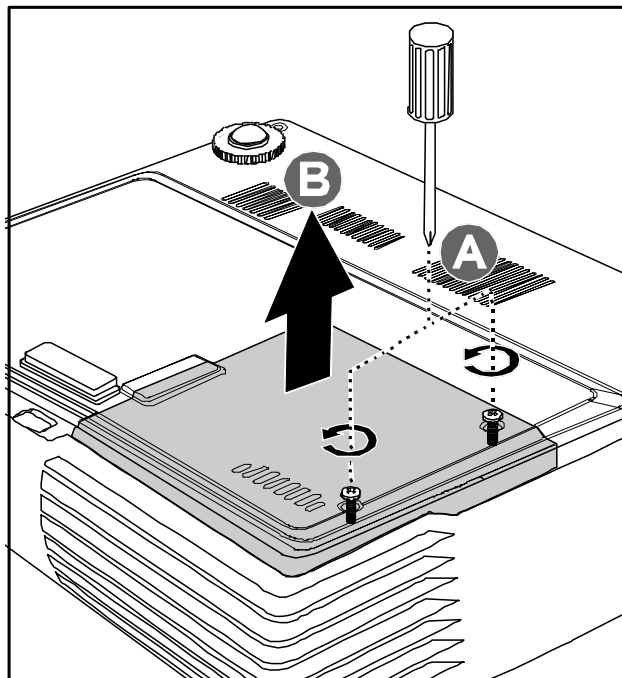


3. Remove the two screws from the lamp module (A).

4. Lift the module handle up (B).

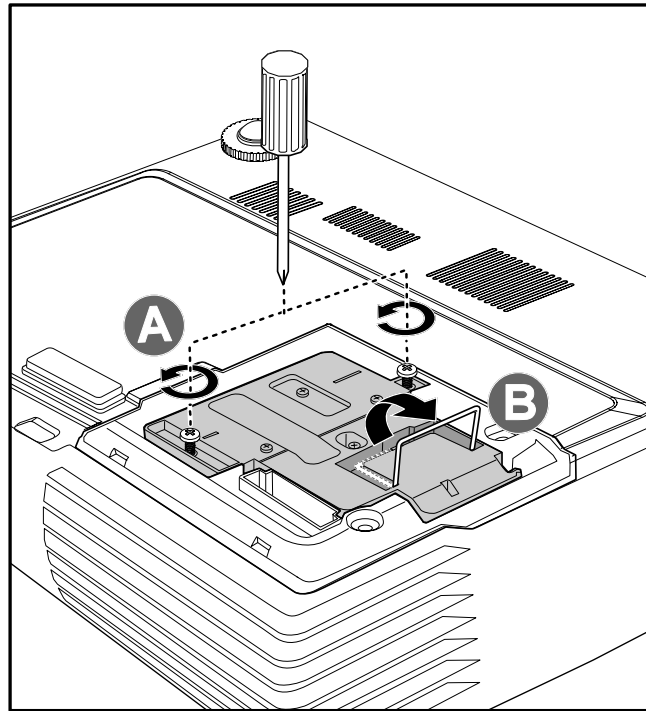


5. Pull firmly on the module handle to remove the lamp module.

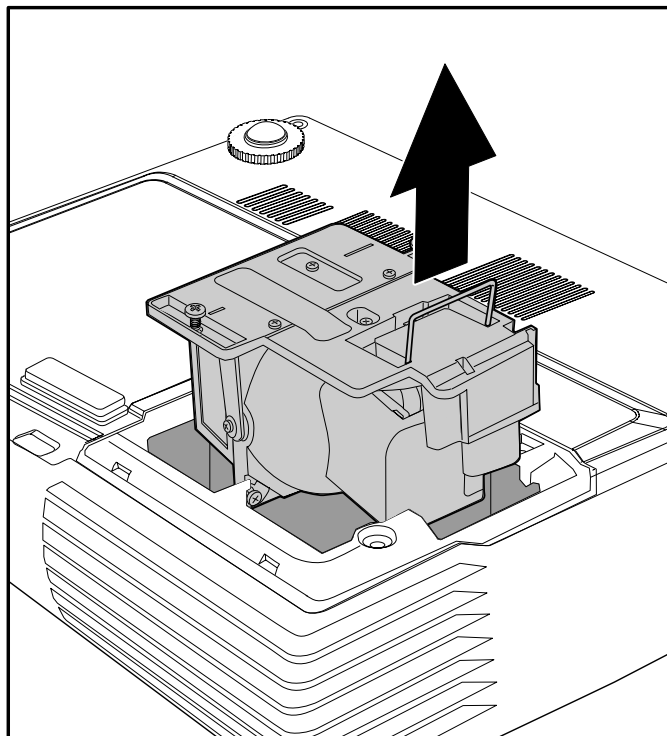

6. Reverse steps 1 to 5 to install the new lamp module. While installing, align the lamp module with the connector and ensure it is level to avoid damage.


Note: The lamp module must sit securely in place and the lamp connector must be connected properly before tightening the screws.

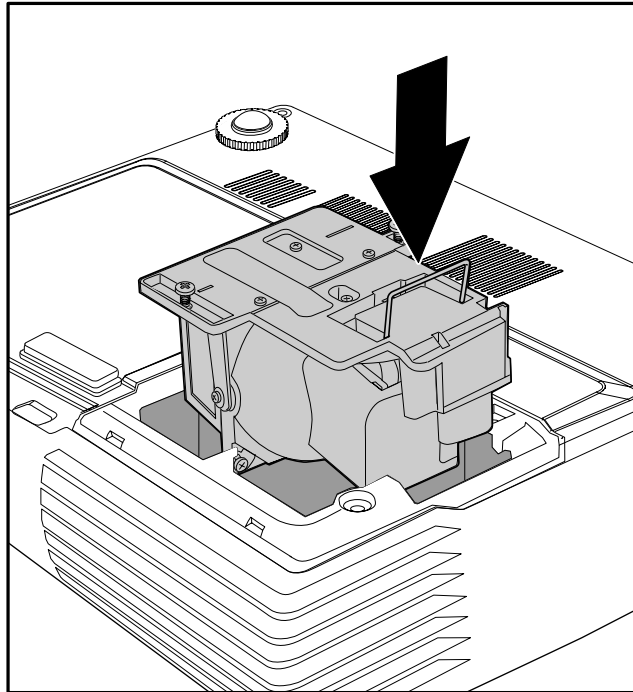

Resetting the Lamp

After replacing the lamp, you should reset the lamp hour counter to zero. Refer to the following:

1. Press the **MENU** button to open the OSD menu.
2. Press the cursor **◀▶** button to move to the **Installation II** menu.
3. Press the cursor **▲▼** button to move down to **Lamp Hour Reset**.

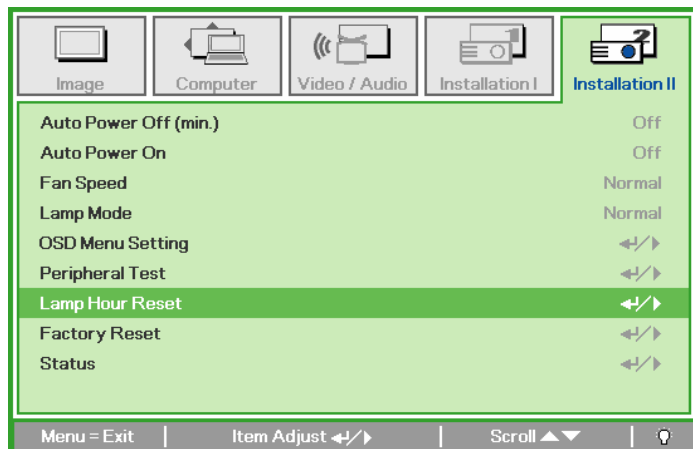


4. Press the cursor **▶** or **◀** button.

A message screen appears.

5. Press **▼▲◀▶** buttons to reset the lamp hour.

6. Press the **MENU** button to get back to **Installation II**.

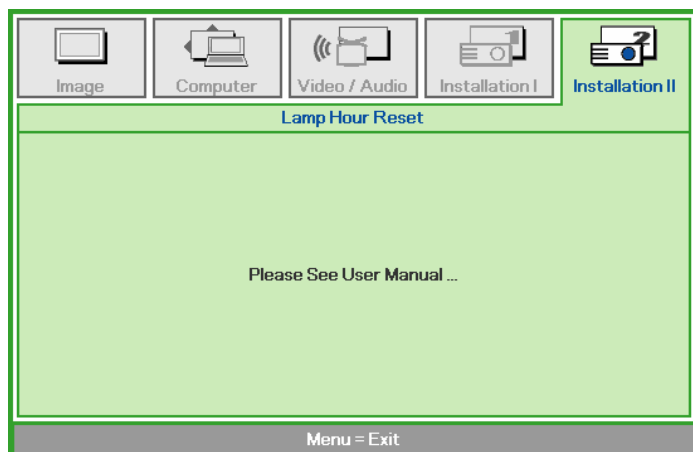

Cleaning the Projector

Cleaning the projector to remove dust and grime will help ensure trouble-free operation.

Warning:

1. Be sure to turn off and unplug the projector at least 30 minutes before cleaning. Failure to do so could result in a severe burn.
2. Use only a dampened cloth when cleaning. Do not allow water to enter the ventilation openings on the projector.
3. If a little water gets into the projector interior while cleaning, leave unplugged in a well-ventilated room for several hours before using.
4. If a lot of water gets into the projector interior when cleaning, have the projector serviced.

Cleaning the Lens

You can purchase optic lens cleaner from most camera stores. Refer to the following to clean the projector lens.

1. Apply a little optic lens cleaner to a clean soft cloth. (Do not apply the cleaner directly to the lens.)
2. Lightly wipe the lens in a circular motion.

Caution:

1. Do not use abrasive cleaners or solvents.
2. To prevent discoloration or fading, avoid getting cleaner on the projector case.

Cleaning the Case

Refer to the following to clean the projector case.


1. Wipe off dust with a clean dampened cloth.
2. Moisten the cloth with warm water and mild detergent (such as used to wash dishes), and then wipe the case.
3. Rinse all detergent from the cloth and wipe the projector again.

Caution:

To prevent discoloration or fading of the case, do not use abrasive alcohol-based cleaners.

Using the Kensington® Lock

If you are concerned about security, attach the projector to a permanent object with the Kensington slot and a security cable.

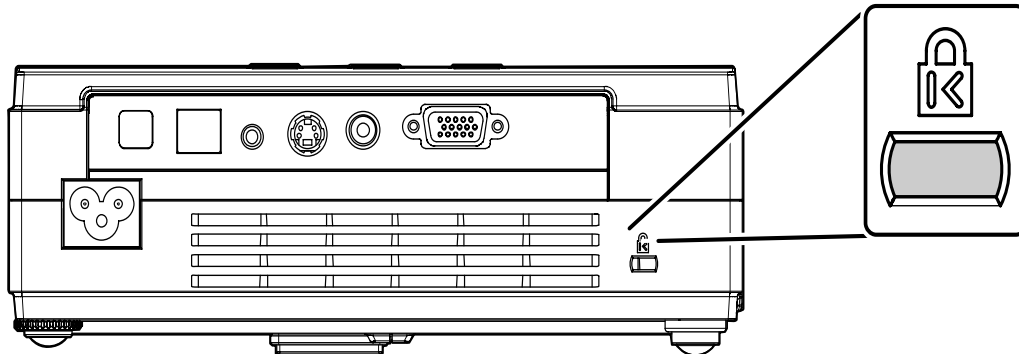

Note:

Contact your vendor for details on purchasing a suitable Kensington security cable.

The security lock corresponds to Kensington's MicroSaver Security System. If you have any comment, contact: Kensington, 2853 Campus Drive, San Mateo, CA 94403, U.S.A. Tel: 800-535-4242, <http://www.Kensington.com>.

Common problems and solutions

These guidelines provide tips to deal with problems you may encounter while using the projector. If the problem remains unsolved, contact your dealer for assistance.

Often after time spent troubleshooting, the problem is traced to something as simple as a loose connection. Check the following before proceeding to the problem-specific solutions.

- *Use some other electrical device to confirm that the electrical outlet is working.*
- *Ensure the projector is turned on.*
- *Ensure all connections are securely attached.*
- *Ensure the attached device is turned on.*
- *Ensure a connected PC is not in suspending mode.*
- *Ensure a connected notebook computer is configured for an external display. (This is usually done by pressing an Fn-key combination on the notebook.)*

Tips for Troubleshooting

In each problem-specific section, try the steps in the order suggested. This may help you to solve the problem more quickly.

Try to pin point the problem and thus avoid replacing non-defective parts. For example, if you replace batteries and the problem remains, put the original batteries back and go to the next step.

Keep a record of the steps you take when troubleshooting: The information may be useful when calling for technical support or for passing on to service personnel.

LED Error Messages

| ERROR CODE MESSAGES | POWER LED BLINK | OVER TEMP LED | READY LED BLINK |
|----------------------------|-----------------|---------------|-----------------|
| Over temperature | 0 | ON | 0 |
| Thermal break status error | 4 | 0 | 0 |
| Lamp error | 5 | 0 | 0 |
| Fan1 error | 6 | 0 | 1 |
| Fan2 error | 6 | 0 | 2 |
| Fan3 error | 6 | 0 | 3 |
| Lamp door open | 7 | 0 | 0 |
| DMD error | 8 | 0 | 0 |
| Color wheel error | 9 | 0 | 0 |

In the event of an error, please disconnect the AC power cord and wait for one (1) minute before re-starting the projector. If the Power or Ready LEDs are still blinking or the Over Temp LED is lit, contact your service center.

Image Problems

Problem: No image appears on the screen

1. Verify the settings on your notebook or desktop PC.
2. Turn off all equipment and power up again in the correct order.

Problem: The image is blurred

1. Adjust the **Focus** on the projector.
2. Press the **Auto** button on the remote control or projector.
3. Ensure the projector-to-screen distance is within the 10-meter (33-feet) specified range.
4. Check that the projector lens is clean.

Problem: The image is wider at the top or bottom (trapezoid effect)

1. Position the projector so it is as perpendicular to the screen as possible.
2. Use the Keystone button on the remote control or projector to correct the problem.

Problem: The image is reversed

Check the **Projection** setting on the **Installation I** menu of the OSD.

Problem: The image is streaked

1. Set the **Frequency** and **Tracking** settings on the **Computer** menu of the OSD to the default settings.
2. To ensure the problem is not caused by a connected PC’s video card, connect to another computer.

Problem: The image is flat with no contrast

Adjust the **Contrast** setting on the **Image** menu of the OSD.

Problem: The color of the projected image does not match the source image.

Adjust the **Color Temperature** and **Gamma** settings on the **Image** menu of the OSD.

Lamp Problems

Problem: There is no light from the projector

1. Check that the power cable is securely connected.
2. Ensure the power source is good by testing with another electrical device.
3. Restart the projector in the correct order and check that the Power LED is green.
4. If you have replaced the lamp recently, try resetting the lamp connections.
5. Replace the lamp module.
6. Put the old lamp back in the projector and have the projector serviced.

Problem: The lamp goes off

1. Power surges can cause the lamp to turn off. Re-plug power cord. When the Ready LED is on, press the power button.
2. Replace the lamp module.
3. Put the old lamp back in the projector and have the projector serviced.

Remote Control Problems

Problem: The projector does not respond to the remote control

1. Direct the remote control towards remote sensor on the projector.
2. Ensure the path between remote and sensor is not obstructed.
3. Turn off any fluorescent lights in the room.
4. Check the battery polarity.
5. Replace the batteries.
6. Turn off other Infrared-enabled devices in the vicinity.
7. Have the remote control serviced.

Audio Problems

Problem: There is no sound

1. Adjust the volume on the remote control.
2. Adjust the volume of the audio source.
3. Check the audio cable connection.
4. Test the source audio output with other speakers.
5. Have the projector serviced.

Problem: The sound is distorted

1. Check the audio cable connection.
2. Test the source audio output with other speakers.
3. Have the projector serviced.

Having the Projector Serviced

If you are unable to solve the problem, you should have the projector serviced. Pack the projector in the original carton. Include a description of the problem and a checklist of the steps you took when trying to fix the problem: The information may be useful to service personnel. For servicing, return the projector to the place you purchased it.


Specifications

| | | |
|-------------------------------------|--|---------------------------------|
| Model | DS325-JD | DX325-JD |
| Display type | TI DMD Type X, 0.55 inches, SVGA | TI DMD Type X, 0.55 inches, XGA |
| Resolution | SVGA 800x600 Native | XGA 1024x768 Native |
| Projection distance | 1.5 meters ~ 10 meters | |
| Projection screen size | 0.86 to 6.6 meters (34 to 260 inches) | |
| Projection lens | Manual focus / Manual zoom | |
| Zoom ratio | 1.15:1 | |
| Vertical keystone correction | +/- 30 degrees | |
| Projection methods | Desktop front/rear | |
| Data compatibility | IBM PC or compatibles (VGA, SVGA, XGA, SXGA, UXGA), Mac | |
| SDTV/EDTV/ HDTV | 480i, 576i, 480p, 576p, 720p, 1080i | |
| Video compatibility | NTSC/NTSC 4.43, PAL (B/G/H/I/M/N 60), SECAM | |
| H-Sync | 15, 31 - 70 KHz | 15, 31 - 90 KHz |
| V-Sync | 50 - 85 Hz | |
| Safety certification | FCC-B, UL, cUL, TUV, CB, CE, GOST SABS, IRAM, MIC, C-TICK, CCC, EK | |
| Operation temperature | 5° ~ 35°C | |
| Dimensions | 220 mm (W) x 71 mm (H) x 178 mm (D) | |
| AC Input | AC Universal 100 ~ 240, Typical @ 110 VAC (100~240)/±10% | |
| Power consumption | Typical 260W (standard mode); Typical 210W (ECO mode) | |
| Stand By | < 5 watts | |
| Lamp | Normal Mode: 200W; Eco Mode: 160W | |
| Audio speaker | 1W / 4 ohm mono speaker | |
| PC | RGB | |
| Video | Composite video (RCA X 1) | |
| | S-Video (Mini-DIN) | |
| Audio | Mini-jack | |
| Security | Kensington lock | |

Input connectors

| | |
|----------|-------------------------|
| PC | VGA |
| | USB (Service only) |
| Video | Composite video (RCAx1) |
| | S-Video (Mini-DIN) |
| Audio | Mini-jack |
| Security | Kensington slot |

Projection Distance V.S. Projection Size

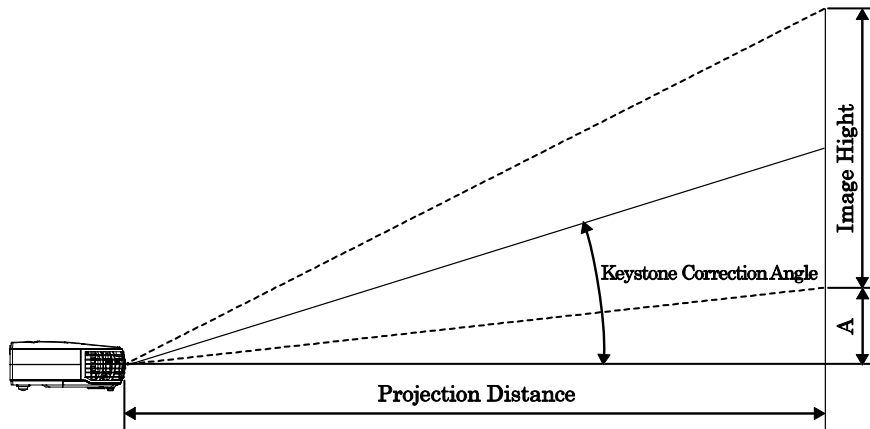

| | Tele | | | | Wide | | | |
|------------------------------------|------|-------|-------|-------|------|-------|-------|-------|
| Distance (m) | 1.34 | 3.58 | 4.47 | 8.94 | 1.54 | 3.09 | 3.86 | 11.58 |
| Diagonal Size (inches) | 30 | 80 | 100 | 200 | 40 | 80 | 100 | 300 |
| Keystone Correction Angle (degree) | 12.3 | 12.3 | 12.3 | 12.3 | 14.2 | 14.2 | 14.2 | 14.2 |
| Image Height (mm) | 457 | 1219 | 1524 | 1864 | 610 | 1219 | 1524 | 4572 |
| Image Width (mm) | 610 | 1626 | 2032 | 3762 | 813 | 1626 | 2032 | 6096 |
| A (mm) | (64) | (171) | (213) | (427) | (85) | (171) | (213) | (640) |

Timing Mode Table

The projector can display several resolutions. The following table outlines the resolutions that can be displayed by the projector.

| Signal | Resolution | H-Sync (KHz) | V-Sync (Hz) | Composite / S-Video | Component | RGB |
|-----------------|-------------|--------------|-------------|---------------------|-----------|-----|
| NTSC | — | 15.734 | 60.0 | ○ | — | — |
| PAL/SECAM | — | 15.625 | 50.0 | ○ | — | — |
| VESA | 640 x 350* | 31.5 | 70.0 | — | — | ○ |
| | 640 x 350* | 37.9 | 85.0 | — | — | ○ |
| | 640 x 400* | 37.9 | 85.0 | — | — | ○ |
| | 640 x 480 | 31.5 | 60.0 | — | — | ○ |
| | 640 x 480 | 37.9 | 72.0 | — | — | ○ |
| | 640 x 480 | 37.5 | 75.0 | — | — | ○ |
| | 640 x 480 | 43.3 | 85.0 | — | — | ○ |
| | 800 x 600 | 35.2 | 56.0 | — | — | ○ |
| | 800 x 600 | 37.9 | 60.0 | — | — | ○ |
| | 800 x 600 | 48.1 | 72.0 | — | — | ○ |
| | 800 x 600 | 46.9 | 75.0 | — | — | ○ |
| | 800 x 600 | 53.7 | 85.0 | — | — | ○ |
| | 1024 x 768 | 48.4 | 60.0 | — | — | ○ |
| | 1024 x 768 | 56.5 | 70.0 | — | — | ○ |
| | 1024 x 768 | 60.0 | 75.0 | — | — | ○ |
| | 1024 x 768 | 68.7 | 85.0 | — | — | ○ |
| | 1440 x 900 | 55.6 | 60.0 | — | — | ○ |
| | 1280 x 1024 | 63.98 | 60.0 | — | — | ○ |
| | 1280 x 1024 | 79.98 | 75.0 | — | — | ○ |
| | 1400 x 1050 | 65.3 | 60.0 | — | — | ○ |
| 1400 x 1050 | 64.7 | 60.0 | — | — | ○ | |
| 1600 x 1200* | 75.0 | 60.0 | — | — | ○ | |
| Apple Macintosh | 640 x 480 | 34.98 | 66.66 | — | — | ○ |
| | 640 x 480 | 35.0 | 66.68 | — | — | ○ |
| | 832 x 624 | 49.725 | 74.55 | — | — | ○ |
| | 1024 x 768 | 60.24 | 75.0 | — | — | ○ |
| | 1152 x 870 | 68.68 | 75.06 | — | — | ○ |

| Signal | Resolution | H-Sync (KHz) | V-Sync (Hz) | Composite / S-Video | Component | RGB |
|--------|------------|--------------|-------------|---------------------|-----------|-----|
| SDTV | 480i | 15.734 | 60 | — | ○ | — |
| | 576i | 15.625 | 50 | — | ○ | — |
| EDTV | 480p | 31.469 | 60 | — | ○ | — |
| | 576p | 31.25 | 50 | — | ○ | — |
| HDTV | 720p | 37.5 | 50 | — | ○ | — |
| | 720p | 45.0 | 60 | — | ○ | — |
| | 1080i | 33.8 | 60 | — | ○ | — |
| | 1080i | 28.1 | 50 | — | ○ | — |



○: Frequency supported

—: Frequency not supported

* : Displayable level

- The resolution of the panel for the DS325 is 800 x 600 and 1024 x 768 for the DX325. Resolution other than native resolution may display with uneven size of text or lines.
- HDTV timing: DVD player (main source), VG828 (secondary source).

Projector Dimensions

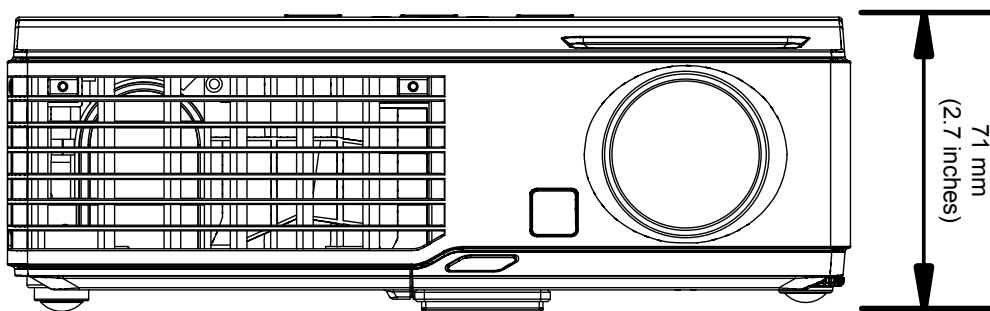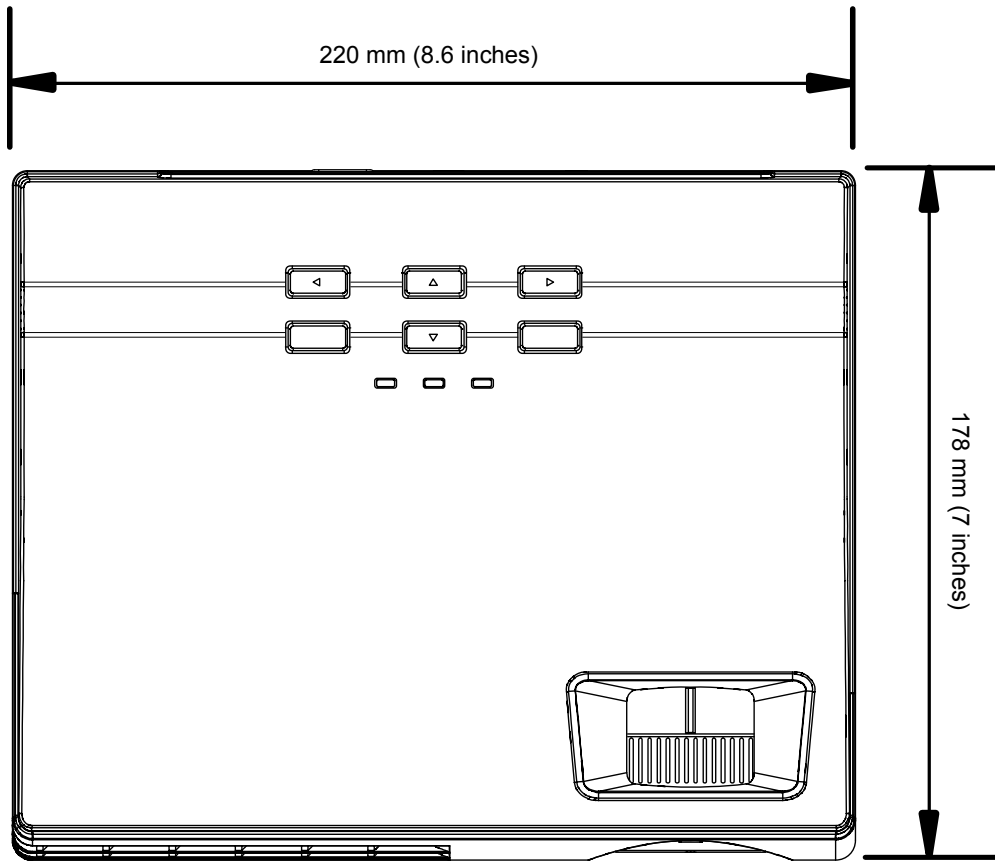

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

Changes or modifications not expressly approved by the parties responsible for compliance could void the user's authority to operate the equipment.

Canada

This class B digital apparatus complies with Canadian ICES-003.

Safety Certifications

FCC-B, UL, cUL, TUV, CB, CE, GOST SABS, IRAM, MIC, C-TICK, CCC, and EK

EN 55022 Warning

This is a Class B product. In a domestic environment, it may cause radio interference, in which case the user may be required to take adequate measures. The typical use is in a conference room, meeting room, or auditorium.

English



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

French



Élimination de votre ancien appareil

1. Ce symbole, représentant une poubelle sur roulettes barrée d'une croix, signifie que le produit est couvert par la directive européenne 2002/96/EC.
2. Les éléments électriques et électroniques doivent être jetés séparément, dans les vide-ordures prévus à cet effet par votre municipalité.
3. Une élimination conforme aux instructions aidera à réduire les conséquences négatives et risques éventuels pour l'environnement et la santé humaine.
4. Pour plus d'information concernant l'élimination de votre ancien appareil, veuillez contacter votre mairie, le service des ordures ménagères ou encore la magasin où vous avez acheté ce produit.

Italian



Smaltimento delle apparecchiature obsolete

1. Quando su un prodotto è riportato il simbolo di un bidone della spazzatura barrato da una croce significa che il prodotto è coperto dalla direttiva europea 2002/96/EC.
2. Tutti i prodotti elettrici ed elettronici dovrebbero essere smaltiti separatamente rispetto alla raccolta differenziata municipale, mediante impianti di raccolta specifici designati dal governo o dalle autorità locali.
3. Il corretto smaltimento delle apparecchiature obsolete contribuisce a prevenire possibili conseguenze negative sulla salute umana e sull'ambiente.
4. Per informazioni più dettagliate sullo smaltimento delle apparecchiature obsolete, contattare il comune, il servizio di smaltimento rifiuti o il negozio in cui è stato acquistato il prodotto.

Swedish



Kassering av din gamla apparat

1. När den här symbolen med en överkryssad soptunna på hjul sitter på en produkt innebär det att den regleras av European Directive 2002/96/EC.
2. Alla elektriska och elektroniska produkter bör kasseras via andra vägar än de som finns för hushållsavfall, helst via för ändamålet avsedda uppsamlingsanläggningar som myndigheterna utser.
3. Om du kasserar din gamla apparat på rätt sätt så bidrar du till att förhindra negativa konsekvenser för miljön och människors hälsa.
4. Mer detaljerad information om kassering av din gamla apparat kan fås av kommunen, renhållningsverket eller den butik där du köpte produkten.

Dutch



Uw oude toestel wegdoen

1. Als het symbool met de doorgekruiste verrijdbare afvalbak op een product staat, betekent dit dat het product valt onder de Europese Richtlijn 2002/96/EC.
2. Elektrische en elektronische producten mogen niet worden meegegeven met het huishoudelijk afval, maar moeten worden ingeleverd bij speciale inzamelingspunten die door de lokale of landelijke overheid zijn aangewezen.
3. De correcte verwijdering van uw oude toestel helpt negatieve gevolgen voor het milieu en de menselijke gezondheid voorkomen.
4. Wilt u meer informatie over de verwijdering van uw oude toestel? Neem dan contact op met uw gemeente, de afvalophaaldienst of de winkel waar u het product hebt gekocht.

Finnish



Vanhoiden laitteiden hävittäminen

1. Tämä merkki tuotteessa tarkoittaa, että tuote kuuluu sähkö- ja elektroniikkalaiteromusta annetun EU-direktiivin 2002/96/EY soveltamisalaan.
2. Kaikki elektroniset laitteet ovat ongelmajätettä, joten ne on toimitettava paikalliseen keräyspisteeseen.
3. Vanhan laitteen asianmukainen hävittäminen ehkäisee mahdollisia ympäristöön ja terveyteen kohdistuvia haittavaikutuksia.
4. Lisätietoa vanhan laitteen hävittämisestä saat ottamalla yhteyden paikallisiin viranomaisiin, kierrätyskeskukseen tai myymälään, josta ostit laitteen.

 
German



Entsorgung von Altgeräten

1. Wenn dieses Symbol eines durchgestrichenen Abfalleimers auf einem Produkt angebracht ist, unterliegt dieses Produkt der europäischen Richtlinie 2002/96/EC.
2. Alle Elektro- und Elektronik-Altgeräte müssen getrennt vom Hausmüll über dafür staatlich vorgesehene Stellen entsorgt werden.
3. Mit der ordnungsgemäßen Entsorgung des alten Geräts vermeiden Sie Umweltschäden und eine Gefährdung der persönlichen Gesundheit.
4. Weitere Informationen zur Entsorgung des alten Geräts erhalten Sie bei der Stadtverwaltung, beim Entsorgungsamt oder in dem Geschäft, wo Sie das Produkt erworben haben.

Danish



Sådan smider du dit gamle apparat ud

1. Når der er et tegn med et kryds over en skraldespand, betyder det, at produktet er omfattet af EU-direktiv 2002/96/EC.
2. Alle elektriske og elektroniske produkter skal smides ud et andet sted end gennem den kommunale affaldsordning ved hjælp af specielle indsamlingsfaciliteter, der er organiseret af staten eller de lokale myndigheder.
3. Korrekt bortskaffelse af dit gamle apparat er med til at forhindre mulige skadevirkninger på miljøet og menneskelig sundhed.
4. Mere detaljerede oplysninger om bortskaffelse af dit gamle apparat kan fås ved at kontakte dit lokale kommunkontor, renovationselskab eller den butik, hvor du købte produktet.

Greek



Απόρριψη της παλιάς σας συσκευής

1. Όταν ένα προϊόν διαθέτει το σύμβολο ενός διαγραμμένου κάλαθου απορριμμάτων, τότε το προϊόν καλύπτεται από την Ευρωπαϊκή Οδηγία 2002/96/ΕΟΚ.
2. Η απόρριψη όλων των ηλεκτρικών και ηλεκτρονικών προϊόντων πρέπει να γίνεται χωριστά από τα γενικά οικιακά απορρίμματα μέσω καθορισμένων εγκαταστάσεων συλλογής απορριμμάτων, οι οποίες έχουν δημιουργηθεί είτε από την κυβέρνηση ή από τις τοπικές αρχές.
3. Η σωστή απόρριψη της παλιάς σας συσκευής θα βοηθήσει στην αποτροπή πιθανών αρνητικών συνεπειών ως προς το περιβάλλον και την υγεία του ανθρώπου.
4. Για πιο λεπτομερείς πληροφορίες σχετικά με την απόρριψη της παλιάς σας συσκευής, επικοινωνήστε με το αρμόδιο τοπικό γραφείο, υπηρεσία διάθεσης οικιακών απορριμμάτων ή το μαγαζί από το οποίο αγοράσατε το προϊόν.

Spanish



Cómo deshacerse de aparatos eléctricos y electrónicos viejos

1. Si en un producto aparece el símbolo de un contenedor de basura tachado, significa que éste se acoge a la Directiva 2002/96/CE.
2. Todos los aparatos eléctricos o electrónicos se deben desechar de forma distinta del servicio municipal de recogida de basura, a través de puntos de recogida designados por el gobierno o las autoridades locales.
3. La correcta recogida y tratamiento de los dispositivos inservibles contribuye a evitar riesgos potenciales para el medio ambiente y la salud pública.
4. Para obtener más información sobre cómo deshacerse de sus aparatos eléctricos y electrónicos viejos, póngase en contacto con su ayuntamiento, el servicio de recogida de basuras o el establecimiento donde adquirió el producto.

Portuguese



Eliminação do seu antigo aparelho

1. Quando este símbolo de latão cruzado estiver afixado a um produto, significa que o produto é abrangido pela Directiva Europeia 2002/96/EC.
2. Todos os produtos eléctricos e electrónicos devem ser eliminados separadamente do lixo doméstico através de pontos de recolha designados, facilitados pelo governo ou autoridades locais.
3. A eliminação correcta do seu aparelho antigo ajuda a evitar potenciais consequências negativas para o ambiente e para a saúde humana.
4. Para obter informações mais detalhadas acerca da eliminação do seu aparelho antigo, contacte as autoridades locais, um serviço de eliminação de resíduos ou a loja onde comprou o produto.

Slovak



Likvidácia váš ho starého prístroja

1. Keď sa na produkte nachádza tento symbol prečiarknutej smetnej nádoby s kolieskami, znamená to, že daný produkt vyhovuje európskej Smernici č. 2002/96/EC.
2. Všetky elektrické a elektronické produkty by mali byť zlikvidované oddelene od komunálneho odpadu prostredníctvom na to určených zberných zariadení, ktoré boli ustanovené vládou alebo orgánmi miestnej správy.
3. Správnu likvidáciu starých zariadení pomôžete predchádzať potenciálnym negatívnym následkom pre prostredie a ľudské zdravie.
4. Podrobnejšie informácie o likvidácii starých zariadení nájdete na miestnom úrade, v službe na likvidáciu odpadu alebo u predajcu, kde ste tento produkt zakúpili.

Czech



Likvidace starých spotřebičů

1. Pokud je u výrobku uveden symbol pojízdného kontejneru v přeškrtnutém poli, znamená to, že na výrobek se vztahuje směrnice Evropské unie číslo 2002/96/EC.
2. Všechny elektrické a elektronické výrobky by měly být likvidovány odděleně od běžného komunálního odpadu prostřednictvím sběrných zařízení zřízených za tímto účelem vládou nebo místní samosprávou.
3. Správný způsob likvidace starého elektrického spotřebiče pomáhá zamezit možným negativním dopadům na životní prostředí a zdraví.
4. Bližší informace o likvidaci starého spotřebiče získáte u místní samosprávy, ve sběrném zařízení nebo v obchodě, ve kterém jste výrobek zakoupili.

Croatian



Uklanjanje starog aparata

1. Ako se na proizvodu nalazi simbol prekrizene kante za smeće, to znači da je proizvod pokriven europskom direktivom 2002/96/EC.
2. Električni i elektronski proizvodi ne smiju se odlagati zajedno s komunalnim otpadom, već u posebna odlagališta koja je odredila vlada ili lokalne vlasti.
3. Pravilno odlaganje starog proizvoda sprečiče potencijalne negativne posljedice po okoliš i zdravlje ljudi.
4. Podrobnije informacije o odlaganju starog proizvoda potražite u gradskom uredu, službi za odlaganje otpada ili u trgovini u kojoj ste kupili proizvod.

Hungarian



Régi eszközök ártalmatlanítása

1. A termékhez csatolt áthúzott, keresztes szeméttároló jel jelöli, hogy a termék a 2002/96/EC EU-direktíva hatálya alá esik.
2. Minden elektromos és elektronikai terméket a lakossági hulladéktól elkülönítve kell begyűjteni, a kormány vagy az önkormányzatok által kijelölt begyűjtő eszközök használatával.
3. Régi eszközeinek megfelelő ártalmatlanítása segíthet megelőzni az esetleges egészségre vagy környezetre ártalmas hatásokat.
4. Ha több információra van szüksége régi eszközeinek ártalmatlanításával kapcsolatban, tanulmányozza a vonatkozó környezetvédelmi szabályokat, vagy lépjen kapcsolatba az üzlettel, ahol a terméket vásárolta.

Polish



Utylizacja starych urządzeń

1. Kiedy do produktu dołączony jest niniejszy przekreślony symbol kołowego pojemnika na śmieci, oznacza to, że produkt jest objęty dyrektywą 2002/96/EC.
2. Wszystkie elektryczne i elektroniczne produkty powinny być utylizowane niezależnie od odpadów miejskich, z wykorzystaniem przeznaczonych do tego miejsc składowania wskazanych przez rząd lub miejscowe władze.
3. Właściwy sposób utylizacji starego urządzenia pomoże zapobiec potencjalnie negatywnemu wpływowi na zdrowie i środowisko.
4. Aby uzyskać więcej informacji o sposobach utylizacji starych urządzeń, należy skontaktować się z władzami lokalnymi, przedsiębiorstwem zajmującym się utylizacją odpadów lub sklepem, w którym produkt został kupiony.