

# Dell Professional Projector S518WL

## User's Guide



# Notes, Cautions, and Warnings



**NOTE:** A NOTE indicates important information that helps you make better use of your projector



**CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



**WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

---

**Information in this document is subject to change without notice.  
© 2017 Dell Inc. All rights reserved.**

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Inc.; DLP and DLP logo are trademarks of TEXAS INSTRUMENTS INCORPORATED; Microsoft and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model: Dell Professional Projector S518WL

**August 2017 Rev. A00**

# Contents

<b>1</b>	<b>About Your Dell Projector</b> . . . . .	<b>4</b>
	Projector Box Contents . . . . .	4
	Projector Top and Bottom View . . . . .	5
	Projector Connections . . . . .	6
	Remote Control . . . . .	9
<b>2</b>	<b>Adjusting Projector Image</b> . . . . .	<b>12</b>
	Adjusting Projected Zoom . . . . .	12
	Adjusting Projector Position . . . . .	13
	Adjusting Image Corners . . . . .	15
	Adjusting Image Size . . . . .	16
<b>3</b>	<b>Using Your Projector</b> . . . . .	<b>18</b>
	Using Network Display . . . . .	18
	Using PC-Free Presentation . . . . .	31
<b>4</b>	<b>Troubleshooting</b> . . . . .	<b>38</b>
	Troubleshooting Tips . . . . .	38
	Guiding Signals . . . . .	41
<b>5</b>	<b>Maintenance</b> . . . . .	<b>42</b>
	Replacing the Remote Control Battery . . . . .	42
<b>6</b>	<b>Specifications</b> . . . . .	<b>43</b>
	Compatibility Mode (Digital) . . . . .	46
<b>7</b>	<b>Additional Information</b> . . . . .	<b>48</b>
<b>8</b>	<b>Contacting Dell</b> . . . . .	<b>49</b>

# 1

## About Your Dell Projector

---

Your projector comes with all the items shown below. Ensure that you have all the items, and contact Dell if anything is missing.

 
### Projector Box Contents

---


#### Package Contents

---


Power cable




VGA cable (VGA to VGA)

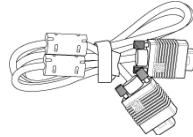

Remote control (CR2032 x 2pcs)

 


User's Guide and Documentation

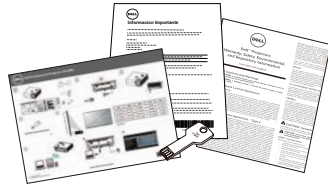


## Projector Top and Bottom View

Top View

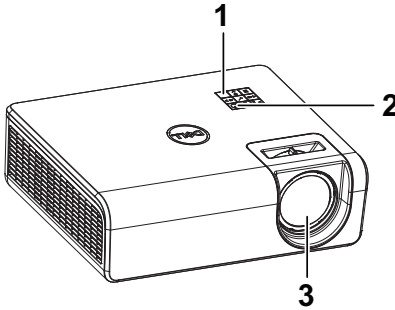

Bottom View

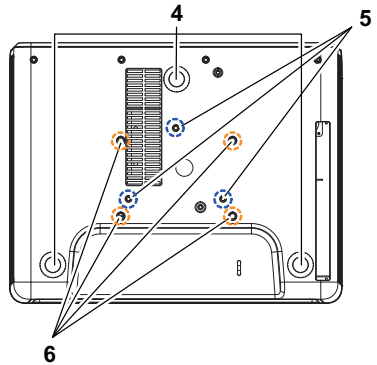


- |   |                                  |
|---|----------------------------------|
| 1 | IR receivers                     |
| 2 | Power button                     |
| 3 | Lens                             |
| 4 | Tilt adjustment wheel            |
| 5 | Mounting holes for wall mount    |
| 6 | Mounting holes for ceiling mount |



**NOTE:** Wall mount screw hole M4 x 8 mm depth.  
Ceiling mount screw hole M3 x 8 mm depth.

# Projector Connections

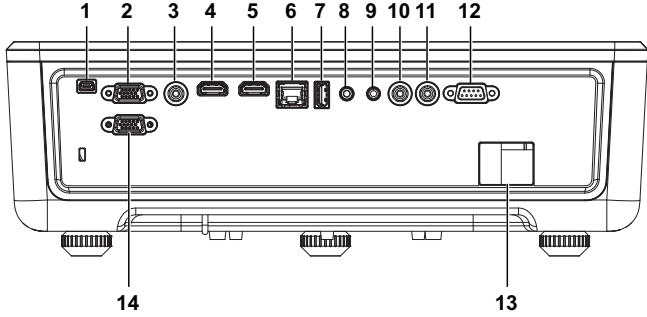

1	Mini USB (mini type B) connector for firmware upgrade	8	Audio input connector for firmware upgrade
2	VGA input	9	Audio output connector
3	Composite Video connector	10	Audio RCA (R) connector
4	HDMI-1 (1.4) connector	11	Audio RCA (L) connector
5	HDMI-2 (1.4) connector	12	RS232 connector
6	RJ45 connector	13	Power cord connector
7	USB Type A Power (+5V/ 1.8A) connector	14	VGA output connector

**CAUTION:** Before you begin any of the procedures in this section, follow the Safety Instructions as described on page 7.

 **CAUTION: Safety Instructions**

- 1 Do not use the projector near appliances that generate a lot of heat.
- 2 Do not use the projector in areas where there is an excessive amount of dust. The dust may cause the system to fail and the projector will automatically shutdown.
- 3 Ensure that the projector is mounted in a well-ventilated area.
- 4 Do not block the ventilation slots and openings on the projector.
- 5 Ensure the projector operates between ambient temperatures 5°C to 40°C (41°F to 104°F).
- 6 Do not try to touch the ventilation outlet as it can become very hot after the projector has been turned on or immediately after it is turned off.
- 7 Do not look into the lens while the projector is on as it may cause injury to your eyes.
- 8 Do not place any objects near or in front of the projector or cover its lens while the projector is on as the heat may cause the object to melt or burn.
- 9 Do not use alcohol to wipe the lens.



**NOTE:**

- Do not attempt to ceiling mount the projector by yourself. It should be installed by a qualified technician.
- Recommended Projector Wall Mount Kit. For more information, see the Dell Support website at **dell.com/support**.
- For more information, see the Safety Information that shipped with your projector.
- The S518WL projector can only be used indoors.



## **WARNING: Laser Safety Notice**


This product is classified as CLASS 1 LASER PRODUCT - RISK GROUP 1 according to IEC 60825-1 : 2014. Complies with FDA regulations 21 CFR 1040.10 and 1040.11 as a Risk Group 1 , LIP (Laser Illuminated Projector) as defined in IEC 62471:2006 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.







	Complies with 21 CFR 1040.10 and 1040.11 as a Risk Group 1 , LIP (Laser Illuminated Projector ) as defined in IEC 62471:2006 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007			
IEC 60825-1:2014 CLASS 1 LASER PRODUCT RISK GROUP 1	IEC 60825-1:2014 PRODUIT LASER DE CLASSE 1 GROUPE DE RISQUE 1	IEC 60825-1:2014 1类激光产品 危险组1	IEC 60825-1:2014 1등급 레이저 제품 위험 그룹 1	IEC 60825-1:2014 クラス1レーザー製品 リスクグループ 1

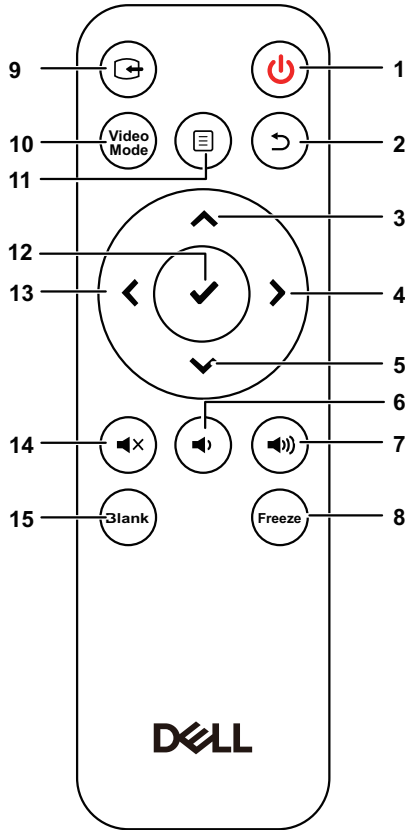





- Failure to comply with the following could result in death or serious injury.
- This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the projector.
- Any operation or adjustment not specifically instructed in the User manual creates the risk of hazardous laser radiation exposure.
- Do not open or disassemble the projector as this may cause damage or exposure to laser radiation.
- Do not stare into beam when the projector is on. The bright light may result in permanent eye damage.
- When turning on the projector, make sure no one within projection range is looking into the lens.
- Follow the control, adjustment, or operation procedures to avoid damage or injury from exposure of laser radiation.
- The instructions for the assembly, operation, and maintenance include clear warnings concerning precautions to avoid possible exposure to hazardous laser radiation.



## Remote Control




1	Power 	Turns the projector on or off.
2	Back 	Returns to the previous screen.
3	Up 	Press to navigate through the On-Screen Display (OSD) Menu items.
4	Right 	Press to navigate through the On-Screen Display (OSD) Menu items.
5	Down 	Press to navigate through the On-Screen Display (OSD) Menu items.
6	Volume down 	Press to decrease the volume.

7	Volume up 	Press to increase the volume.
8	Freeze	Press to pause the screen image, then press "Freeze" again to resume normal projection.
9	Video in	Press to switch between sources: HDMI 1, HDMI 2, HDMI 3, Wireless/LAN Display, and USB Viewer.
10	Video mode	<p>The projector has preset configurations that are optimized for displaying data (presentation slides) or video (movies, games, etc.).</p> <p>Press the <b>Video Mode</b> button to toggle between <b>Presentation mode</b>, <b>Bright mode</b>, <b>Movie mode</b>, <b>sRGB</b>, or <b>Custom mode</b>.</p> <p>Pressing the <b>Video Mode</b> button once will show the current display mode. Pressing the <b>Video Mode</b> button again will switch between modes.</p>
11	Menu 	Press to activate the OSD.
12	Enter 	Press to confirm the selection.
13	Left 	Press to navigate through the On-Screen Display (OSD) Menu items.
14	Mute 	Press to mute or un-mute the projector speaker.
15	Blank 	Press to toggle between white/blank/resume the image.

## Remote Control Operating Range

Operating range	
Angle	$\pm 30^\circ$
Distance	7 m/22.97 feet

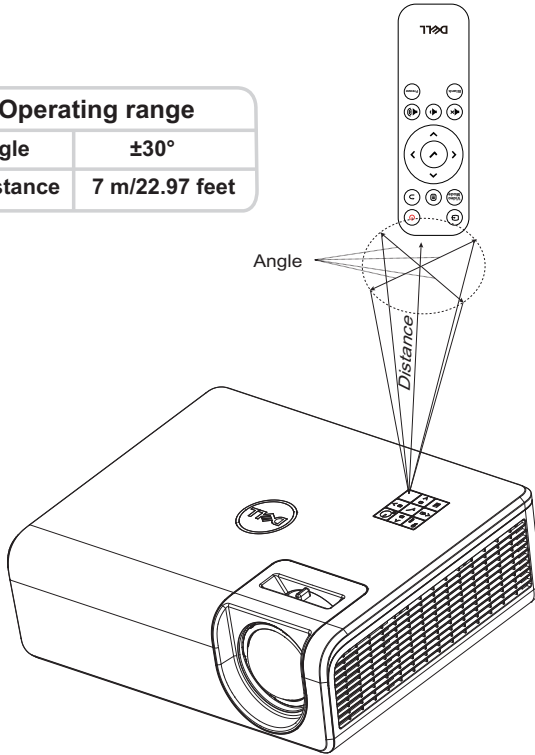

**NOTE:** Actual operating range may slightly differ from the diagram. Weak batteries will also prevent the remote control from properly operating the projector.

# 2

## Adjusting Projector Image


### Adjusting Projected Zoom

#### Raising the Projector Height

1 Raise the projector to the desired display angle, and use the rear tilt adjustment wheel to fine-tune the display angle.

#### Lowering the Projector Height

1 Lower the projector, and use the front tilt adjustment wheel to fine-tune the display angle.

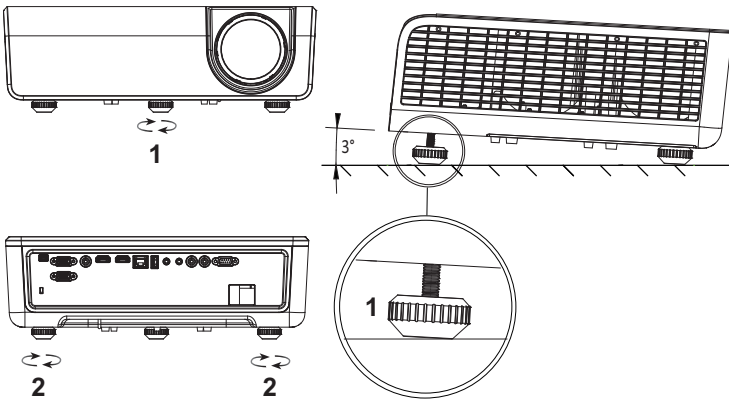


- 
- |   |  |
|---|--|
| 1 | Front tilt adjustment wheel<br>(Angle of tilt: 0 to 3 degrees) |
| 2 | Rear tilt adjustment wheel                                     |
-

## Adjusting Projector Position


When you select a position for the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Follow these general guidelines:

- When positioning the projector to the screen, it must be at least 31 inches (78.4 cm) from the projection screen.
- Position the projector to the required distance from the screen. The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image.
- Lens throw ratio: 0.52


You can set up or install the S518WL in the following ways:

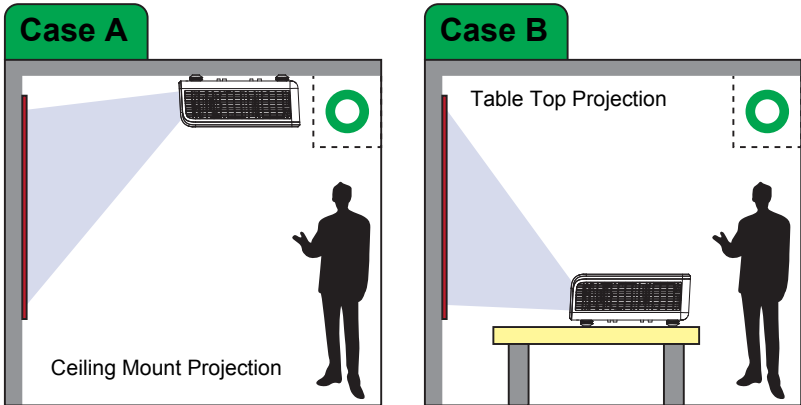

### Case C

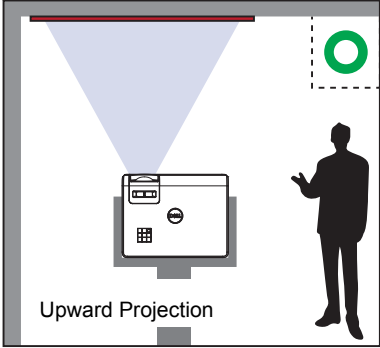


### Case D

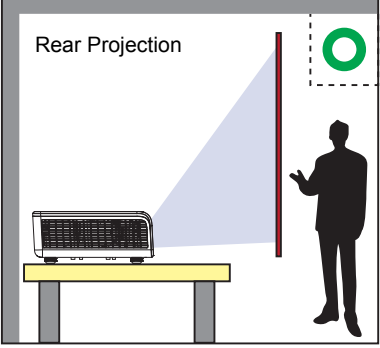


Do not install the S518WL projector in the following ways:

### Case E

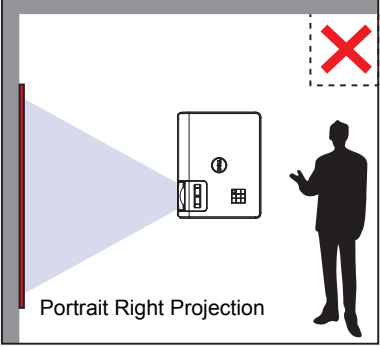


### Case F

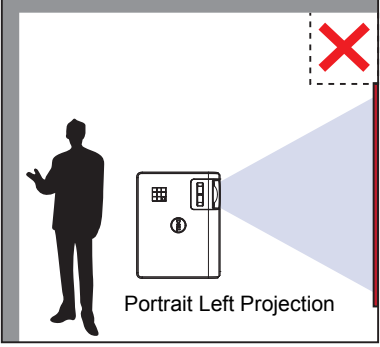


## Adjusting Image Corners

Use Keystone adjustment feature to get perfect, rectangular images.

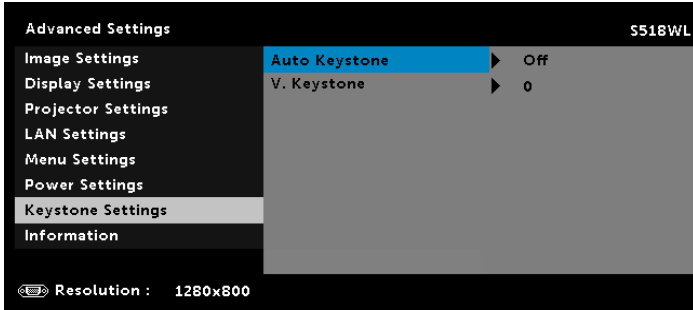

# Adjusting Image Size

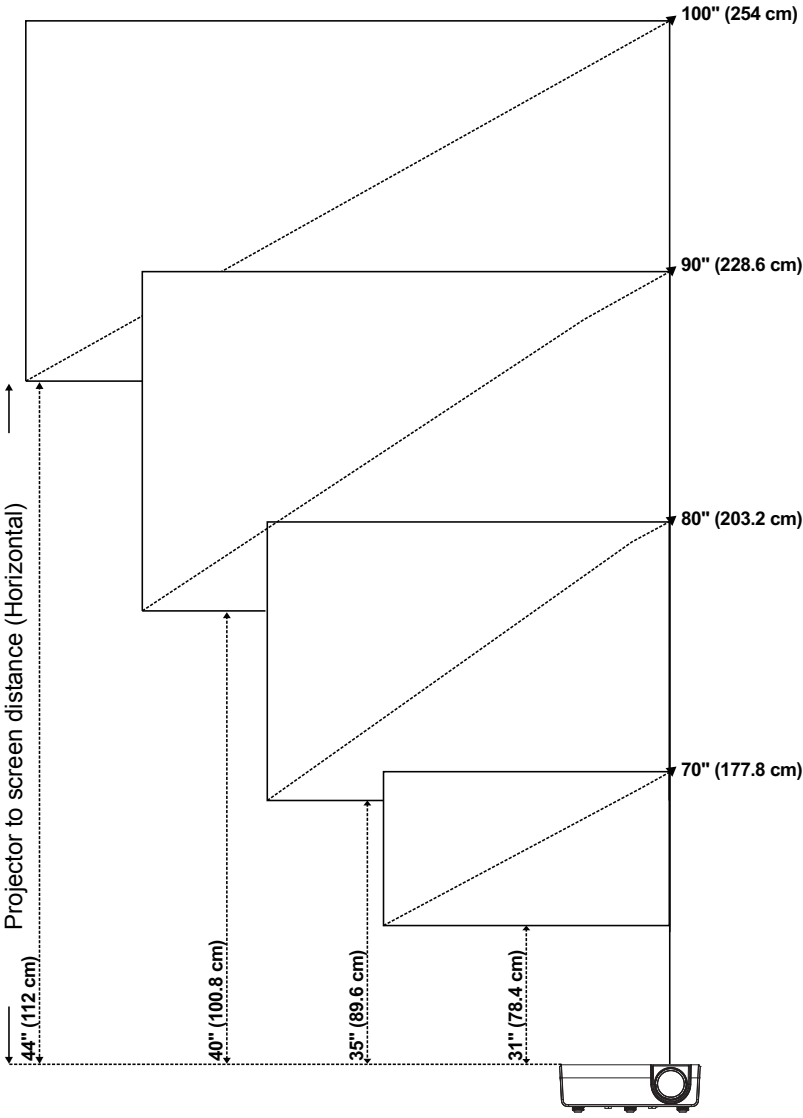




## Adjusting Image Shape

Screen Size W*H						A (Projection Distance)	D (Offset)		
B Diagonal Length of image		W (Width)		H (Height)					
inch	mm	inch	mm	inch	mm	inch	mm	inch	mm
70	1778	59	1508	37	942	31	784	5.6	141
80	2032	68	1723	42	1077	35	896	6.4	162
90	2286	76	1939	48	1212	40	1008	7.2	182
100	2540	85	2154	53	1346	44	1120	8.0	202

\* This graph is for user reference only.

\* Offset Ratio: 115 +/- 5%

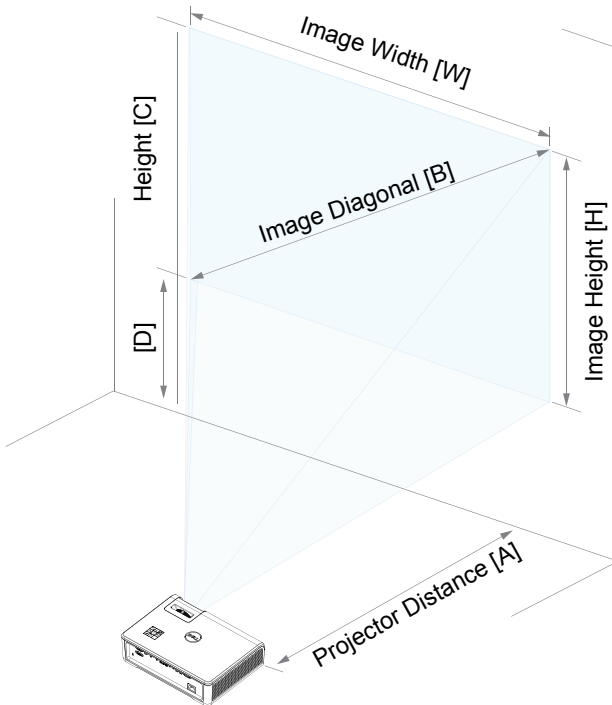

# 3


## Using Your Projector

### Using Network Display


#### Configure Your Projector for Network Display




 

##### Connect Projector to the Network

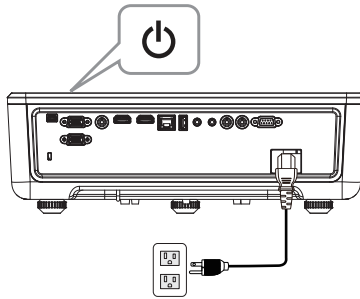1 Connect the power cable and turn on the projector by pressing the power button.

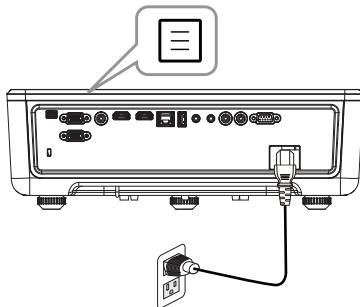

2 Press the **Menu** button on your projector control panel or remote control.




**NOTE:** Use , ,  and  buttons to navigate and  to select.


3 Ensure DHCP option is **Off** from LAN settings of Advanced Settings menu.



4 Access the **Input Source** menu, select **Network** source.

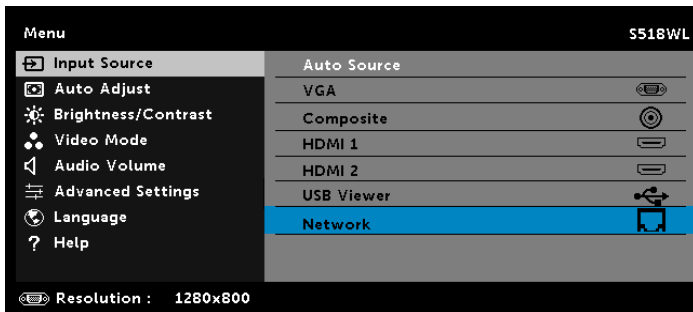


The **Network Guide Screen** shown below appears:

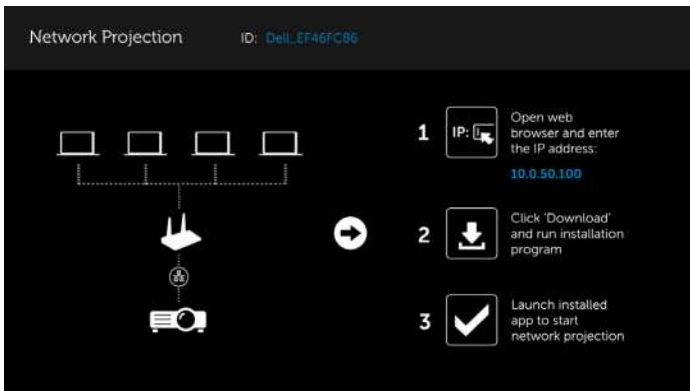

## Connect Projector Directly to the Computer


### A. Direct cable connection

5 Connect the LAN cable to the projector and the computer.

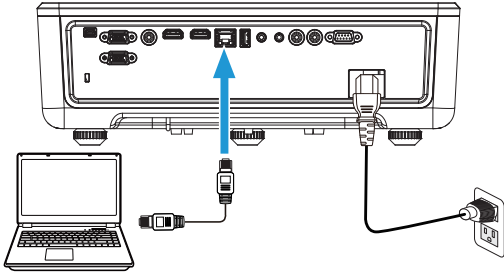

### B. Network switch

6 Connect the LAN cable to the projector and the computer via the switch source.

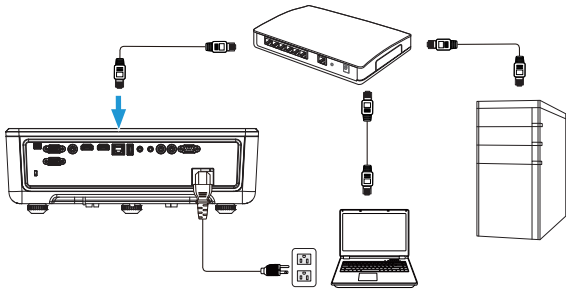

7 DHCP of LAN Settings switches to On.




**NOTE:** If the DHCP setting is set to On, the IP sharing device will automatically assign a set of IP Address, Subnet Mask, and Gateway.


## Install software on your PC/ Windows device

1 Open Local Area Connection Properties, and then enter the IP Address and Subnet Mask, click OK.


**Steps: Start > Control Panel > Network and Internet > Network and Sharing Center > Change Adapter Setting > Local Area Connection**

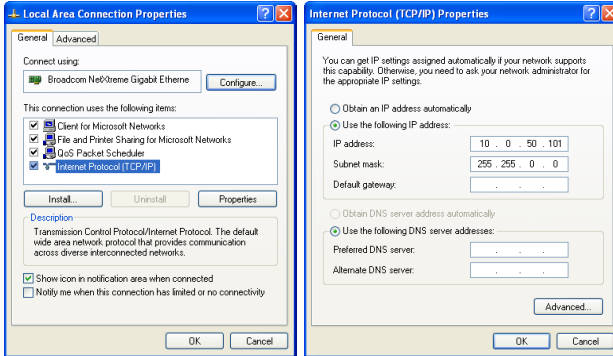

 
2 Open the Internet browser on your computer, and enter **10.0.50.100** (default) in the browser's address bar. You will be directed to the **Dell S518WL Web Management** page.



3 The S518WL Web Management page opens. For first-time use, click **Download**.

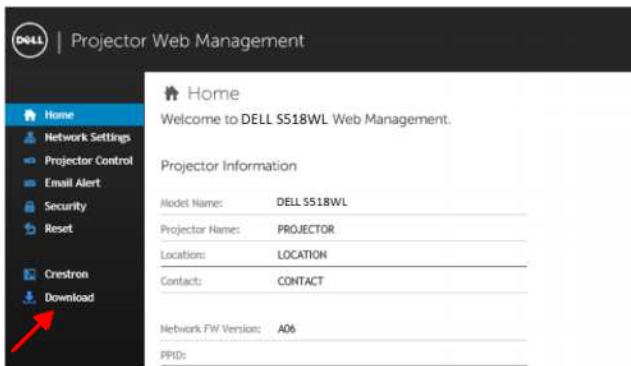

4 At the **Download** page, click **Download Network Projection App For Windows 10/8/7/Vista/XP** and install to your computer.

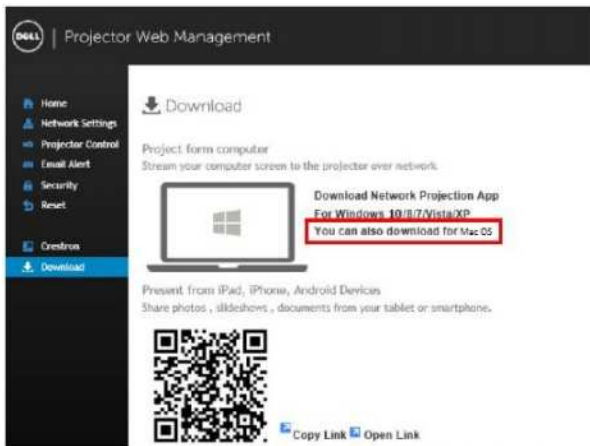

**NOTE:** If you are unable to install the application because of inadequate rights on the computer, please contact your network administrator.

5 Click **Run** to proceed with the one-time installation of the software.

6 The installation software will launch. Follow the on-screen instructions to complete setup.




**NOTE:** Alternatively you can download the latest version of the Dell Network Projection application from [dell.com/support](http://dell.com/support)


## Installation instructions for Mac

1 Open Local Area Connection Properties, and then enter the IP Address and Subnet Mask, click OK.


**Steps: Go > Applications > System Preferences > Network**

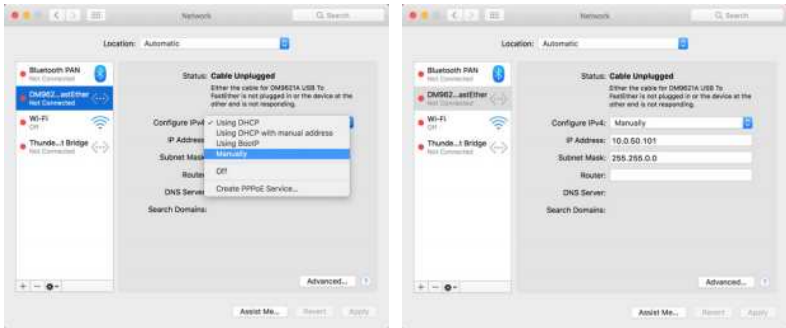

 
2 Open the Safari browser on your Mac computer, and enter **10.0.50.100** (default) in the browser's address bar. You will be directed to the **Dell S518WL Web Management** page.



3 The S518WL web management page opens. For first-time use, click **Download**.

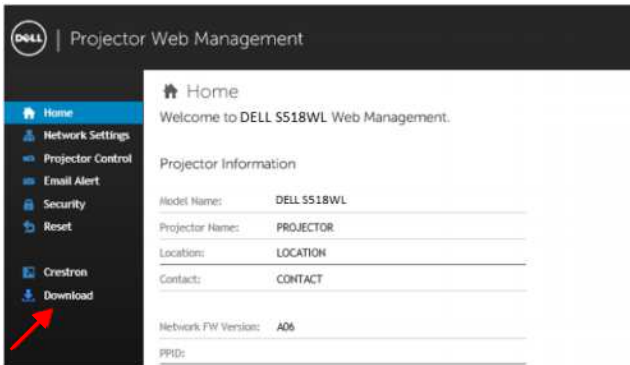


4 At the **Download** page, click **You can also download for Mac OS** and install to your computer.

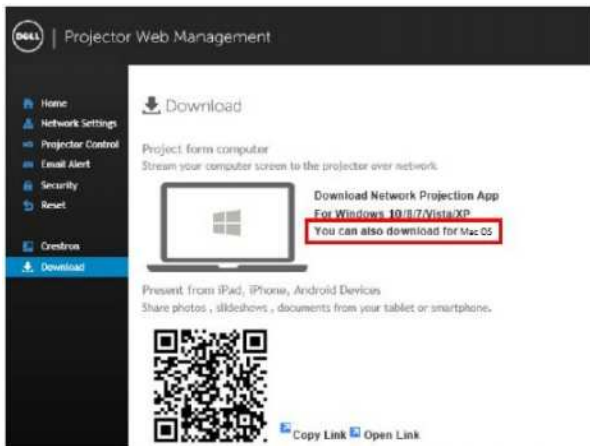


**NOTE:** If you are unable to install the application because of inadequate rights on the computer, please contact your network administrator.

5 Running **Dell\_Network\_Projection\_Mac.pkg** from **Downloads** folder.

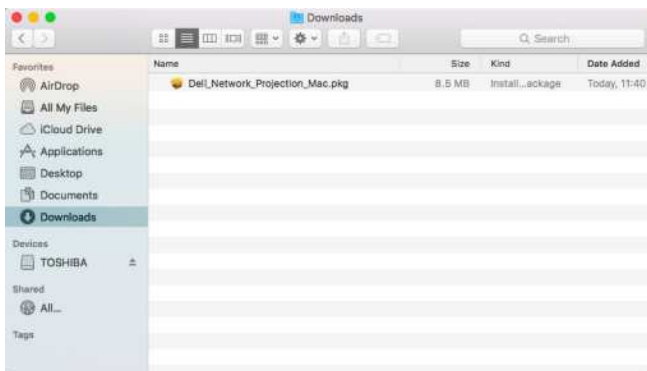




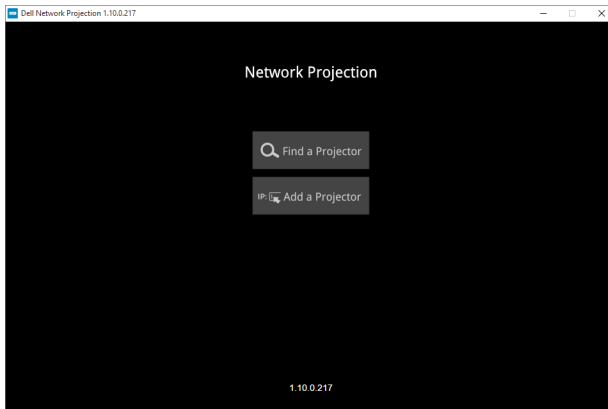
6 The installation software will launch. Follow the on-screen instructions to complete setup.

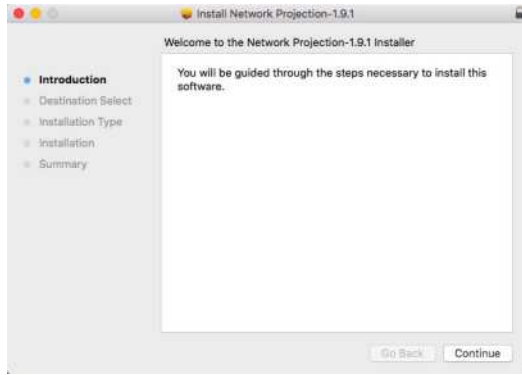


### Using the Dell Network Projection App (Windows)

Once the installation is completed, you can double-click  icon on the desktop to start the application.



The **Dell Network Projection Screen** shown below appears:



1 At **Dell Network Projection** screen, click **Find a Projector**, and then select **Dell\_42FE21E1 (random code)**. This is the name & code that will be projected, when your projector is set to the 'Network' source.

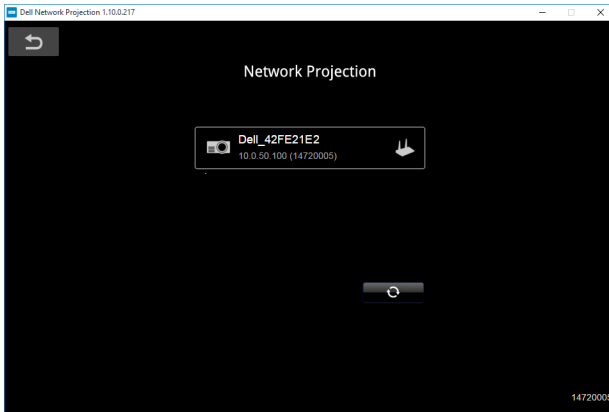

2 Click **Mirror Off** option to start presenting.

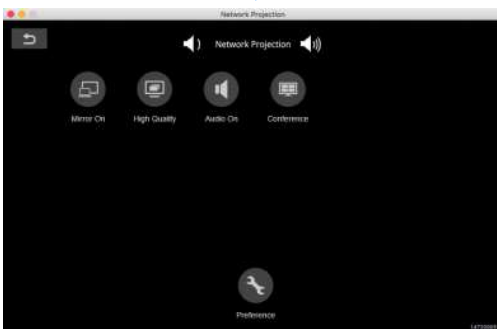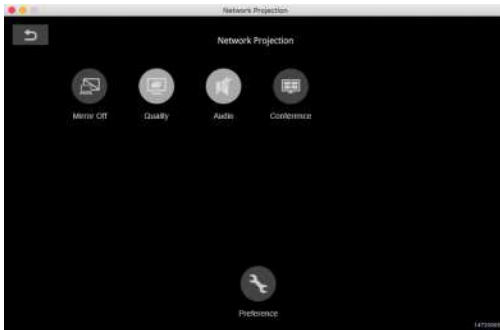


## Using the Dell Network Projection App (Mac)


1 1. Go to **Applications** folder, and then open the **Network Projection** folder.




2 Run the **Network Projection** application from Network Projection folder.

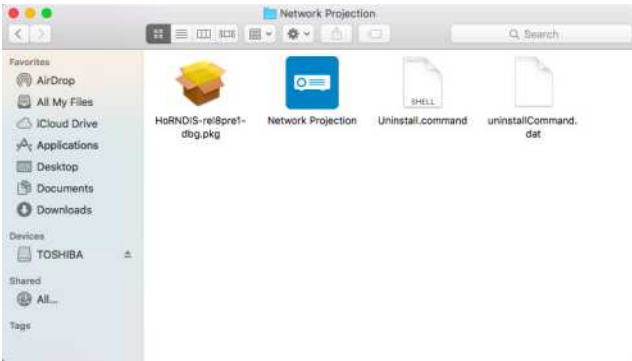



The **Dell Network Projection Screen** shown below appears:

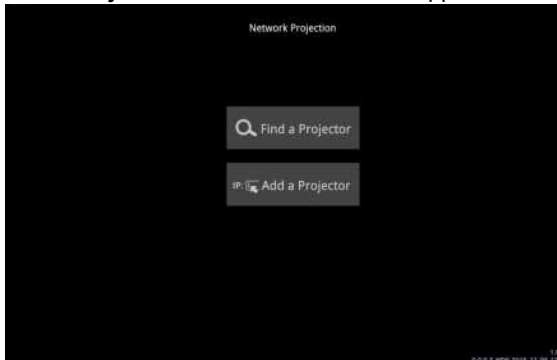

3 On the **Dell Network Projection** screen, click **Find a Projector**, and then select Dell\_CCDDDEE01 (random code). This is the name & code that will be projected, when your projector is set to the 'Network' source.

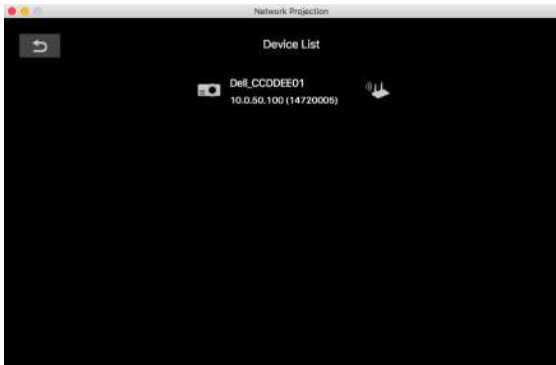


4 Click **Mirror Off** option to start presenting.

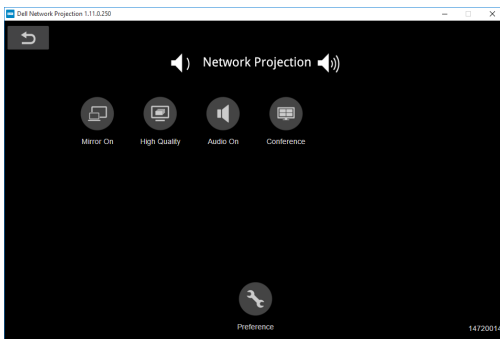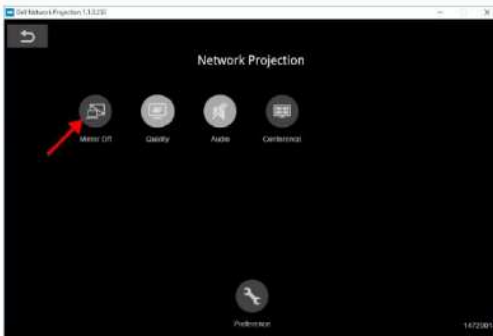




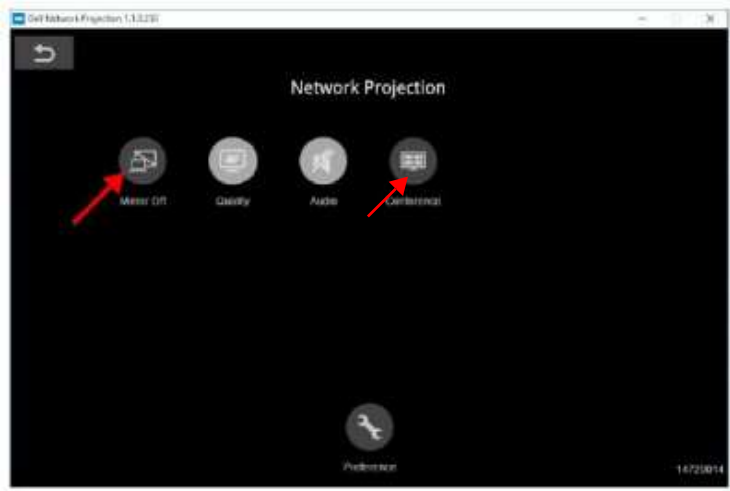


## Split Screen

After the network projection connects, click **Conference** button to activate the split screen feature.

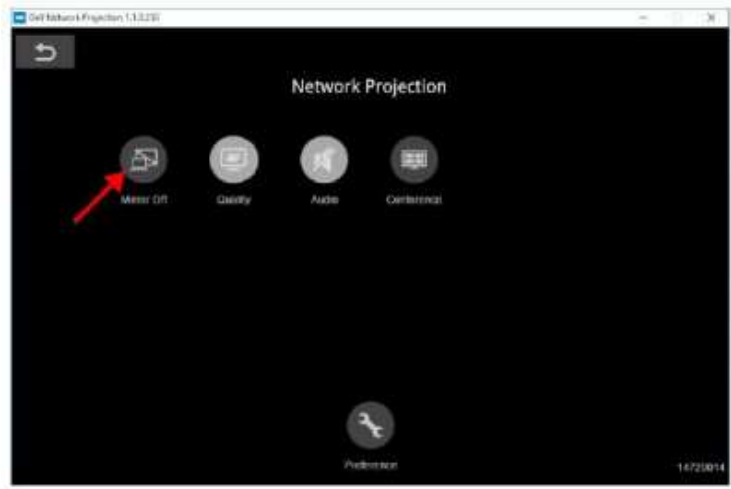

# Understanding the Buttons



Item	Description
Control Toolbar	
	Mirror Off/On Click to toggle network projection On/Off and screen extension.
	Quality Click to toggle High/Low quality.
	Audio Click to toggle audio On/Off.
	Conference Click to activate the conference control.
	Preference Click to activate the fast connection settings.

## Using PC-Free Presentation

### Multimedia File Type Support

#### **Photos**

Media Type	Ext Name	Version Support	Detailed Specification	Notes
JPEG	jpg/jpeg		Baseline mode: size <=65536 x 65536 Progressive baseline: <ul style="list-style-type: none"><li>• color mode=444, size &lt;= 2080 x 2080</li><li>• color mode=(422, 440), size &lt;=2544 x 2544</li><li>• color mode=(420, 400, 411, others), size &lt;=2944 x 2944</li></ul> JPEG (CMYK) is not support	Support baseline mode & progressive baseline
BMP	bmp		Size<=65536 x 65536	Support all modes
PNG/GIF	png/gif		PNG<=65536 x 65536 GIF<=65536 x 65536 Animation mode is not supported	Support interlace Animation mode is not supported
TIFF	tiff		TIFF<=3264 x 2176	Support all modes

## Audio

File Type	File Extension	Version Support	Detailed Specification	Notes
Mpeg-1 Layer 3	mp3		VBR: bit rate: 8~320 Kbps	
WMA	wma/asf	WMA 7~9.1	Bit rate: CBR up to 320 kbps, VBR up to 256 kbps	1. Microsoft Licensee only 2. WMA 7~9.1 is WMA2
WMV	wav		Sampling rate: 8KHz; Bit rate: 32Kbps	Microsoft ADPCM only
LPCM	n/a (included in the video only)	LPCM	LPCM: Sampling rate: 8KHz~192KHz; Bit rate: 64~4608 Kbps	
ADPCM	n/a (included in the video only)	1. Microsoft ADPCM 2. IMA ADPCM (DVI_ADPCM) 3. SWF ADPCM 4. QT IMA ADPCM	Microsoft ADPCM: Sampling rate: 8KHz; Bit rate: 32 Kbps	
OGG Vorbis	ogg		CBR: Sampling rate: 32K~192KHz VBR: Up to 500 Kbps (spec)	
AMR	amr/3ga			



## Video


File Type	Video Type	Audio Type	Detailed Specification	Notes
MP4 (.mov, .mp4)	MPEG-4 AVC (H.264)	LPCM ADPCM MPEG-Audio	H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P	ADPCM: 1. Microsoft ADPCM 2. IMA ADPCM (DVI_ADPCM) 3. SWF ADPCM 4. QT IMA ADPCM
MP4 (.mp4)	H.265/HE VC	MPEG-Audio HE-AAC, LC- AAC	H.265: 1. MP@L5.1 Main Tier 2. 4K@60P 10bit	
AVI (.avi)	MPEG-4 AVC (H.264)	LPCM ADPCM MPEG-Audio	MPEG-1: support up to 1080@60p H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P	ADPCM: 1. Microsoft ADPCM 2. IMA ADPCM (DVI_ADPCM) 3. SWF ADPCM 4. QT IMA ADPCM
FLV (.flv)	MPEG-4 AVC (H.264)	LPCM MPEG-Audio	H.264: 4K@24P	
F4V (.f4v)	H.264	HE-AAC MP3	H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P	
MKV (.mkv)	MPEG-4 AVC (H.264)	LPCM ADPCM MPEG-Audio	H.264: 1. Main and High Profile @ level 4.2 2. Baseline @ level 3 3. 4K@24P	ADPCM: 1. Microsoft ADPCM 2. IMA ADPCM (DVI_ADPCM) 3. SWF ADPCM 4. QT IMA ADPCM
MKV (.mkv)	H.265/HE VC VP9	MPEG-Audio HE-AAC, LC- AAC	H.265: 1. MP@L5.1 Main Tier 2. 4K@60P 10bit	

## Office Viewer File Type Support

The office viewer feature allows you to play the MS Excel, MS Word, MS PowerPoint, and PDF files.


File Type	Support Version	Pages/Lines Limitation	Size Limitation	Notes
Adobe PDF		Up to 1000 pages (One file)	Up to 75 MB	
MS Word	Word 97, 2000, 2002, 2003 Word 2007, 2010 (.docx)	Because office viewer does not load all pages of MS Word file at the same time, there are no obvious limitations of page and line.	Up to 100 MB	Does not support Bold Text in Simple Chinese front
MS Excel	Excel 97, 2000,2002, 2003 Excel 2007, 2010 (.xlsx) Office XP Excel	Row Limit: up to 595 / Column Limit: up to 256 Sheet: up to 100 Note: Any one of three limitations above does not appear on one Excel file simultaneously	Up to 15 MB	Does not support password-protected sheets
MS PowerPoint	PowerPoint 97 PowerPoint 2000, 2002, 2003 PowerPoint 2007, 2010 (.pptx) Office XP PowerPoint PowerPoint presentation-2003 and earlier*.pps PowerPoint presentation-2007 and 2010(.ppsx)	Up to 1000 pages (One file)	Up to 19 MB	Does not support Slide Show order

## Setting up to present using External USB Storage


 **NOTE:** A USB flash disk must be plugged into the projector if you want to use the USB media playback feature.

Follow these steps to play the Video, Audio, Photo, or PDF files on your projector:


- 1 Connect the power cable and turn on the projector by pressing the power button.

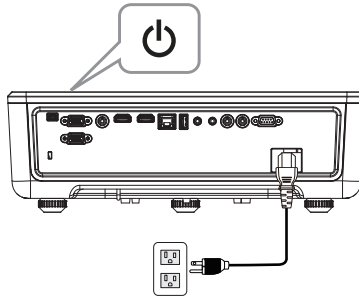

- 2 Plug in a USB flash disk to your projector.

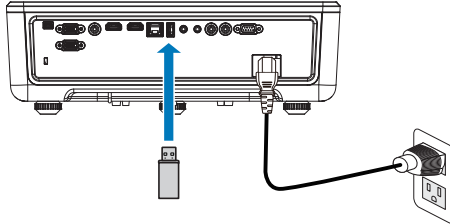


- 3 Press the **Menu** button on the control panel or remote control.
- 4 Access the **Input Source** menu, select **USB Viewer** source.

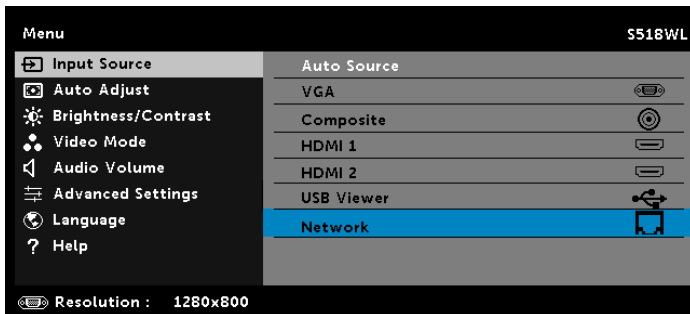

5 Go to USB Viewer menu:

- a You can play Photo, Music, or Video files, or select Setting option to change multimedia settings.

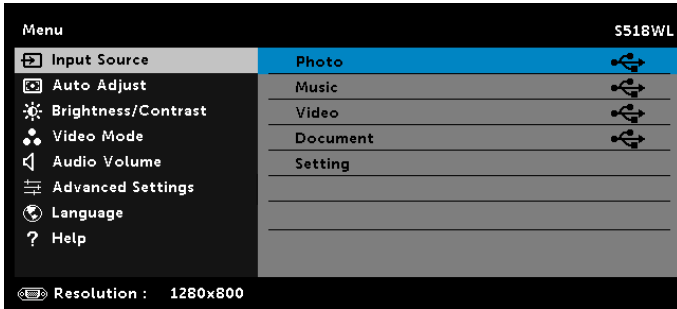


Video Source Screen:



Music Source Screen:



Photo Source Screen:

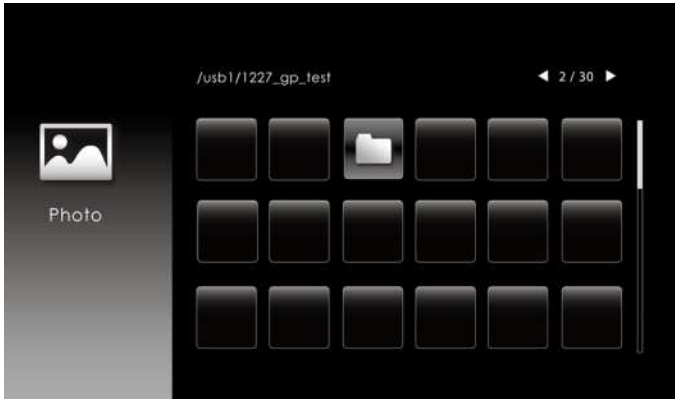

Input Source Setting:



# 4


## Troubleshooting

### Troubleshooting Tips



If you experience problems with your projector, see the following troubleshooting tips. If your problem persists, please contact Dell.



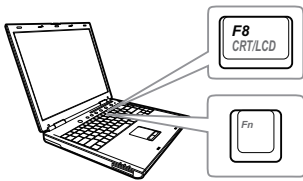

#### Problem

No image appears on the screen



#### Possible Solution


- Ensure that you have chosen the correct input source on the INPUT SOURCE menu.
- Ensure the external graphics port is enabled. If you are using a Dell laptop computer, press   (Fn+F8). For other computers, see your respective documentation. If images are not displayed properly, please upgrade the video driver of your computer. For Dell computers, see [www.dell.com/support](http://www.dell.com/support).
- Ensure that all the cables are securely connected. See "Adjusting Projector Image" on page 12.
- Ensure that the pins of the connectors are not bent or broken.
- Use the Test Pattern in the Projector Settings of the Advanced Settings menu. Ensure that the colors of the test pattern are correct.

Problem (continued)	Possible Solution (continued)
Partial, scrolling, or incorrectly displayed image	<p>If you are using a Dell laptop computer, set the resolution of the computer to WXGA (1280 x 800):</p> <ul style="list-style-type: none"> <li>a Right-click the unused portion of your Microsoft® Windows® desktop, click <b>Properties</b>, and then select <b>Settings</b> tab.</li> <li>b Verify that the setting is 1280 x 800 pixels for the external monitor port.</li> <li>c Press   (Fn+F8).</li> </ul> <p>If you experience difficulty in changing resolutions, or if your monitor freezes, restart all the equipment and the projector.</p>
The screen does not display your presentation	<p>If you are using a portable computer, press   (Fn+F8).</p>
Image color is incorrect	<ul style="list-style-type: none"> <li>• If the display receives the wrong signal output from the graphics card, please set the signal type to <b>RGB</b> in the <b>OSD Image Settings</b> of the <b>Advanced Settings</b> tab.</li> <li>• Use <b>Test Pattern</b> in the <b>Projector Settings</b> of the <b>Advanced Settings</b> menu. Ensure that the colors of the test pattern are correct.</li> </ul>
Image is out of focus	<ol style="list-style-type: none"> <li>1 Adjust the focus until the image is clear. Use <b>Focus Adjust</b> in the <b>Projector Settings</b> of the <b>Advanced Settings</b> menu.</li> <li>2 Ensure that the projection screen is within the required distance from the projector (2.55 ft (0.78 m) ~ 3.67 ft (1.12 m)).</li> </ol>

Problem (continued)	Possible Solution (continued)
The image is stretched when displaying a 16:9 DVD	<p>The projector automatically detects the input signal format. It will maintain the aspect ratio of the projected image according to the input signal format with an Original setting.</p> <p>If the image is still stretched, adjust the aspect ratio in the Display Settings of the Advanced Settings menu in the OSD.</p>
Image is reversed	Select <b>Projector Settings</b> of the <b>Advanced Settings</b> from the OSD and adjust the projector mode.
TEMP light is solid amber	The projector has overheated. The display automatically shuts down. Turn the display on again after the projector cools down. If the problem persists, please contact Dell.
TEMP light is blinking amber	If the projector fan fails, the projector will automatically shut down. Try to clear the projector mode by pressing and holding the <b>Power</b> button for 10 seconds. Please wait for about 5 minutes and try to power up again. If the problem persists, please contact Dell.
The remote control is not operating smoothly or works only within a limited range	The battery level might be low. If so, replace with new CR2032 battery.
LAN control support	<ul style="list-style-type: none"> <li>• Web Control functions were verified on IE9, IE10, and IE11. The other version may have compatibility problem.</li> <li>• The Compatibility View setting should be disabled. Otherwise the web control page may have icon or content display abnormal issue.</li> </ul>



## Guiding Signals

Projector Status	Description	Control Buttons	Indicator	
		Power	TEMP (Amber)	LAMP (Amber)
Standby mode	Projector in Standby mode. Ready to power on.	White Flashing	OFF	OFF
Warming up mode	Projector takes some time to warm up and power on.	White	OFF	OFF
Laser Diode on	Projector in Normal mode, ready to display an image.  Note: The OSD menu is not accessed.	White	OFF	OFF
Cooling mode	Projector is cooling to shutdown.	White	OFF	OFF
Projector overheated	Air vents might be blocked or ambient temperature may be above 40°C. The projector automatically shuts down. Ensure that the air vents are not blocked and that the ambient temperature is within operational range. If the problem persists, please contact Dell.	OFF	AMBER	OFF
Fan breakdown	One of the fans has failed. The projector automatically shuts down. If the problem persists, please contact Dell.	OFF	AMBER Flashing	OFF
Laser Diode driver overheated	Air vents might be blocked or the Laser Diode driver has overheated. The projector will automatically shut down. Turn the display on again after the projector cools down. If the problem persists, please contact Dell.	AMBER	AMBER	OFF
Color Wheel breakdown	Color wheel cannot start. The projector has failed and the projector automatically shuts down. Unplug the power cord and turn on the projector. If this problem persists, please contact Dell.	White	AMBER Flashing	AMBER Flashing
Laser Diode failure	Laser Diode is defective.	OFF	OFF	AMBER
Fault - DC supply (+12V)	Power supply has been interrupted. The projector automatically shuts down. Unplug the power cord and turn on the projector. If this problem persists, please contact Dell.	AMBER Flashing	AMBER	AMBER


# 5

## Maintenance


### Replacing the Remote Control Battery

- 1 Rotate the battery lid counterclockwise to remove the battery cover.

- 2 Insert a CR2032 coin cell battery and align the polarity correctly according to the marking in the battery holder.

 **NOTE:** When you use the remote control for the first time, there is a plastic sheet between the battery and its contact. Remove the sheet before use.


- 3 Rotate the battery lid clockwise to lock the battery cover.

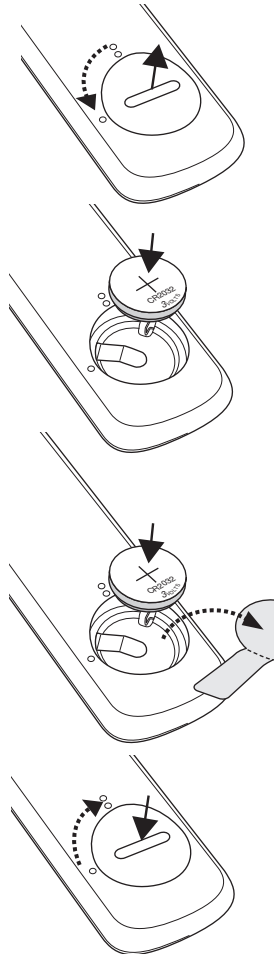


# 6

## Specifications

---

Light Valve	0.65 WXGA S450 DMD, DarkChip3™
Brightness	3200 ANSI Lumens (Max.)
Contrast Ratio	1800:1 Typical (Full On/Full Off) 100000:1 High Contrast Ratio
Uniformity	80% Typical (Japan Standard - JBMA)
Number of Pixels	1280 x 800 (WXGA)
Aspect Ratio	16:9
Displayable Color	1.07 billion colors
Color Wheel Speed	2 X for Normal
Projection Lens	F-Stop: F/2.7  Focal length, f=7.51 mm No Manual Zoom Lens, Fixed Throw ratio =0.52 Offset ratio: 115+/-5%
Projection Screen Size	70 ~ 100 inches (diagonal)
Projection Distance	2.55 ~ 3.67 ft (0.78 ~ 1.12 m)
Video Compatibility	Component Video input via HDMI: 2160p (24/25/60 Hz), 1080i (24/25/60 Hz), 720p (50/60 Hz), 576i/p, 480i/p
Power Supply	Universal AC 100-240 V 50-60 Hz with PFC input
Power Consumption	Normal mode: 270 W ± 15% @ 110 Vac Eco mode: 180 W ± 15% @ 110 Vac Standby mode: < 0.5 W Network standby: < 2 W
	 <b>NOTE:</b> By default, the projector is set to enter power saving mode after 20 minutes of no activity.
Audio	2 speakers x 10 watt RMS

Noise Level	Normal mode: 36 dB(A) Eco mode: 32 dB(A)
Projector Weight	< 12 lb (5.5 Kg)
Dimensions (W x D x H)	1.26 x 0.99 x 0.37 inches (386.5 x 303.2 x 115 mm)

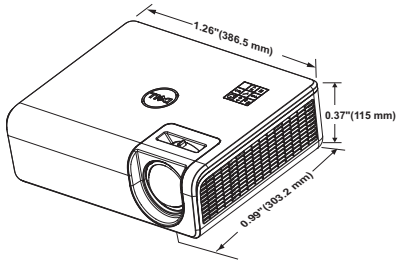

Environmental	<p>Operating temperature: 5 °C - 40 °C (41 °F- 104 °F) Humidity: 80% maximum</p> <p>Storage temperature: 0 °C to 60 °C (32 °F to 140 °F) Humidity: 90% maximum</p> <p>Shipping temperature: -20 °C to 60 °C (-4 °F to 140 °F) Humidity: 90% maximum</p>
I/O Connectors	<p>Power: One AC power socket (3-pin - C14 inlet)</p> <p>VGA input: One 15-pin D-sub connector (Blue), VGA In, for analog RGB/Component input signals.</p> <p>VGA output: One 15-pin D-sub connector (Black) for VGA-A loop through.</p> <p>Composite Video input: One Yellow RCA jack for CVBS signal.</p> <p>HDMI 1.4 input: Two HDMI 1.4 connectors for HDMI 1.4 specification HDCP 2.2 compliant.</p> <p>Analog Audio input: One 3.5 mm stereo mini phone jack (Blue) and One pair of RCA (Red/ White)</p> <p>Variable audio output: One 3.5 mm stereo mini phone jack (Green).</p>

Light Source

USB (mini type B) port: One mini type B connector for firmware upgrade.

USB Power (5V/1.8A): One USB Power (5V/1.8A) for power only

RS232 port: One 9-pin D-sub for RS232 communication.

RJ-45 port: One RJ-45 connector for build-in for network control and LAN display.

Up to 20,000 hours in Normal mode

## Compatibility Mode (Digital)

Resolution	Refresh Rate (Hz)	H Sync Frequency (KHz)	Pixel Clock (MHz)	Support HDMI 1.4 or 2.0
640 x 480	59.940	31.469	25.175	HDMI 1.4 & 2.0
640 x 480	75.000	37.500	31.500	HDMI 1.4 & 2.0
640 x 480	85.008	43.269	36.000	HDMI 1.4 & 2.0
720 x 480 p60	59.940	31.469	27.000	HDMI 1.4 & 2.0
720 x 576 p50	50.000	31.250	27.000	HDMI 1.4 & 2.0
800 x 600	60.317	37.879	40.000	HDMI 1.4 & 2.0
800 x 600	75.000	46.875	49.500	HDMI 1.4 & 2.0
800 x 600	85.061	53.674	56.250	HDMI 1.4 & 2.0
1024 x 768	60.004	48.363	65.000	HDMI 1.4 & 2.0
1024 x 768	74.930	60.241	80.000	HDMI 1.4 & 2.0
1024 x 768	84.997	68.677	94.500	HDMI 1.4 & 2.0
1280 x 720	59.855	44.772	74.250	HDMI 1.4 & 2.0
1280 x 720 p50	50.000	37.500	74.250	HDMI 1.4 & 2.0
1280 x 720 p60	60.000	45.000	74.250	HDMI 1.4 & 2.0
1280 x 800	59.810	49.702	83.500	HDMI 1.4 & 2.0
1280 x 1024	60.020	63.981	108.000	HDMI 1.4 & 2.0
1366 x 768	59.790	47.712	85.500	HDMI 1.4 & 2.0
1400 x 1050	59.978	65.317	121.750	HDMI 1.4 & 2.0
1600 x 1200	60.000	75.000	162.000	HDMI 1.4 & 2.0
1920 x 1080	60.000	67.500	148.500	HDMI 1.4 & 2.0
1920 x 1080 i50	50.000	28.125	74.250	HDMI 1.4 & 2.0
1920 x 1080 i60	60.000	33.750	74.250	HDMI 1.4 & 2.0
1920 x 1080 p120	120.00	33.750	297.000	HDMI 1.4 & 2.0
3840 x 2160	24.000	54.000	297.000	HDMI 1.4 & 2.0
3840 x 2160	25.000	56.250	297.000	HDMI 1.4 & 2.0
3840 x 2160	30.000	67.500	297.000	HDMI 1.4 & 2.0

3840 x 2160	50.000	112.500	594.000	HDMI 2.0
3840 x 2160	60.000	135.000	594.000	HDMI 2.0
4096 x 2160	24.000	54.000	297.000	HDMI 1.4 & 2.0
4096 x 2160	25.000	56.250	297.000	HDMI 1.4 & 2.0
4096 x 2160	30.000	67.500	297.000	HDMI 1.4 & 2.0
4096 x 2160	50.000	112.500	594.000	HDMI 2.0
4096 x 2160	60.000	135.000	594.000	HDMI 2.0

# 7

## Additional Information

---

For additional information on how to use your projector, please see the **Dell Projectors User Guide** at [www.dell.com/support/manuals](http://www.dell.com/support/manuals).



# 8

## Contacting Dell

---

For customers in the United States, call 800-WWW-DELL (800-456-3355).



**NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1 Visit go to [www.dell.com/contactDell](http://www.dell.com/contactDell).
- 2 Select your country from the displayed list.
- 3 Select a Segment for Contact.
- 4 Select the appropriate service or support link based on your need.

# Index

## A

- Adjusting the Projected Image
  - Adjusting the Projector Height 12
  - lower the projector
    - Front tilt adjustment wheel 12
    - Rear tilt adjustment wheel 12

## C

- Connection Ports
  - Audio input connector 6
  - Audio output connector 6
  - Audio RCA (L) connector 6
  - Audio RCA (R) connector 6
  - Composite Video connector 6
  - HDMI-1 (1.4) connector 6
  - HDMI-2 (1.4) connector 6
  - Mini USB (mini type B) connector for firmware upgrade 6
  - Power cord connector 6
  - RJ45 connector 6
  - RS232 connector 6
  - USB Type A Power (+5V/1.8A) connector 6
  - VGA input 6
  - VGA output 6
- Contact Dell 4

## D

- Dell
  - contacting 48, 49

## M

- Main Unit 5
  - IR receivers 5
  - Lens 5
  - Mounting holes for ceiling mount 5
  - Mounting holes for wall mount 5
  - Power button 5
  - Tilt adjustment wheel 5

## P

- phone numbers 49

## R

- Remote Control 9
- Replacing 42

## S

- Specifications
  - Aspect Ratio 43
  - Audio 43
  - Brightness 43

- Color Wheel Speed 43
- Contrast Ratio 43
- Dimensions 44
- Displayable Color 43
- Environmental 44
- I/O Connectors 44
- Light Valve 43
- Noise Level 44
- Number of Pixels 43
- Power Consumption 43
- Power Supply 43
- Projection Distance 43
- Projection Lens 43
- Projection Screen Size 43
- Projector Weight 44
- Uniformity 43
- Video Compatibility 43

support

- contacting Dell 48, 49

## **T**

- telephone numbers 49