

HITACHI

Liquid Crystal Projector


Model name

CP-S830W/E

OPERATING GUIDE

Thank you very much for purchasing this Hitachi Liquid Crystal Projector.

Please read this operating guide to use correctly. After reading this manual, keep it carefully for future reference.

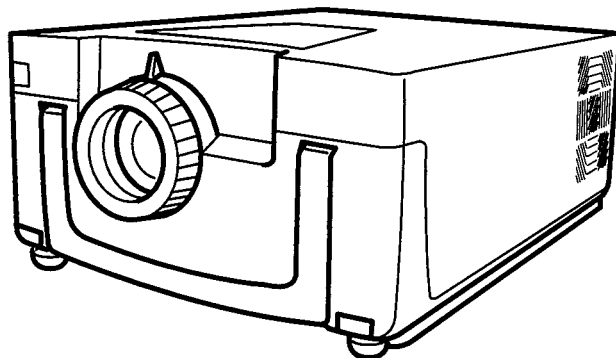

Outline

This Liquid Crystal Projector can display various computer signals and NTSC/PAL/SECAM video signals.

Features

(1) High brightness

A highly efficient optical system with a UHB lamp ensures high brightness.

(2) High resolution

Three separate high-definition liquid crystal panels are used for the R, G and B signals.

(3) Compact size, light weight for portability

(4) RGB output terminal

(5) RS232C Communication

(6) Mouse emulation

(7) Complies with VESA DDC1/2B specifications

Contents

Page

| | |
|---|----|
| Before use | 3 |
| Names and functions of each part | 7 |
| Installation | 11 |
| Basic operations | 12 |
| Adjustments and functions .. | 14 |
| Connection to the video signal terminals | 18 |
| Connection to the RGB signal terminal | 18 |
| Connection to the control signal terminal | 21 |
| Example of system setup | 26 |
| Cleaning the air filter | 27 |
| Lamp | 28 |
| Message table | 29 |
| When you think something wrong | 30 |
| Specifications | 31 |

FOR THE CUSTOMERS IN U.K

THIS PRODUCT IS SUPPLIED WITH A TWO PIN MAINS PLUG FOR USE IN MAINLAND EUROPE. FOR THE U.K PLEASE REFER TO THE NOTES ON THIS PAGE.

IMPORTANT FOR UNITED KINGDOM

WORDING FOR CLASS I EQUIPMENT INSTRUCTION BOOKS AND LABELS

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse, the value of which is indicated on the pin face of the plug. Should the fuse need to be replaced, an ASTA or BSI approved BS 1362 fuse must be used of the same rating. If the fuse cover is detachable never use the plug with the cover omitted. If a replacement fuse cover is required, ensure it is of the same colour as that visible on the pin face of the plug. Fuse covers are available from your dealer.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

Should it be necessary to change the mains plugs, this must be carried out by a competent person, preferable a qualified electrician.


If there is no alternative to cutting off the mains plug, ensure that you dispose of it immediately, having first removed the fuse, to avoid a possible shock hazard by inadvertent connection to the mains supply.

WARNING: THIS EQUIPMENT MUST BE EARTHED

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow=Earth, Blue=Neutral, Brown=Live.

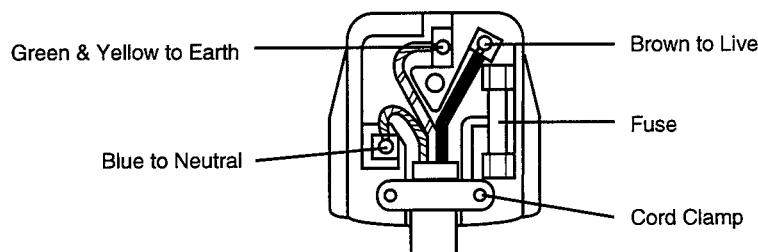

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Green and Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol \oplus or coloured Green or Green and Yellow.

The wire coloured Blue must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Instructions to Users:

This equipment complies with the requirements of FCC (Federal Communication Commission) Class A equipments provided that following conditions are met.

(1) Video signal cables:

Double shielded coaxial cables (so called FCC shield cable) must be used and the outer shield must be connected to the ground. Or, if normal coaxial cables are used, the cables must be enclosed in metal pipes or similar way to reduce the interference noise radiation.

(2) Power cord:

Shielded power cord must be used. The outer shield must be connected to the ground.

(3) Video inputs:

The input signal amplitude must no exceed the specified level.

Before use

< Before Use >

Illustrated marks Various illustrated marks are used in this product and instruction manual so the product is used correctly and safely, and also to protect you and others from danger and your property from being damaged.



Warning

This shows that a person could be killed or injured if the wrong operation is done by ignoring this indication.



Caution

This shows that a person could be injured or material may be damaged if the wrong operation is done by ignoring this indication.

Examples of illustrated marks



The \triangle mark informs you that there is a warning (including caution). The concrete details of the warning (the left diagram shows the caution for an electric shock hazard) is shown in the diagram.



The \odot mark informs you of a prohibited action. The concrete prohibited action (the left diagram shows the prohibition of disassembly) is drawn in the diagram or near it.



The \bullet mark informs you of actions you must do. The concrete instruction details (the left diagram shows "Disconnect the power plug from the power outlet") is drawn in the diagram.

[Safety precaution]

Warning

■ If any abnormality occurs.

- When there is an abnormal smell or smoke, if you use this unit as it is, this could cause a fire or electric shock, etc. When an abnormality is found, immediately turn off the power switch and pull out the power plug from the power outlet. Check that there is no smoke, etc., then contact your dealer to repair the unit. Do not repair it yourself as it is very dangerous.
- Do not use this unit as it is after trouble has occurred, such as "No picture", "No sound", "Abnormal sound", etc. This may cause a fire, electric shock, etc. In this case immediately turn off the power switch and disconnect the power plug, then contact your dealer to repair the unit.
- If water, etc. enters inside the unit, turn off the power switch of the unit first and disconnect the power plug and then contact your dealer. If you use it as it is, it may cause a fire, electric shock, etc.



Pull out the power plug from the power outlet.

■ Do not install this unit in an unstable place.

Avoid placing it in an unstable place such as weak base, inclined floor, etc. This may cause it to drop or fall over, resulting in injury.



■ Do not open the cabinet.

Do not open the cabinet. There are high voltage parts inside the cabinet and this may cause an electric shock. Ask your dealer to check inside and adjust and repair the unit.



Electric shock hazard

Prohibition of disassembly

■ Do not use this in a bathroom, etc.

Do not use this unit in a bathroom, etc. This may cause a fire, electric shock, etc.



Do not use near water

■ Do not look directly at the lens when the lamp is lit.

Do not look directly at the lens when the lamp is lit. Since a strong light is used, it could damage your vision, etc. Especially pay attention if children are present.



■ Do not insert any foreign object.

- Do not insert a metal or flammable object inside through the ventilation holes, etc. This may cause a fire, electric shock, etc.
- If foreign matter enters inside, turn the power switch off and disconnect the power plug from the power outlet and contact your dealer. If you use as it is, it may cause a fire, electric shock, etc. Be careful especially if children could touch the unit.



Pull out the power plug from the power outlet.

■ Do not apply any shock.

If you drop this unit or if the cabinet is broken, turn off the power switch, disconnect the power plug and contact your dealer. If you use it as it is, it may cause a fire, electric shock, etc.



Pull out the power plug from the power outlet.

■ Do not remodel this unit.

Do not remodel this unit. It may cause a fire, electric shock, etc.



Prohibition of disassembly

■ Do not put a container, etc. with liquid on this unit.

Do not put a vase, flowerpot, cosmetic container, medicine or water and small metal objects on this unit. If liquid spills and enter inside the unit, it may cause a fire, electric shock, etc.



■ Do not use power supplies other than that specified.

Do not use this unit with a power voltage other than specified power supply voltage. It may cause a fire, electric shock, etc.



Warning

Be careful in handling the power cord.

- Do not scratch, damage or process the power cord. Do not bend it forcibly. Also do not put a heavy object on it, do not heat it and do not pull it. If you do, the power cord may be damaged and it may cause a fire, electric shock, etc.
 - Do not pull the cord.
 - Do not put a heavy object on it.
 - Do not damage the cord.
 - Do not put it near a heating device.
- Be careful that this unit is not placed on the power cord. The power cord may be damaged and it may cause a fire, electric shock, etc. If the cord is covered with a carpet, etc. a heavy object may be put on it without your realizing it.



- If the cord is damaged (core wire is exposed, disconnected, etc.), ask your dealer to replace it. It may cause a fire, electric shock, etc.
- Check that no dirt adheres to the power plug and fully insert without any play. If dirt adheres or the connection is incomplete, it may cause a fire, electric shock, etc.
- The outer shield of power cord must be connected to ground. If you do not, it may cause a electric shock.



Caution

Do not step on this unit or do not put a heavy object on it.

- Do not step on this unit. Especially pay attention if children are present. If you do, the unit may fall over or may be broken causing an injury.
- Do not put a heavy object on this unit. If you do, the unit may fall due to its imbalance or it may drop, causing an injury.



Do not place this unit in a moist or dusty place.

- Do not place this unit in a moist or dusty place. It may cause a fire, electric shock, etc.
- Do not place this unit where it would be exposed to soot or steam, near a cooking stove or humidifier, etc. It may cause a fire, electric shock, etc.



 
Do not block the ventilation holes.

Do not block the ventilation holes. If the ventilation holes are blocked, the heat inside may build up and it may cause a fire. Do not use this unit in the following ways: On its side. In a poorly ventilated, narrow place. On a carpet or bedspread. Covered with a tablecloth. Place this unit so that the ventilation holes are kept 10cm or more away from the wall.



Handle the power cord carefully.

- Do not bring the power cord near a heating device. The shield of the cord may melt and it may cause a fire, electric shock, etc.
- Do not insert / disconnect the power plug with wet hands. It may cause an electric shock.
- When the power plug is to be disconnected, do not pull the power cord. The power cord may be damaged and it may cause a fire, electric shock, etc. Be sure to hold the power plug.



Cleaning

Be sure to pull out the power plug from the power outlet for safety when cleaning.



Pull out the power plug from the power outlet.

Set the caster stoppers.

When this unit is installed on the table with casters, set the caster stoppers. If the table moves, it may fall over, causing an injury.



Caution when carrying it.



When this unit is to be moved, apply a cover to the lens and be sure to disconnect the power plug from the power outlet and check that all external connection cords are removed before moving it. If not, the cord may be damaged and it may cause a fire, electric shock, etc.



Pull out the power plug from the power outlet.

Caution

■ Use of batteries.

- Do not use batteries not specified for this unit. Do not use new batteries mixed together with old ones. This may cause a fire, injury due to burst of battery, liquid leakage. 
- When inserting batteries in this unit, pay attention to the direction of the \oplus and \ominus polarity indications and insert the batteries correctly. If the polarities are confused, it may cause injury or damage near the unit due to burst batteries, liquid leakage, etc. 


■ When you are not going to use for a long time.

When you are not going use this unit for a long time because you are going on a trip, etc., be sure to pull out the power plug from the power outlet for safety. And also apply cover to the lens so that the lens is not damaged.




Pull out the power plug from the power outlet.


■ Clean inside the unit at least once two years.

Ask your dealer to clean inside the unit at least once two years. If the unit is left with too much dust inside as it is for a long this without cleaning, it may cause a fire. Especially it is effective to clean before the rainy season starts. Consult your dealer for the cost of the cleaning the inside the unit. 

■ Caution when replacing the lamp.


- When replacing the lamp, turn off the power of the projector and disconnect the power plug from the power outlet. Then wait for 45 minutes to allow the lamp cool: Failure to do so could result in a burn. 
- For disposal of used lamp, treat according to the instruction of community authorities.
- Since the lamp is made of glass, do not apply shock to it and do not scratch it.
- Also, do not use old lamp. This could also cause explosion of the lamp.
- If it is probable that the lamp has exploded (explosive sound is heard), disconnect the power plug from the power outlet and ask your dealer to replace lamp. The lamp is covered by front glass and air-tight structure, but, in rare cases, the reflector and the inside of the projector may be damaged by scattered broken pieces of glass, and broken pieces could cause injury when being handled.
- When the lamp has been replaced, reset the accumulated operation time of the lamp. Do not reset if the lamp has not been replaced.

Pull out the power plug from the power outlet.

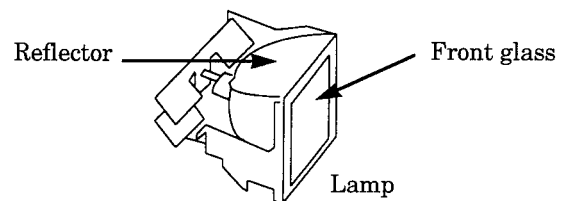

[General cautions]


■ Do not place this unit where it gets hot.

Be careful since if you place the unit outdoors, in a place exposed to direct sunlight or near a heating device, the cabinet and parts could be affected. 

■ Volume.

Use at the proper volume level so that it does not bother persons in the neighborhood. Especially, since the sound is likely to carry well at the night even at a low volume, consider the neighborhood to a good living environment.

■ Cleaning the lens.

To clean the lens, use a generally-available lens cleaning tissue (used for cleaning lens of camera, glasses, etc.). Be careful not to scratch the lens with a hard object. 



■ Cleaning the cabinet.

- Since many plastic materials are used on the surface of the cabinet, if the surface is cleaned using benzene, thinner, etc., it may change in quality or the coating may be peeled off. Avoid using chemicals.
- When a chemically-treated cloth is used, follow the cautions that come with the cloth.
- Do not spray a volatile agent such as insecticide on the unit. Do not leave a rubber or vinyl object touching the cabinet for a long time. It may cause the cabinet to change in quality or the coating to peel off.
- Clean the dirt from the cabinet and operation panel by dusting lightly with a soft cloth. If the dirt is conspicuous, wipe off with a cloth moistened with detergent diluted with water, then wipe off with a dry soft cloth.

■ Rest your eyes occasionally when viewing for a long time.


Names and functions of each part

Main unit

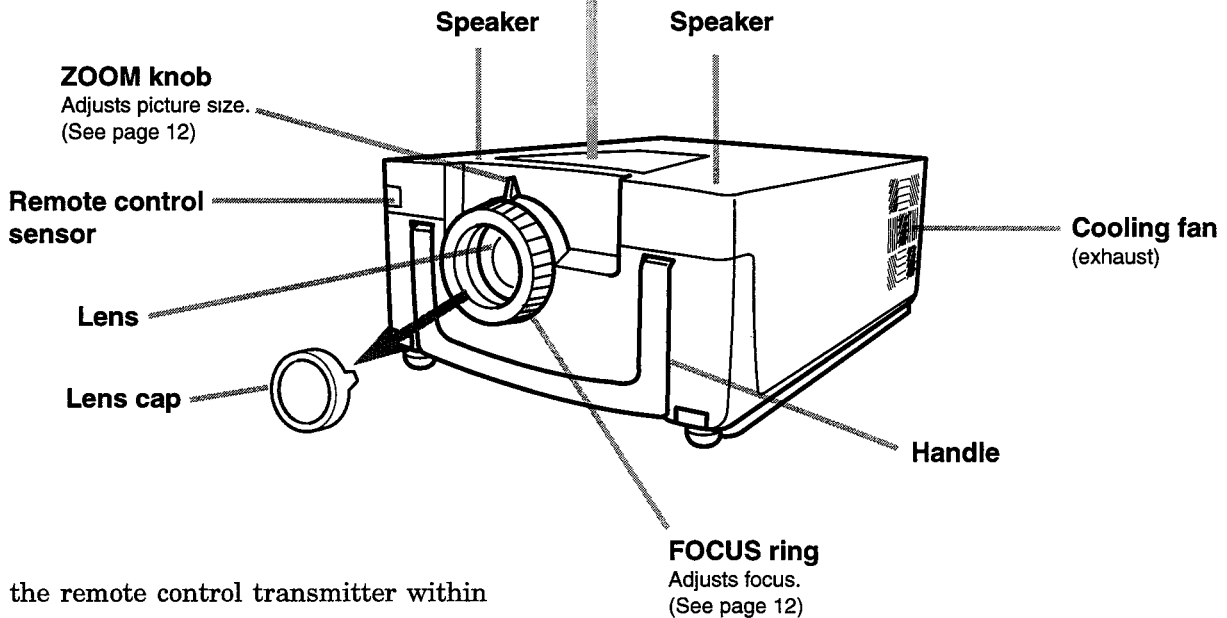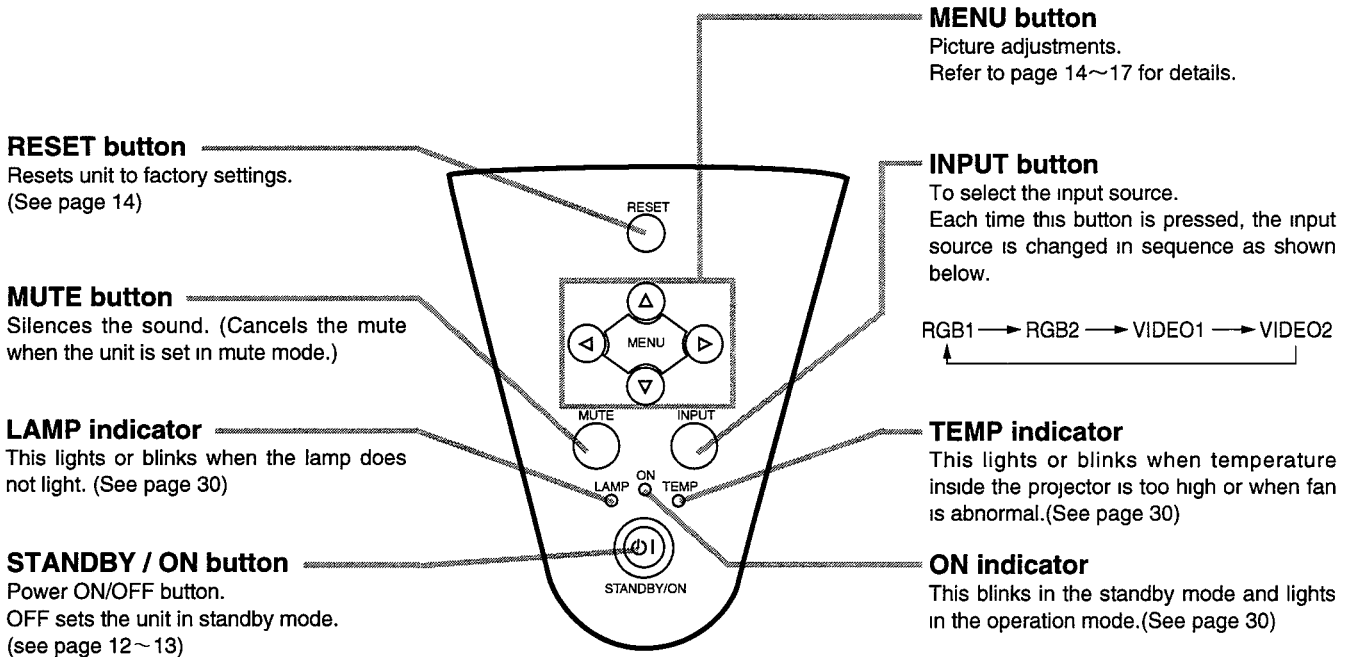


● Use the remote control transmitter within the range of about 16 feet from the remote control sensor and within 30° to both the left and right.

Names and functions of each part (continued)

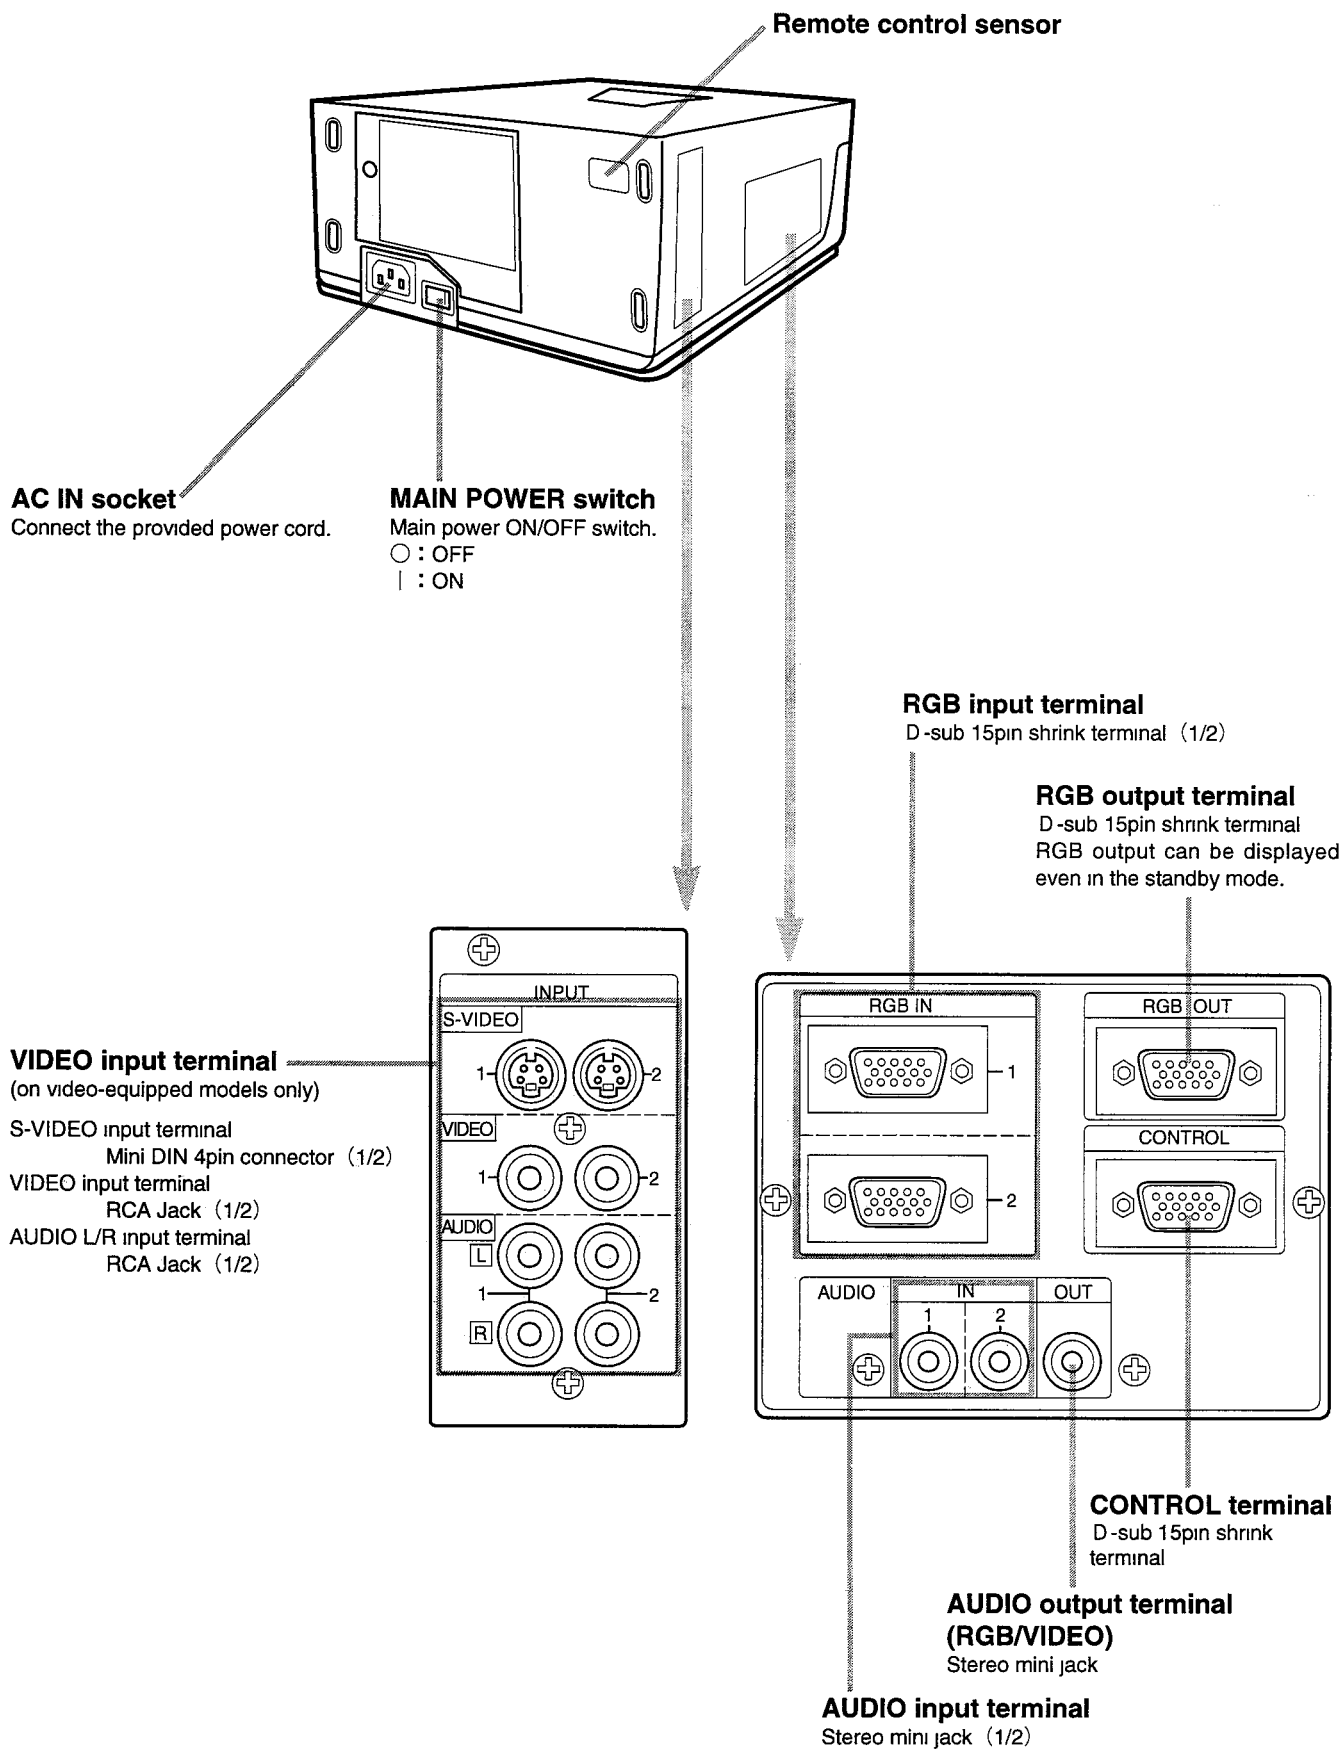

Names and functions of each part (continued)


Remote control transmitter

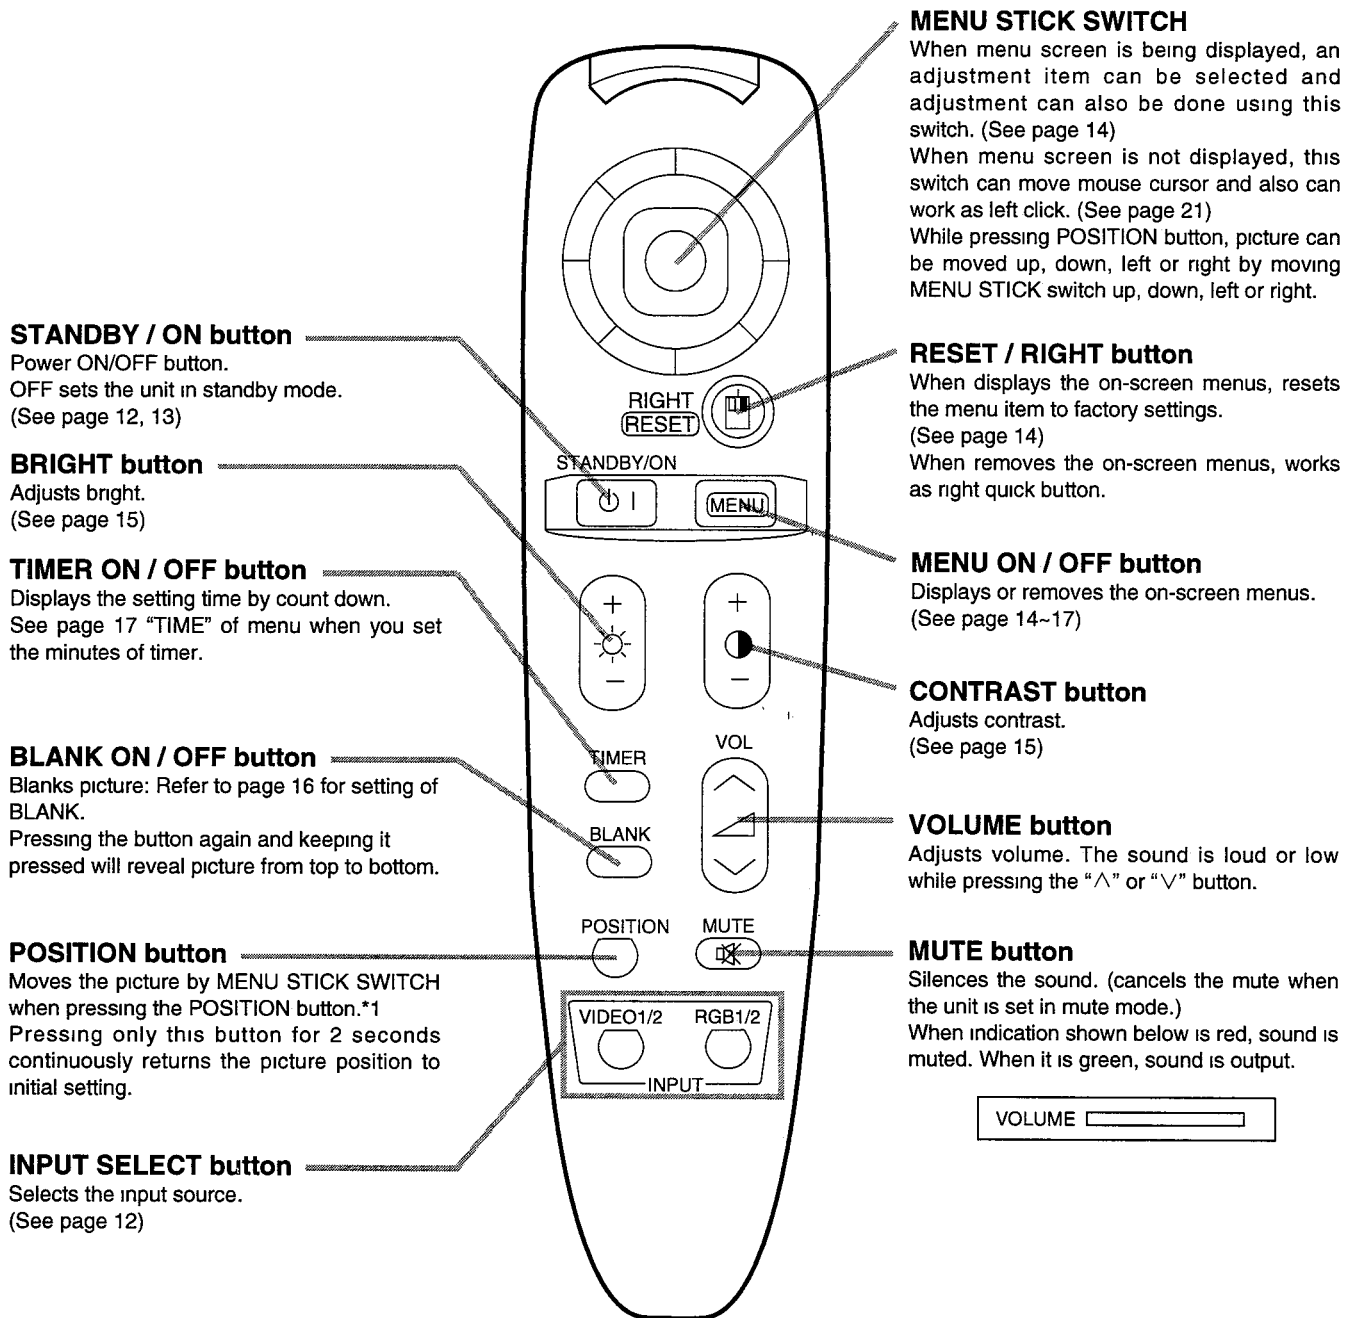

*1 Icon of POSITION

When the POSITION button is pressed, the icon indicating picture moving position will be displayed at the bottom right of the screen.

In the video mode, the icon is displayed but has no function.

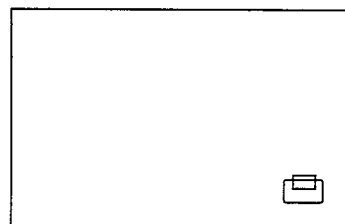


Names and functions of each part (continued)

How to insert batteries


Insert the provided batteries (AA or R6P) into the remote control transmitter.

- 1 Remove the battery compartment cover.

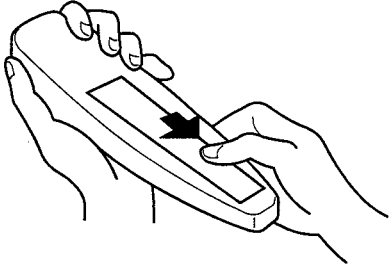

Slide the battery compartment cover in the direction of the arrow while pressing slightly down on it.

- 2 Insert the batteries as illustrated inside the battery compartment.

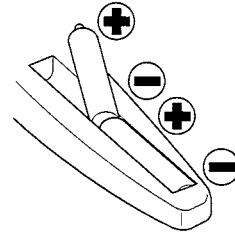

- 3 Replace the cover.

Caution Cautions on use of batteries

- Do not use batteries not specified for this unit. Also do not use old and new batteries together. It may cause a fire, injury due to burst of battery or liquid leakage.
- When inserting batteries, pay attention to the direction of the \oplus and \ominus polarity indications and insert the batteries correctly. If the polarities are confused, it may cause injury or damage near the unit due to a burst of battery or liquid leakage.

Caution Cautions on use


- Do not drop the remote control transmitter or apply any shock to it.
- Do not let the remote control transmitter get wet and do not put it on a wet object. It may cause a malfunction.
- If you are not going to use it for a long time, remove the batteries from the remote control transmitter.
- If operation of the remote control becomes difficult, replace the batteries.

Installation


Example of the projector and screen installation

Determine picture size and projection distance as illustrated below.

View from the top

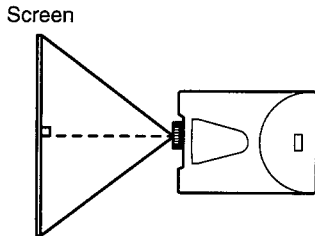

View from the side

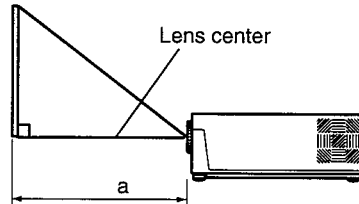

| Screen(inch) | a(inch) | |
|--------------|---------|---------|
| | Minimum | Maximum |
| 40 | 67 | 87 |
| 60 | 98 | 130 |
| 80 | 130 | 173 |
| 100 | 165 | 217 |
| 120 | 197 | 260 |
| 150 | 248 | 327 |
| 200 | 331 | — |

a:Distance from the projector to the screen.
(tolerance : $\pm 10\%$)

This screen size is full-screen size.(800 dots \times 600 dots)

Installation of liquid crystal projector

Please basically use liquid crystal projector at the horizontal position.



If you use liquid crystal projector by the lens up position, the lens down position and the side up position, this may cause the heat inside to build up and become the cause of damage.

Be especially careful not to install it with ventilation holes blocked.


How to use foot adjusters

Adjust the projection position using the foot adjusters at the bottom of the projector.

View from the front

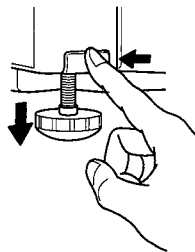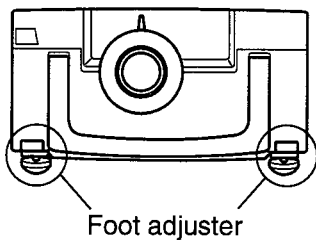


View from the side

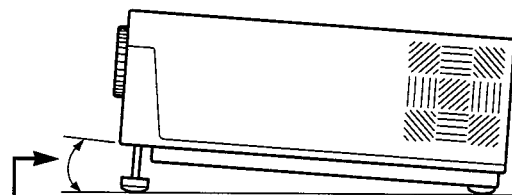

A viewing angle of $0^{\circ} \sim 9^{\circ}$ can be changed.

 
1. Lift up the projector and press the button of the adjuster to release the lock.
2. Adjust the projection angle, release the button of the adjuster and securely lock it.
3. To adjust the angle slightly, revolve the foot adjusters.



- Do not unlock the foot adjusters while you do not support the projector, to avoid falling of the projector and causing an injury.
- Do not revolve the foot adjusters by force, the foot adjusters is damaged.
- Securely lock the adjuster.
- Do not apply unnecessary force from the upper side when lifting the projector. Otherwise, projector may be damaged or a finger could be caught and cause injury.

Basic operations

To project the picture

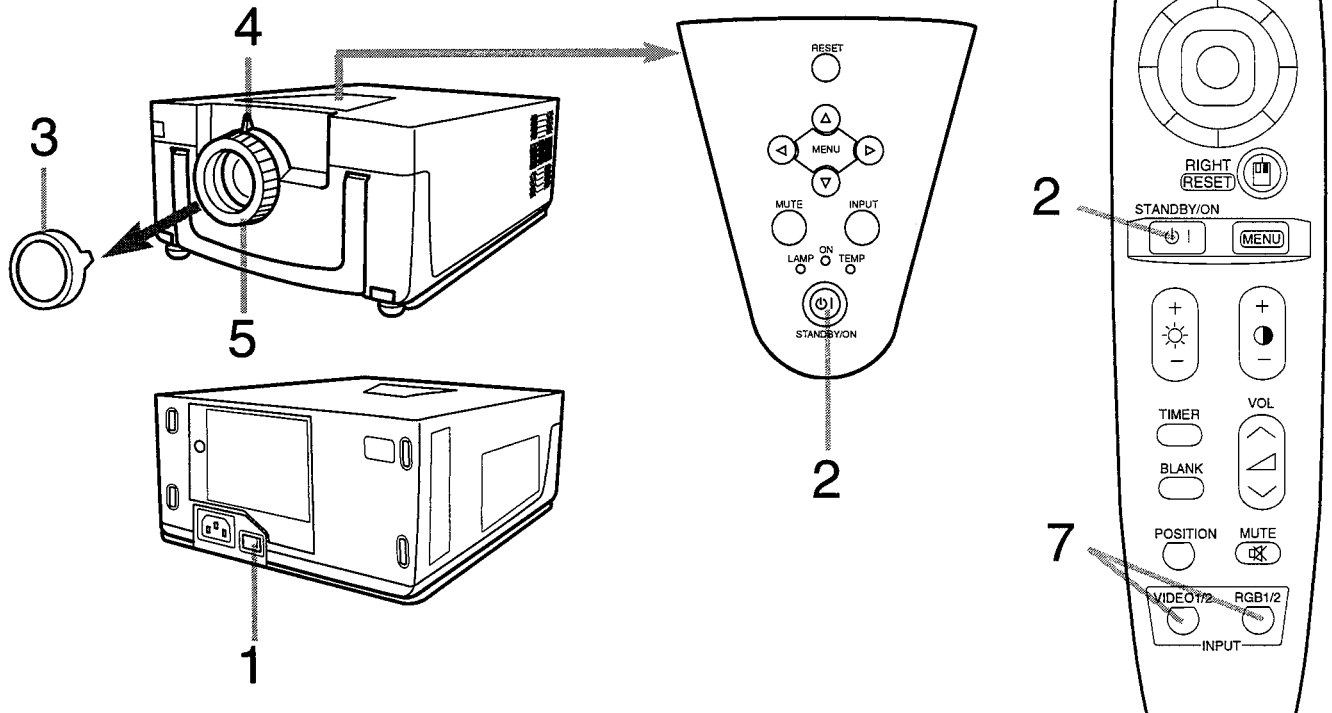

1 Turn the MAIN POWER switch of the projector on. [I : ON]
 ● The ON indicator will light up orange.

2 Press the STANDBY/ON button.
 ● The ON indicator blinks (green) and then lights (green).
 ● The ON indicator will blink green during warm-up and light up.
 ● Power cannot be turned on even if the STANDBY/ON button is pressed within 60 seconds after power is turned off, since the lamp has cooled preparing for next lighting.

3 Remove the lens cap.

4 Adjust picture size using the projection lens ZOOM knob.

5 Adjust focus using the projection lens FOCUS ring.

6 Power on all connected equipment.
 The method of connecting various equipment, see on the page 18~26.


7 Press the INPUT button or the INPUT SELECT (VIDEO or RGB) button to select the source of the signal to be projected on the screen.
 ● The selected signal input is displayed at the bottom right of the screen for 3 seconds.

Example on-screen display



Basic operations (continued)

To turn off the power

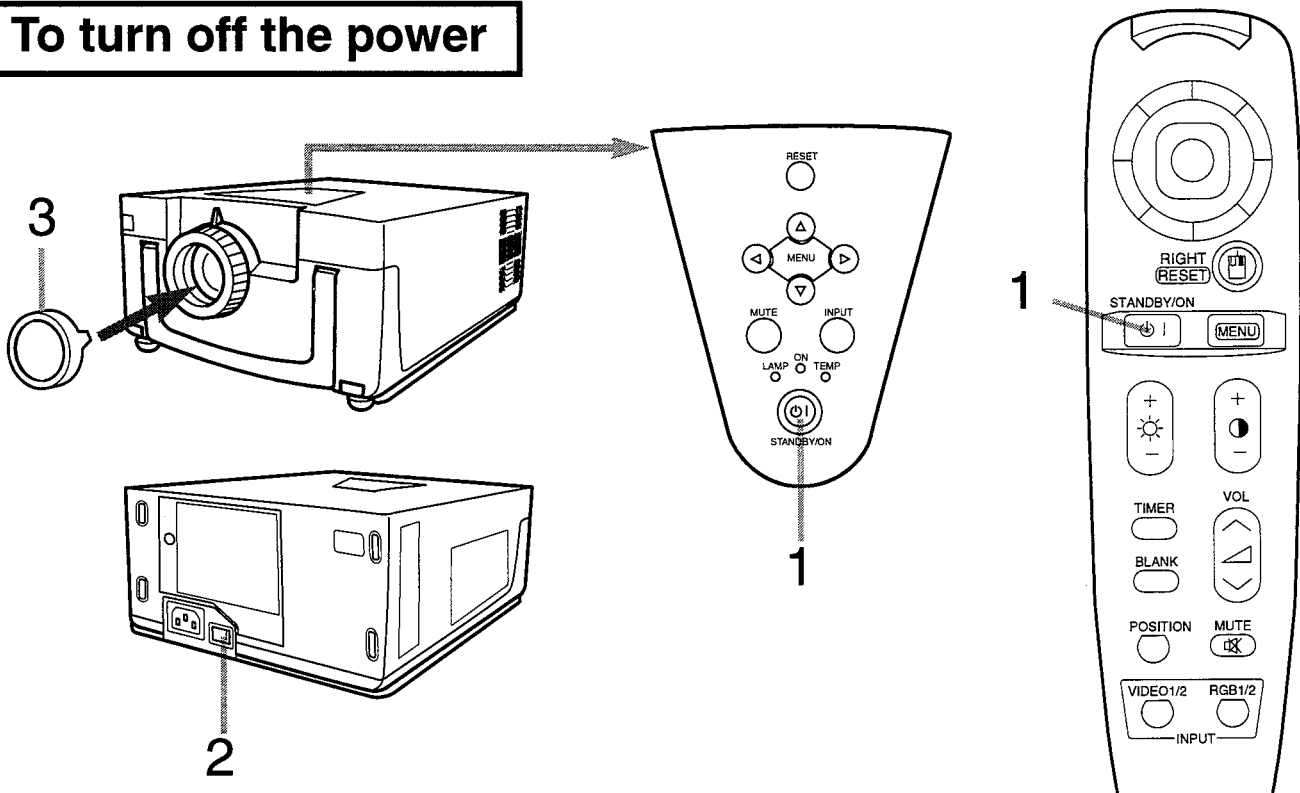

1 Press the STANDBY/ON button, for 1 second.

- The ON indicator lights up orange and the lamp turns off. (About 1 minute later), the fan stops and the indicator blinks orange.
- Press the STANDBY/ON button for short time (less than 1 second), the projector do not set in standby mode.

2 Turn the MAIN POWER switch of the projector off. [○: OFF]

3 Install the lens cap.

Caution

- To reduce temperature inside the projector (cooling down), fan will rotate for about 1 minute after the lamp is turned off.
- Do not turn off the MAIN POWER switch during the lamp on because the lamp is damaged.


PLUG&PLAY

This projector complies with VESA DDC1/2B specifications. PLUG&PLAY is a system with computer, peripherals (including projectors), and operating system.

It works when the projector is connected to DDC (Display Data Channel) ready computer that is running an operating system software that incorporates plug & play functionality.

(Only RGB 1)

Adjustments and functions

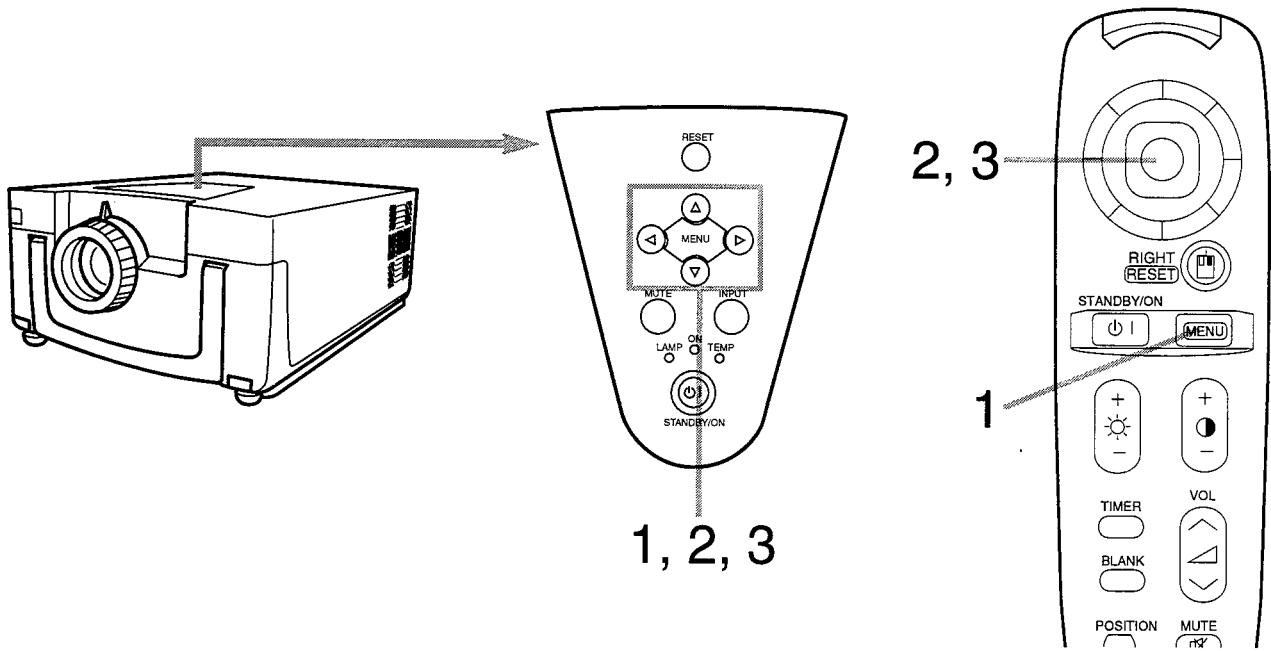

1 Press the MENU (▲ ▼ ◀ ▶) buttons or the MENU ON / OFF button.

- On-screen menus are displayed on the screen.

2 Select the menu to be adjusted using the MENU (◀ ▶) buttons or MENU STICK SWITCH.

- Menu displayed in green is selected.

3 Select the item to be adjusted using the MENU (▲ ▼ ◀ ▶) buttons or MENU STICK SWITCH.

- Item displayed in green can be adjusted.


When no operation is done for about 5 ~ 10 seconds, menu screen will go off.

Memory function

Individual memory functions are provided for the VIDEO1, VIDEO2, RGB1 and RGB2 input terminals. Adjustments are saved after power off.

To return to the initial setting

- Resetting menu items (SETUP, INPUT, IMAGE, OPT.)
 - (1) Select the menu item to return to the initial setting.
 - (2) Press the RESET button.
 - (3) Select the DEFAULT (To select the CANCEL is not changed).
(Display shown on the right will appear.)
- Resetting adjustment items (VOLUME, BRIGHT etc.)
 - (1) Select the adjustment item to return to the initial setting.
 - (2) Press the RESET button.

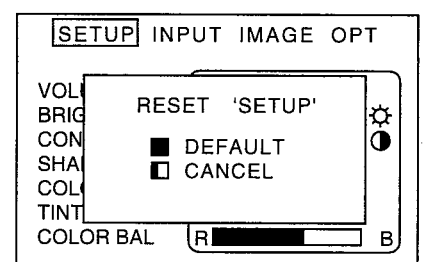


Adjustments and functions (continued)


SET UP

The menu SET UP serves for the change of parameters influencing the picture and for the move picture position.

RGB signal input

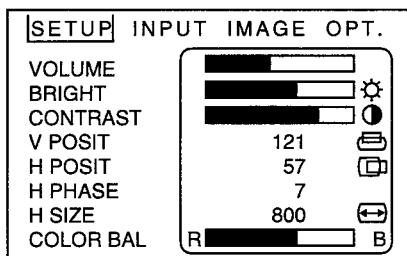

VIDEO signal input

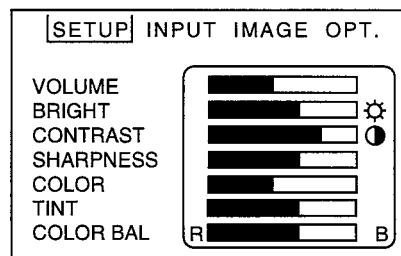

| Adjustment Item | Details of adjustment |
|------------------------------|---|
| VOLUME | Decrease ← → Increase |
| BRIGHT (BRIGHTNESS) | Dark ← → Bright |
| CONTRAST | Lower ← → Higher |
| SHARPNESS | Soft ← → Sharp |
| COLOR | Less ← → More |
| TINT | Red ← → Green |
| V.POSIT (V.POSITION) | Moves the picture up or down. |
| H.POSIT (H.POSITION) | Moves the picture left or right. |
| H.PHASE | Decreases the picture flicker. |
| H.SIZE | Widens or Narrows the horizontal size of the picture. |
| COLOR BAL (COLOR BALANCE) | for Red ← → for Blue |



Caution

- When start up screen is displayed ("NO INPUT IS DETECTED" or "SYNC IS OUT OF RANGE" is displayed), SETUP menu items other than VOLUME cannot be set.
- TINT cannot be adjusted with PAL/SECAM video signal input.
- TINT, COLOR and SHARPNESS cannot be adjusted with an RGB signal input.
- V.POSIT, H.POSIT, H.PHASE and H.SIZE cannot be adjusted with a VIDEO signal input.

Adjustments and functions (continued)

INPUT






The menu INPUT serves for the selection of input source.

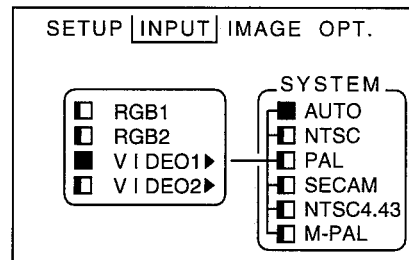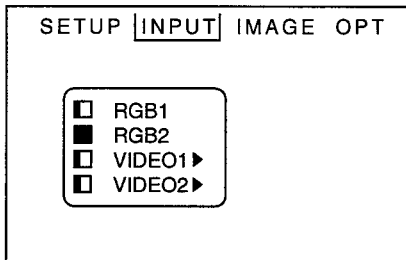

| Adjustment Item | Details of adjustment |
|-----------------|--|
| RGB 1 | Selects the RGB 1 terminal. |
| RGB 2 | Selects the RGB 2 terminal. |
| VIDEO 1 | Selects the VIDEO 1 terminal. |
| VIDEO 2 | Selects the VIDEO 2 terminal. |
| SYSTEM | Selects the video signal systems. When the picture (Video) is abnormal (no color or out of sync.), selects the input signal mode (NTSC, PALM, SECAM, NTSC4.43 and M-PAL). |

IMAGE

The menu IMAGE serves of the picture inversion.



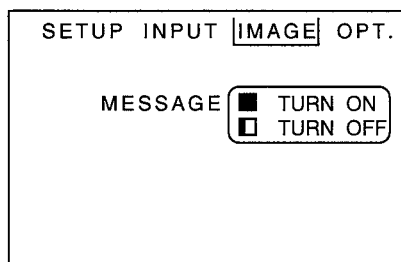
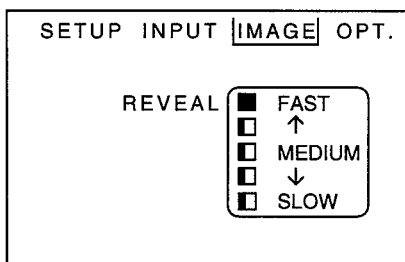
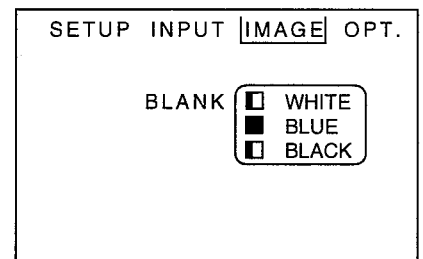
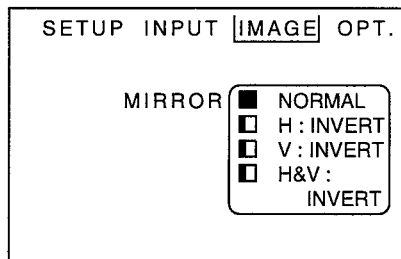
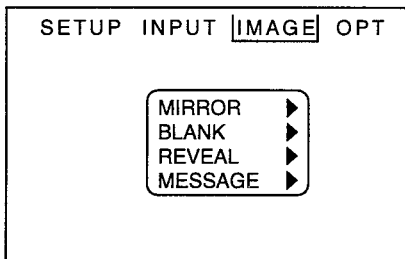


| Adjustment Item | Details of adjustment |
|-----------------|--|
| MIRROR | Inverts the picture horizontally or vertically. NORMAL Not invert. H:INVERT Inverts the picture horizontally. V:INVERT Inverts the picture vertically. H&V:INVERT Inverts the picture horizontally and vertically. |
| BLANK | Selects the blank color of signal or pressing BLANK ON button. When start up screen is displayed, screen will blank out 5 minutes later. |
| REVEAL | Selects the speed of revelation. See page 9 "BLANK ON button. |
| MESSAGE | Turn off the on-screen message. (VOLUME, Input selection display) |

Adjustments and functions (continued)

OPT.

The menu OPT. allows you to control communication function etc.

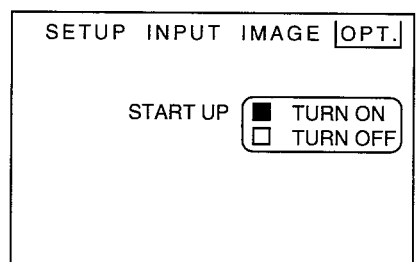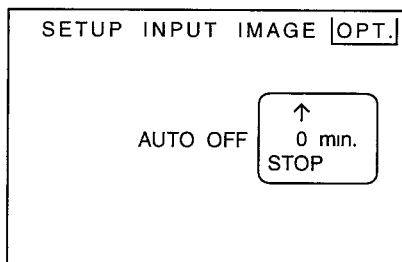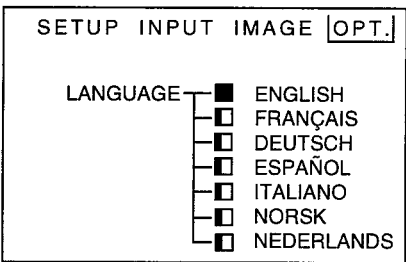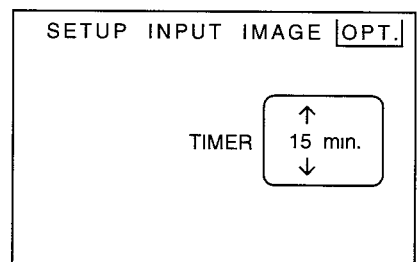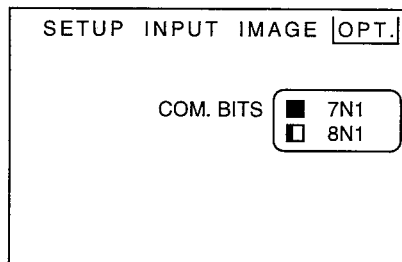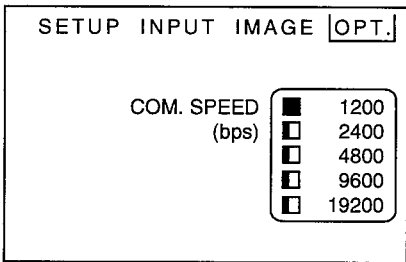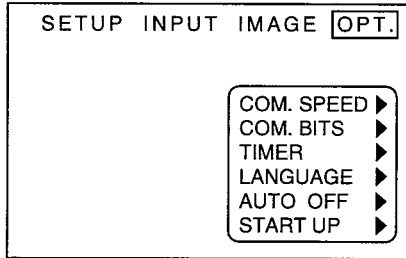


| Adjustment Item | Details of adjustment |
|---|---|
| COM. SPEED (COMMUNICATION SPEED) | Selects the data speed of transmission. (five kinds) |
| COM. BITS (COMMUNICATION BITS) | Selects the data format of transmission. 7N1...7 data bits, No parity, 1 stop bit. 8N1...8 data bits, No parity, 1 stop bit. |
| TIMER | Sets the minutes of timer. (0~99) |
| LANGUAGE | Selects the language on-screen menu. (English, Francais, Deutsch, Espanol, Italiano, Norsk, Nederlands) |
| AUTO OFF | Sets time (minutes) from the start of displaying start up screen (No input is detected or sync is out of range) to turning the power OFF. "0" is stop and another "1~99" |
| START UP | Set/releases start up screen displayed when power is turned on, or when no input is detected or sync is out of range. |

Connection to the video signal terminals

1. Input signal

| | | |
|----------------|--------|---|
| S-VIDEO signal | | Luminance signal 1.0Vp-p, 75Ω termination Chrominance signal 0.286Vp-p (burst signal), 75Ω termination |
| VIDEO signal | | 1.0Vp-p, 75Ω termination |
| AUDIO signal | Input | 200mVrms, 20kΩ below (MAX 3.0Vp-p) |
| | Output | 0~200mVrms, 1kΩ |

2. Signal input terminal

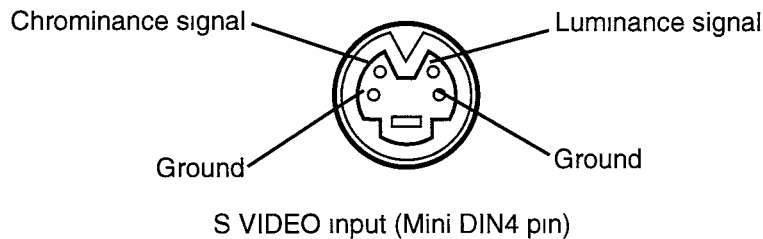

Caution

Video input signal terminals have priority in the following order.

- ① S-VIDEO input terminal ② RCA jack input terminal

Even when the video signal is displayed, only an audio signal is output to RGB audio output terminals.


Connection to the RGB signal terminal

1. Input / output signal

| | | |
|------------------------|--------|--|
| Video signal | | Analog 0.7Vp-p 75Ω termination (Positive polarity) |
| Horizontal sync signal | | TTL level (Positive/negative polarity) |
| Vertical sync signal | | TTL level (Positive/negative polarity) |
| Composite sync signal | | TTL level |
| Audio signal | Input | 200mVrms, 20kΩ below (MAX 3.0Vp-p) |
| | Output | 0~200mVrms, 1kΩ |

2. Signal input / output terminal

| | | | |
|---|----------------------|----|--------------------------------------|
| 1 | Video signal (Red) | 9 | N.C |
| 2 | Video signal (Green) | 10 | Ground |
| 3 | Video signal (Blue) | 11 | N.C |
| 4 | N.C | 12 | DDC (Display Data channel) RGB1 only |
| 5 | N.C | 13 | Horizontal/Composite sync signal |
| 6 | Ground (for R) | 14 | Vertical sync signal |
| 7 | Ground (for G) | 15 | DDC (Display Data channel) RGB1 only |
| 8 | Ground (for B) | | |

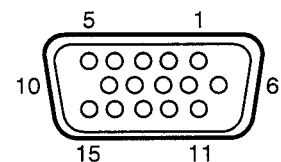

D-sub 15pin shrink terminal (Female)

Caution

Do not use RGB cable other than that specified.

Some RGB cable may not operate DDC (Display Data Channel) because there are not connect from pin NO. ⑮ to pin NO. ⑫ .

Connection to the RGB signal terminal(continued)

3. Example of computer signal

| Resolution H × V | fH (kHz) | fV (Hz) | Standard Type | Note 1 | Note 2 | Note 3 | Display Dots H × V |
|---------------------|-------------|------------|------------------|----------------|-------------------------------|------------|-----------------------|
| 640 × 350 | 31.5 | 70.1 | | VGA-1 | | Expanded | 800 × 490 |
| 640 × 400 | 24.8 | 56.4 | | NEC PC9800 | | Expanded | 800 × 560 |
| 640 × 400 | 31.5 | 70.1 | | VGA-2 | | Expanded | 800 × 560 |
| 640 × 480 | 43.3 | 85.0 | VESA | | | Expanded | 800 × 600 |
| 640 × 480 | 31.5 | 59.9 | VESA | VGA-3 | | Expanded | 800 × 600 |
| 640 × 480 | 35.0 | 66.7 | | Mac13" mode | SW 1 ON SW 5 ON SW 6 ON | Expanded | 800 × 600 |
| 640 × 480 | 37.9 | 72.8 | VESA | | | Expanded | 800 × 600 |
| 640 × 480 | 37.5 | 75.0 | VESA | | | Expanded | 800 × 600 |
| 800 × 600 | 35.2 | 56.3 | VESA | SVGA(56Hz) | | | 800 × 600 |
| 800 × 600 | 37.9 | 60.3 | VESA | SVGA(60Hz) | | | 800 × 600 |
| 800 × 600 | 48.1 | 72.2 | VESA | SVGA(72Hz) | | | 800 × 600 |
| 800 × 600 | 46.9 | 75.0 | VESA | SVGA(75Hz) | | | 800 × 600 |
| 800 × 600 | 53.7 | 85.1 | VESA | SVGA(85Hz) | | | 800 × 600 |
| 832 × 624 | 49.7 | 74.5 | | Mac16" mode | SW 2 ON SW 5 ON SW 6 ON | Partial | 800 × 600 |
| 1024 × 768 | 48.4 | 60.0 | VESA | XGA(60Hz) | | Compressed | 768 × 576 |
| 1024 × 768 | 56.5 | 70.1 | VESA | XGA(70Hz) | | Compressed | 768 × 576 |
| 1024 × 768 | 60.0 | 75.0 | VESA | XGA(75Hz) | | Compressed | 768 × 576 |

Note 1: Signal mode


Note 2: MAC adapter is necessary to the resolution mode.

Projector is compatible with 13 inch mode and 16 inch mode.

MAC13"mode=switch 1, switch 5 and switch 6 are ON.

MAC16"mode=switch 2, switch 5 and switch 6 are ON.

Note 3: Display mode

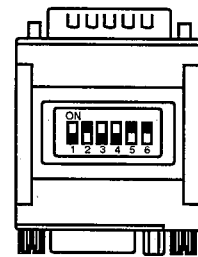

(Example 16inch mode)


Caution

- Some input source may not be displayed properly because they are not compatible with the projector.
- Some input source may not be displayed in full size as shown "Display Dots".

Connection to the RGB signal terminal(continued)


4. Initial set signals

The following signals are initially set. The settings may be different depending on the computer type. In this case, adjust the settings referring to pages 14, 15.

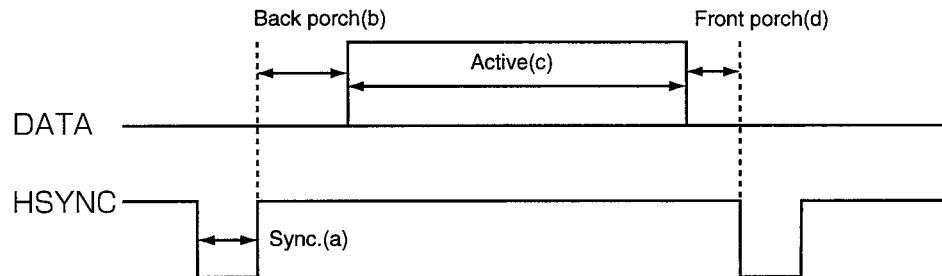

| Computer/signal | Horizontal Timing (μ s) | | | |
|-----------------|------------------------------|-----|------|-----|
| | a | b | c | d |
| VGA-1 | 3.8 | 1.9 | 25.4 | 0.6 |
| PC-9800 | 3.0 | 3.8 | 30.4 | 3.0 |
| VGA-2 | 3.8 | 1.9 | 25.4 | 0.6 |
| VESA (85Hz) | 1.6 | 2.2 | 17.8 | 1.6 |
| VGA-3 | 3.8 | 1.9 | 25.4 | 0.6 |
| Mac 13inch mode | 2.1 | 3.2 | 21.2 | 2.1 |
| VESA (72Hz) | 1.3 | 4.1 | 20.3 | 0.8 |
| VESA (75Hz) | 2.0 | 3.8 | 20.3 | 0.5 |
| SVGA (56Hz) | 2.0 | 3.6 | 22.2 | 0.7 |

| Computer/signal | Horizontal Timing (μ s) | | | |
|-----------------|------------------------------|-----|------|-----|
| | a | b | c | d |
| SVGA (60Hz) | 3.2 | 2.2 | 20.0 | 1.0 |
| SVGA (72Hz) | 2.4 | 1.3 | 16.0 | 1.1 |
| SVGA (75Hz) | 1.6 | 3.2 | 16.2 | 0.3 |
| SVGA (85Hz) | 1.1 | 2.7 | 14.2 | 0.6 |
| Mac 16inch mode | 1.1 | 3.9 | 14.5 | 0.6 |
| XGA VESA (60Hz) | 2.1 | 2.5 | 15.8 | 0.4 |
| XGA VESA (70Hz) | 1.8 | 1.9 | 13.7 | 0.3 |
| XGA VESA (75Hz) | 1.2 | 2.2 | 13.0 | 0.2 |

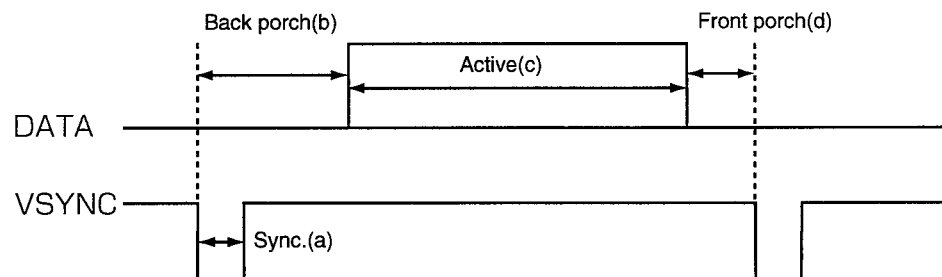


| Computer/signal | Vertical Timing (lines) | | | |
|-----------------|-------------------------|----|-----|----|
| | a | b | c | d |
| VGA-1 | 2 | 59 | 350 | 38 |
| PC-9800 | 8 | 25 | 400 | 7 |
| VGA-2 | 2 | 34 | 400 | 13 |
| VESA (85Hz) | 3 | 25 | 480 | 1 |
| VGA-3 | 2 | 33 | 480 | 10 |
| Mac 13inch mode | 3 | 39 | 480 | 3 |
| VESA (72Hz) | 3 | 28 | 480 | 9 |
| VESA (75Hz) | 3 | 16 | 480 | 1 |
| SVGA (56Hz) | 2 | 22 | 600 | 1 |

| Computer/signal | Vertical Timing (lines) | | | |
|-----------------|-------------------------|----|-----|----|
| | a | b | c | d |
| SVGA (60Hz) | 4 | 23 | 600 | 1 |
| SVGA (72Hz) | 6 | 23 | 600 | 37 |
| SVGA (75Hz) | 3 | 21 | 600 | 1 |
| SVGA (85Hz) | 3 | 27 | 600 | 1 |
| Mac 16inch mode | 3 | 39 | 624 | 1 |
| XGA VESA (60Hz) | 6 | 29 | 768 | 3 |
| XGA VESA (70Hz) | 6 | 29 | 768 | 3 |
| XGA VESA (75Hz) | 3 | 28 | 768 | 1 |

Connection to the control signal terminal

1. Control signal terminal

| Pin No. | RS-232C | Mouse | | |
|---------|---------|-------|-------|--------|
| | | PS/2 | ADB | Serial |
| 1 | | | | TDM |
| 2 | | CLK | SDATA | |
| 3 | | DATA | | |
| 4 | | | | |
| 5 | | | | |
| 6 | | SEL0 | | SEL0 |
| 7 | | | SEL1 | SEL1 |
| 8 | | | | READY |
| 9 | | | | |
| 10 | GND | GND | GND | GND |
| 11 | | | | |
| 12 | | +5V | +5V | |
| 13 | RDP | | | |
| 14 | TDP | | | |
| 15 | | | | |

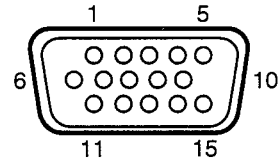

D-sub 15pin shrink terminal (Male)

Caution

Turn off the power of both the projector and computer before connecting.
 Connect the computer to the control terminal of the projector using an appropriate cable.
 Refer to the instruction manual of each device before connecting.

2. Mouse emulation


- (1) Connect the projector and the mouse terminal of computer using an appropriate cable, while the projector and the computer are turn off.
- (2) Turn the power of the projector on and press the STANDBY/ON switch. The indicator will light. (The ON indicator will light up orange.).
- (3) Press the INPUT of the projector or RGB 1/2 button of the remote control transmitter and select the input connection.
- (4) Turn on the computer.
- (5) Start mouse emulation mode.
 If can not start mouse emulation, reset the computer. (With soft reset or reset switch)
- (6) See on the page 9 about to operate the remote control transmitter.
 Caution : Mouse cannot be operated while start up screen or menu screen is being displayed.

Caution


- In some note computers which have internal pointing device, mouse emulation don't work without setting the internal pointing device disabled. In this case, set the internal pointing device disabled in BIOS setting. After setting in BIOS, operate (1) ~ (5) Please check its hardware manuals to disable internal pointing device in BIOS setting.
- In some computers, mouse emulation don't work without the utility program. In this case, see and check the operating manuals of the computer.

Connection to the control signal terminal (continued)


PS/2 mouse

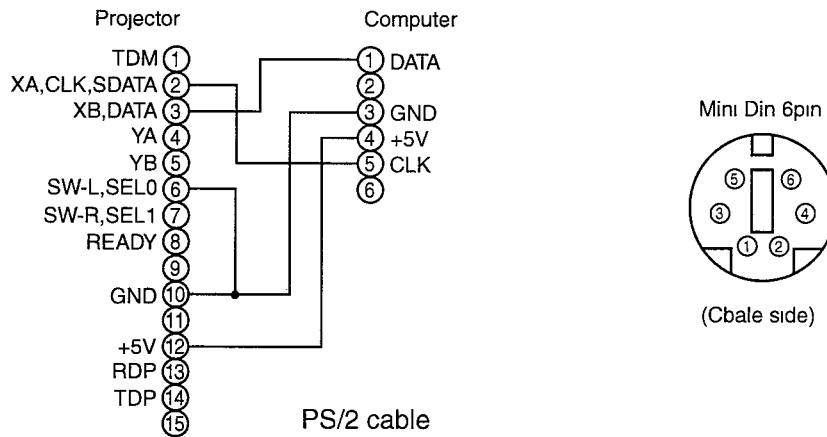

ADB (Mac) mouse

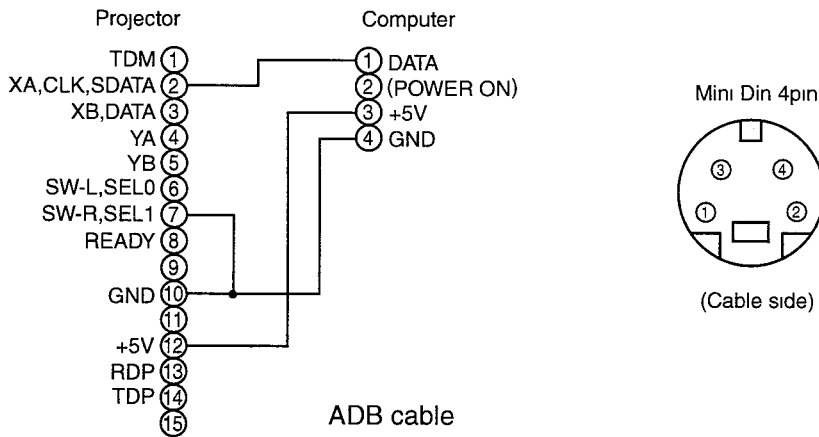

Serial mouse

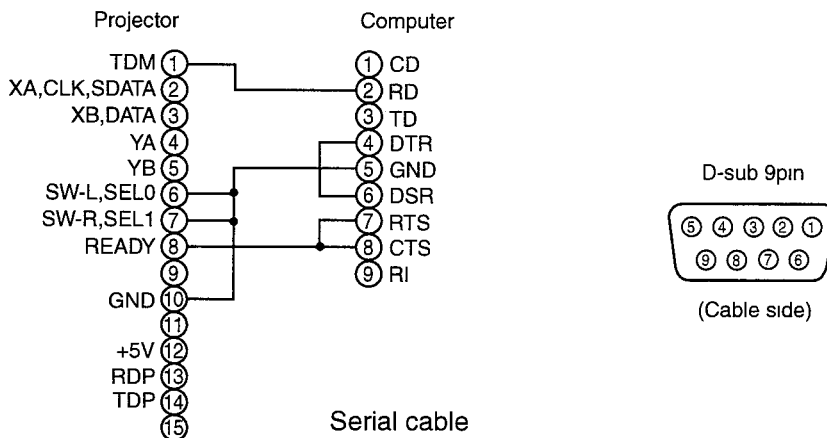

Caution

Serial mouse cannot be operated with provided RS-232C cable.


Purchase exclusive serial mouse cable separately.

Type name : SC-MS200 (Serial mouse) Parts No. : EW02881

Connection to the control signal terminal (continued)

3. Communication

- (1) Connect the projector and computer using RS 232C cable.
- (2) Turn off the computer and after computer is setting up, turn on the projector.
- (3) Select the data speed (COM.SPEED) and the data format (COM.BITS) of the projector. (See page 17)
- (4) Start communication.

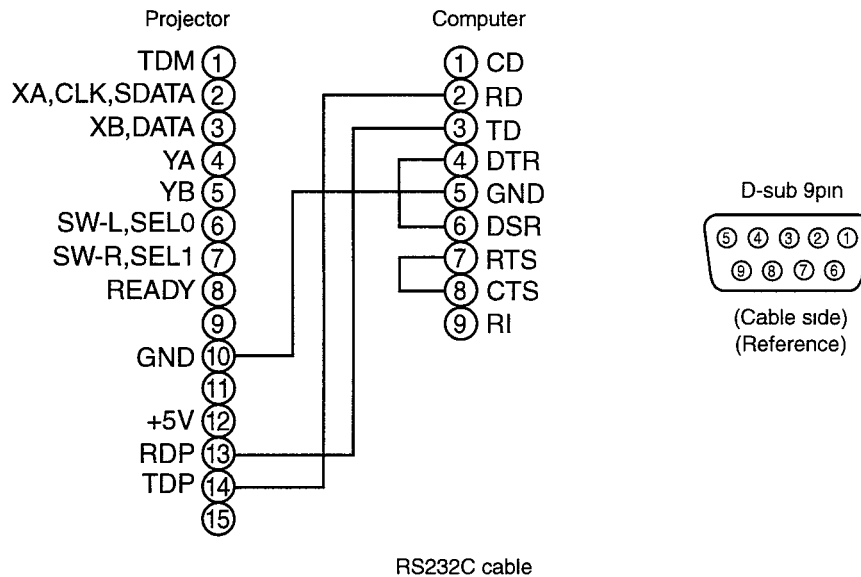

4. Control command table

Control command table

| Item | Projector→Computer | | | Projector→Computer | | | | | | |
|---------------|--------------------|-----|------|--------------------|-----|----------|-----|------|--------------|-----|
| | Reply code | | | Ask code | | Set code | | | Default code | |
| | 1st | 2nd | data | 1st | 2nd | 1st | 2nd | data | 1st | 2nd |
| MOUSE | 11h | 05h | +1 | 20h | 05h | 31h | 05h | +1 | 40h | 05h |
| COMMUNICATE | 11h | 06h | +1 | 20h | 06h | 31h | 06h | +1 | 40h | 06h |
| POWER | 11h | 11h | +1 | 20h | 11h | 31h | 11h | +1 | — | |
| MIRROR | 11h | 14h | +1 | 20h | 14h | 31h | 14h | +1 | 40h | 14h |
| INPUT | 11h | 21h | +1 | 20h | 21h | 31h | 21h | +1 | 40h | 21h |
| (VIDEO)SYSTEM | 12h | 22h | +2 | 20h | 22h | 32h | 22h | +2 | 40h | 22h |
| VOLUME | 11h | 23h | +1 | 20h | 23h | 31h | 23h | +1 | 40h | 23h |
| MUTE | 11h | 24h | +1 | 20h | 24h | 31h | 24h | +1 | 40h | 24h |
| BRIGHT | 13h | 31h | +3 | 20h | 31h | 33h | 31h | +3 | 40h | 31h |
| CONTRAST | 13h | 32h | +3 | 20h | 32h | 33h | 32h | +3 | 40h | 32h |
| COLOR | 13h | 33h | +3 | 20h | 33h | 33h | 33h | +3 | 40h | 33h |
| TINT | 13h | 34h | +3 | 20h | 34h | 33h | 34h | +3 | 40h | 34h |
| SHARPNESS | 13h | 35h | +3 | 20h | 35h | 33h | 35h | +3 | 40h | 35h |
| H. PHASE | 13h | 37h | +3 | 20h | 37h | 33h | 37h | +3 | 40h | 37h |
| H. POSIT | 14h | 38h | +4 | 20h | 38h | 34h | 38h | +4 | 40h | 38h |
| H. SIZE | 14h | 36h | +4 | 20h | 36h | 34h | 36h | +4 | 40h | 36h |
| V. POSIT | 14h | 3Ah | +4 | 20h | 3Ah | 34h | 3Ah | +4 | 40h | 3Ah |
| BLANK | 11h | 41h | +1 | 20h | 41h | 31h | 41h | +1 | 40h | 41h |
| REVEAL | 11h | 42h | +1 | 20h | 42h | 31h | 42h | +1 | — | |

Connection to the control signal terminal (continued)

Control data table

| Item | Data code |
|--------------|--|
| MOUSE | 00h=stop mouse emulation. 01~ 7Fh=start mouse emulation |
| COMMUNICATE | 0Xh=8N1 1Xh=7N1 X0h=1200bps, X1h=2400bps, X2h=4800bps, X3h=9600bps, X4h=19200bps |
| POWER | 1Eh=Power off (Standby mode), 1Fh=Power on |
| MIRROR | 00h=Normal, 01h=H:Invert, 02h=V:Invert, 03h=H&V:Invert |
| INPUT | 11h=VIDEO1, 12h=VIDEO2, 21h=RGB1, 22h=RGB2 |
| VIDEO SYSTEM | 00h 00h=Auto, 00h 01h=NTSC, 00h 04h=NTSC4.43 00h 02h=PAL, 00h 03h=SACAM, 00h 05h=M-PAL |
| VOLUME | 00h (min) ~ 24h (max) |
| MUTE | 00h=Mute off, 01h=Mute on |
| BRIGHT | 00h 00h 00h (dark) ~ 00h 00h 24h (brite) |
| CONTRAST | 00h 00h 00h (lower) ~ 00h 00h 24h (higher) |
| COLOR | 00h 00h 00h (less) ~ 00h 00h 24h (more) |
| TINT | 00h 00h 00h (red) ~ 00h 00h 24h (green) |
| SHARPNESS | 00h 00h 00h (soft) ~ 00h 00h 24h (sharp) |
| H. PHASE | 00h 00h 00h ~ 00h 00h 1Fh |
| H. POSIT | 00h 00h 00h 00h (left) ~ 00h 00h 37h 04h (right) |
| H. SIZE | 00h 00h 78h 05h (narrow) ~ 00h 00h 30h 0Eh (wide) |
| V. POSIT | 00h 00h 01h 00h (down) ~ 00h 00h 58h 04h (up) |
| BLANK | 0Xh=Blank off 1Xh=Blank on bit0 0=Blue off, 1=Blue on, bit1 0=Green off, 1=Green on bit2 0=Red off, 1=Red on, bit3 0=Not change, 1=change |
| REVEAL | X1h=Reveal down, X4h=Reveal right, X=0 (slow) ~ 7 (fast) |

Caution If computer sends the undefined command code or data code, Projector can not guarantee operation.

Command is consisted of 2 command bytes and following data bytes.

1-st byte indicates the kinds of commands and the length of command.

- '0xH' : Error-reply Projector sends to computer.
- '1xH' : Command reply Projector sends to computer.
- '2xH' : Ask command Computer sends to Projector.
- '3xH' : Set command Computer sends to Projector.
- '4xH' : Default set command Computer sends to Projector
- '5xH' - 'FxH' : Reserved
- 'x' indicates the length of data bytes.

2-nd byte indicates the command code 'yy' as command table.

Data table shows the data byte.

Connection to the control signal terminal (continued)

The procedure of getting the Projector status

- (1) Computer sends the command '20H'+yyH' to Projector.
- (2) Projector reply the command '1xH'+yyH'+data bytes.

The procedure of setting the Projector status

- (1) Computer sends the command '3xH'+yyH'+data bytes.
- (2) Projector changes it's status.
- (3) Projector reply the command '1xH'+yyH'+data bytes which indicate status.

Caution

- (3) data bytes is not always same as (1) data bytes. If projector cannot realize the status of (1) data bytes, projector set the proper status and reply this new setting data bytes or projector reply the error reply '0xH'+yyH'+data bytes same as (1).
- When only power control (POWER COMMAND) is performed, it takes about 2~80 seconds between sending set code and receiving answering code.

The procedure of default setting the Projector status

- (1) Computer sends the command '40H'+yyH'
- (2) Projector changes it's status to default setting.
- (3) Projector reply the command '1xH'+yyH'+data bytes which indicate default.

Caution

If projector replies '4Dh', (before command code, etc.) computer ignores '4Dh'

The example of command error

When projector cannot accept command from PC, error code '00H'+yyH' is sent back.

(in a case when command code '2xH', '3xH' or '4xH'+yyH'+data is sent from PC to projector)

The example of data error

When projector cannot accept command from PC, error code with data '00H'+yyH'+data is sent back as it is. (in a case when command code '2xH', '3xH' or '4xH'+yyH'+data is sent from PC to projector)

When data is longer than required data code length, projector ignores excess data code.

When data is shorter than required data code length, projector sends back error code shown above.

The example of framing error

After setting to 1200bps 7N1, projector sends error code '70H'+70H' up to 10 times at intervals of 1 second until any answer is received. When projector receives framing error code ('70H'+70H'), '12H'+03H'+03H'+10H' is sent with 1200 bps 7N1.

The interval of command bytes and data bytes


After command code '2xH', '3xH' or '4xH' is sent from PC, if command or data is not sent within 500ms, projector sends back error command '70H'+70H'. If no answer is sent within 1 second from that time, framing error is assumed.

Caution

- The interval of command bytes and data bytes must be over 1mS and under 500mS. If it is under 1mS, it may be treat as framing error.
- After projector has sent back answer code, when next command is to be sent from PC, allow for an interval of 40ms or more between answer code and other code.


Example of system setup

Connecting various equipment.

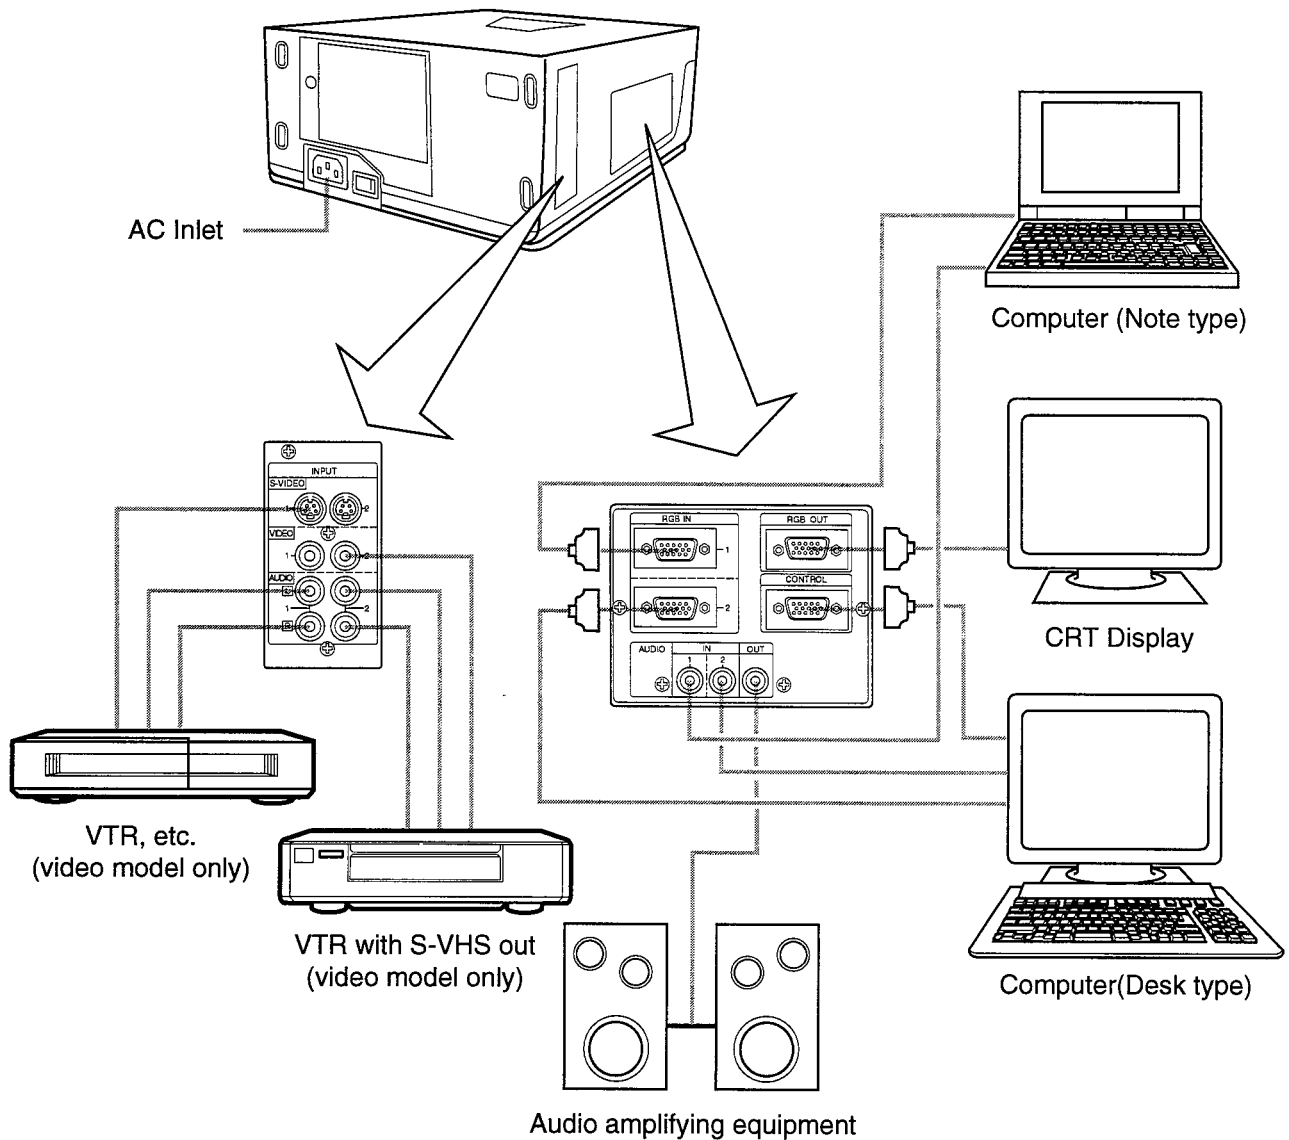

Caution

- To protect from radio interference, core is attached to each provided or optional cable: Do not use cables other than provided cables and optional cables. Since both ends of audio cable are the same shape, either end can be connected to any side. However, use the cable with the core set to the projector side.

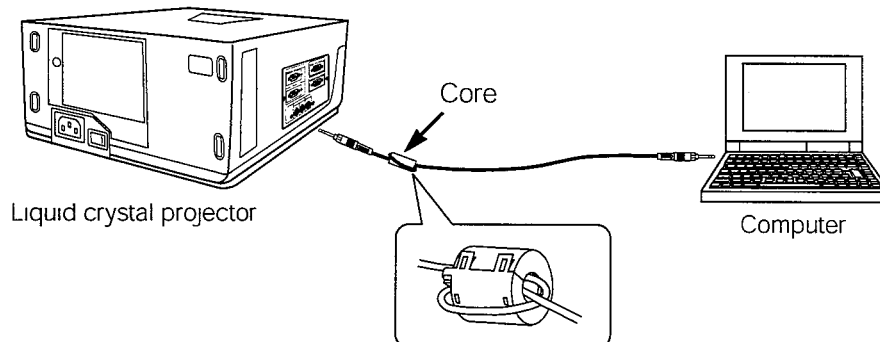


- Turn power off to all devices before connecting.
- Refer to the instruction manual of each device before connecting.

Cleaning the air filter

Clean the air filter about every 100 hours or when "CHECK THE AIR FLOW" is displayed.

1 Turn the main power switch off and disconnect the power plug from the power outlet.


2 Remove the air filter from the bottom.

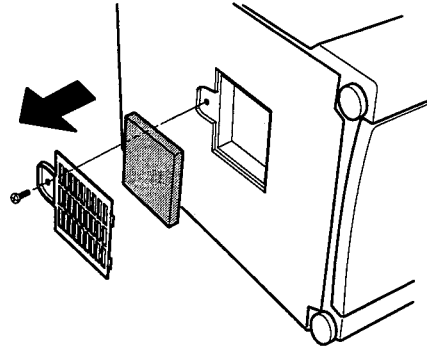

3 Clean the air filter using a vacuum cleaner.

- When air filter is very dirty, wash it using neutral detergent diluted with water, and dry well.

4 Install the air filter.

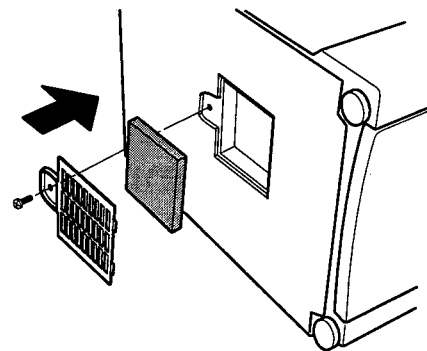

Caution

- If air filter is stuffed with dust, etc., protection circuit will turn the power off.
- "CHECK THE AIR FLOW" is displayed when you block the ventilation holes.

Lamp

Light source lamp has a service life.

The picture will become dark or color will be poor when the lamp is used for a long time.

If usage of lamp is continued in such cases, it could cause a malfunction. Replace lamp with new one.

As reference for replacement time, indicator will operate or message will be displayed when the power is turned on, as shown on page 29~30. In these cases the lamp should be replaced. Consult your dealer.

Caution

Also LAMP indicator will light when the lamp becomes too hot. Turn off the power and let the projector cool for 45 minutes. Turn on. If LAMP indicator still lights up red, contact your dealer.

1. How to replace lamp

(Option lamp : Lamp unit CP-S830W/E DT00171)




**HIGH VOLTAGE
HIGH TEMPERATURE
HIGH PRESSURE**

When replacing lamp, turn off and remove AC cord, wait 45 minutes to let lamp cool. High-pressure lamp when hot, may explode if improperly handled.

Caution


- For disposal of used lamp, treat according to the instruction of community authorities.
- Since the lamp is made of glass, do not apply shock to it and do not scratch it.
- Also, do not use old lamp. This could also cause explosion of the lamp.
- If it is probable that the lamp has exploded (explosive sound is heard), disconnect the power plug from the power outlet and ask your dealer to replace lamp. The lamp is covered by front glass and air-tight structure, but, in rare cases, the reflector and the inside of the projector may be damaged by scattered broken pieces of glass, and broken pieces could cause injury when being handled.

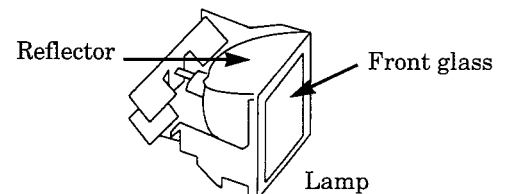

1 Turn the main power switch off and disconnect the power plug from the power outlet.


2 Remove the lamp cover.

- If lamp is hot at this time, this could cause burn. Wait for about 45 minutes until lamp is cooled down.
- Loosen a screw and remove the cover.

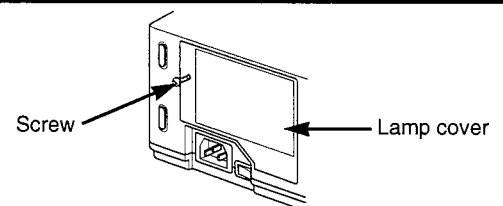


3 Loosen two screws and pull the handle to remove the lamp.

- If the screws are not loosened completely, your fingers may be damaged.
- Do not insert your hand into the box after the lamp is removed. (There are optical parts inside. If touched by hand, it may result in color unevenness, etc.)

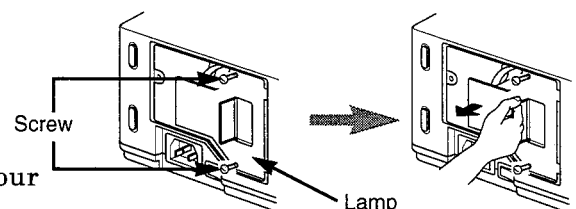

4 Replace the lamp with new one and fix it using the same two screws.

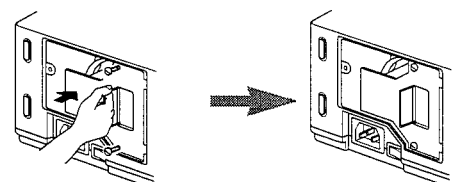


Lamp (continued)

5 Install the lamp cover and fix it using screws.

- To prevent burn, install the lamp cover and secure it using screws.
- Do not turn on the power with lamp cover removed.


If you use projector with the lamp cover removed, broken pieces will scatter if the lamp breaks, and it may cause injury.

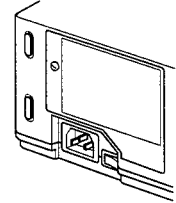

Whenever the lamp is replaced, reset the total operation time of the lamp. Do not reset if the lamp has not been replaced.

2. Reset the lamp time

Please carry out the following operation within 10 minutes from power on, if you replaced the lamp after 2,000 hours.

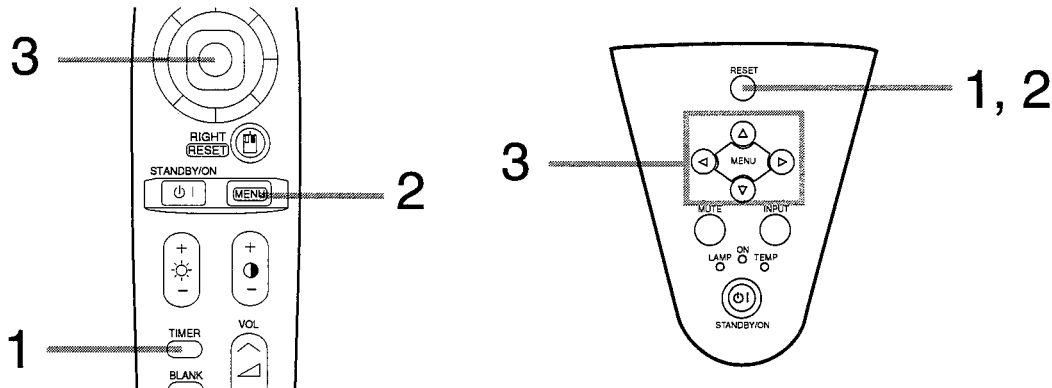

1) Press the RESET button on projector for 3 seconds or remote control TIMER button for 3 seconds and display the total lamp used time.

- When accumulated operation time of the lamp reaches 1700 hours, the following display will appear at the bottom of the screen.

LAMP 1700 h

2) Press the RESET button on projector or remote control MENU ON button during displaying the lamp used time.

LAMP 1700 → 0 CANCEL

3) Select the "0" on the screen using the MENU (◀) button or MENU STICK SWITCH.

Message table

On-screen display

The following messages are displayed on the screen.

| MESSAGE | Action |
|--|--|
| CHANGE THE LAMP "AFTER REPLACING LAMP, RESET THE LAMP TIMER." | Accumulated operation of lamp has exceeded 1,700 hours. It is recommended to replace lamp. Replace with new lamp. If accumulated operation reaches 2,000 hours, lamp will automatically turn off. *1 |
| CHANGE THE LAMP "AFTER REPLACING LAMP, RESET THE LAMP TIMER." THE POWER WILL TURN OFF AFTER 20 Hr. | Lamp has 1,979 hours on it. Call a maintenance person. *1 Time is 20 ~ 0. (count down.) |
| Blinking of "CHANGE THE LAMP" | When the lamp has 2,000 hours or more on it, the message will blink, and the power will turn off after 10 minutes. |
| NO INPUT IS DETECTED | Signal is hot input. (See page 18, 19) |
| SYNC IS OUT OF RANGE | The horizontal frequency of the input signal exceeds the range of the projector, it cannot be displayed. (See page 19, 20) |
| CHECK THE AIR FLOW | Clean the air filter or remove the blocking ventilation holes. (See page 27) |

*1 This message are not displayed after 3 minutes.

But this message are displayed when you turn on the power again.

Message table (continued)

Indicator display

The ON indicator, LAMP indicator and TEMP indicator will light or blink in the following cases.

| ON indicator | LAMP indicator | TEMP indicator | Meaning | Remedy |
|---------------|----------------|----------------|--|---|
| Lights orange | Goes off | Goes off | Standby mode | ————— |
| Blinks green | Goes off | Goes off | During warming up | ————— |
| Lights green | Goes off | Goes off | During operation*1 | ————— |
| Blinks orange | Goes off | Goes off | During cooling down | ————— |
| Lights red | Lights red | Goes off | Lamp cannot light | Cool projector by power off for 45 minutes. If the indicator is still lit, lamp may be defective. Replace. |
| Lights red | Blinks red | Goes off | Lamp is not inserted | Securely insert the lamp. |
| Lights red | Goes off | Lights red | Temperature inside too high | Correctly reinstall so as not to block ventilation holes. |
| Lights red | Goes off | Blinks red | Cooling fan accidented | Call a maintenance person. |
| Blinks red | Blinks red | Goes off | Accumulated lamp operation time has exceeded 2,000 hours | Replace lamp and reset the accumulated lamp operation time. (See page 29, 30) |


When the LAMP indicator lights, turn the power off. If the problem cannot be recovered, contact your dealer.

*1 Even when the indicator lights green, if the power supply section becomes too hot, the lamp may be automatically turned off to cool it down (indicator continues to light green). In this case, turn off the power switch and allow the unit to cool down before turning the power switch on again. The lamp will light. If the lamp does not light because it is still automatically turned off, contact your dealer.

*2 When inside temperature becomes high because ventilation holes are blocked, normally, TEMP indicator will light red. However, to protect the projector, the lamp may be turned off and at this time LAMP indicator may light red.

When you think something wrong

Check the following again before asking for service. If the trouble cannot be recovered, consult your dealer.

| Phenomena | Cause | Check point | Page |
|--|--|---|--------------------------|
| Power cannot be turned on. | <ul style="list-style-type: none"> The Main power is not turned on. The power cord is disconnected. 60 seconds have not elapsed since the power was turned off. | <ul style="list-style-type: none"> Turn the MAIN POWER switch on. Insert the power cord into an AC socket. When the power is turned off, turn the power switch on after waiting at least 60 seconds. | P.12 P.8 P.12 |
| No picture and sound | <ul style="list-style-type: none"> The setting of the input source is not correct. Wiring to the projector is not correct. | <ul style="list-style-type: none"> Set the correct input using the input select button of the projector or the remote control. Connect the cable correctly. | P.7,9 12,16 P.8,26 |
| Only picture is displayed with no sound | <ul style="list-style-type: none"> Wiring to the projector is not correct. The volume is set to minimum. The unit enters the mute mode. | <ul style="list-style-type: none"> Connect the cable correctly. Press the VOL button or press the MENU button and adjust the volume. Press the MUTE button. | P.8,26 P.9 P.7,9 |
| Only sound is heard without a picture | <ul style="list-style-type: none"> Wiring to the projector is not correct. The brightness is set fully to the dark side. Lens cap is attached. | <ul style="list-style-type: none"> Connect the cable correctly. Press the MENU button and select BRIGHT and press the  button. Remove the lens cap. | P.8,26 P.15 P.12 |
| Color is weak and tint is incorrect | The color and tint have been adjusted incorrectly. | Adjust the color and tint correctly. | P.15 |
| Picture is dark | <ul style="list-style-type: none"> The brightness and contrast has been adjusted incorrectly. The lamp has not been adjusted. | <ul style="list-style-type: none"> Adjust the brightness and contrast correctly. Replace the lamp with a new one. | P.15 P.28 |
| Picture is not clear | Focus or H.PHASE is not matched. | Adjust the focus or H.PHASE | P.12,15 |
| LAMP indicator lights red. | Trouble with the lamp. | Turn off the power and leave for 45 minutes ; then turn the power on again. | P.30 |
| TEMP indicator lights red. | Inside the projector too hot. | <ul style="list-style-type: none"> Do not block the venational holes. Clean the air filter. Use the projector under 35°C temperature. | P.5 P.27 |
| Remote control mouse cannot be operated. | <ul style="list-style-type: none"> Cable was connected after the power was turned on. Video signal not selected. | <ul style="list-style-type: none"> Be sure to perform procedure in the following order : (1) Connect cable. (2) Turn on projector. (3) Turn PC on. Input video signal and select and display input source. | |


Specifications

● All specifications are subject to change without notice.

| | | | |
|--------------------------|----------------------------------|--|--|
| Product name | | Liquid crystal projector | |
| Model Name | | CP-S830W/E | |
| Display system | | 3 sheets of liquid crystal panels, 3 primary color lights shutter system | |
| Liquid crystal panel | Panel size | 2.3 cm (0.9 inches) | |
| | Drive system | TFT active matrix | |
| | Number of pixels | 480,000 pixels (V600 × H800) | |
| Lens | | Zoom lens F=2.0 ~ 2.3 f=38 ~ 50 mm | |
| Lamp | | UHB lamp 150W | |
| Speaker | | 1W + 1W (stereo) | |
| Power supply | | AC100 ~ 120V, 2.6A/AC220 ~ 240V, 1.3A | |
| Power consumption | | 230W | |
| Usable temperature range | | 32 ~ 95 ° F | Storage Temperature range - 4 ~ 140° F |
| Dimensions (W × H × D) | | 9.4" × 4.8" (including foot adjuster) × 12.6" (including lens). 9.4" × 5.2" (excluding foot adjuster) × 13.2" (excluding lens). | |
| Weight | | 11.5 lbs. | |
| Input/Output terminal | Video signal input terminal | S VIDEO : Mini DIN4-pin terminal VIDEO : RCA Jack terminal AUDIO : RCA Jack terminal | |
| | RGB input/output signal terminal | RGB signal : D-sub 15pin shrink terminal (Female) AUDIO : Stereo mini jack | |
| | Control terminal | D-sub 15pin shrink terminal (Male) | |
| Accessories | Remote control.....1 | RGB cable.....1 | MAC adaptor.....1 |
| | POWER cord.....3(CP-S830W) | Video/Audio cable.....1 | Mouse cable.....3 |
| | 2(CP-S830E) | | |
| | BATTERIES AA (or R6P).....2 | | |

Dimension diagram

All dimensions shown in inches.

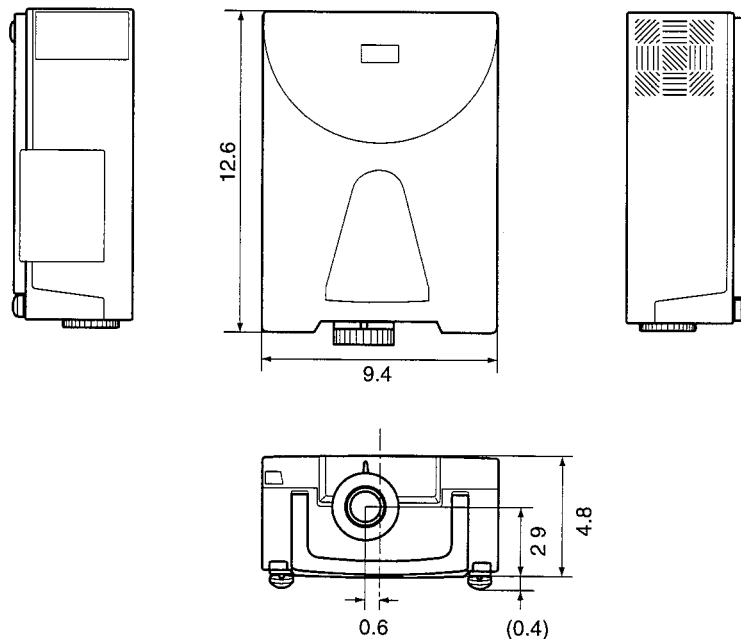

DEUTSCH

An unsere Kunden,

In der Bedienungsanleitung sind Fehler gefunden worden. Bitte beachten Sie die folgenden Korrekturen.

- "Bildschirmanzeige" (P.29)

| Fehler | Berichtigungen |
|--|---|
| LAMPE AUSWECHSELN "RUFEN SIE EINEN KUNDENDIENSTTECHNIKER." | LAMPE AUSWECHSELN "NACH DEN ERSETZEN DER LAMPE IST DER LAMPEN- TIMER ZURÜCKZUSTELLEN." |
| LAMPE AUSWECHSELN "RUFEN SIE EINEN KUNDENDIENSTTECHNIKER." STROMABSCHALTUNG NACH 20 STUNDEN. | LAMPE AUSWECHSELN "NACH DEN ERSETZEN DER LAMPE IST DER LAMPEN- TIMER ZURÜCKZUSTELLEN." STROMABSCHALTUNG NACH 20 STUNDEN. |

FRANÇAIS

Aux utilisateurs,

Des erreurs ont été trouvées dans le notice d'utilisation. Veuillez noter les corrections suivantes.

- "Affichage des renseignements sur l'écran" (P.29)

| Erreurs | Corrections |
|---|--|
| REPLACER LA LAMPE "APPELER UN RESPONSABLE DE L'ENTRETIEN." | REPLACER LA LAMPE "REMETTRE LA MINUTERIE À ZÉRO APRES AVOIR REPLACE L'AMPOULE." |
| REPLACER LA LAMPE "APPELER UN RESPONSABLE DE L'ENTRETIEN." COUPEURE DU COURANT AU BOUT DE 20 HEURES. | REPLACER LA LAMPE "REMETTRE LA MINUTERIE À ZÉRO APRES AVOIR REPLACE L'AMPOULE." COUPEURE DU COURANT AU BOUT DE 20 HEURES. |

ITALIANO

Agli acquirenti,

Sono stati trovati errori nel libretto d'istruzioni. Si prega di notare le seguenti correzioni.

- "Messaggi sullo schermo" (P.29)

| Errori | Correzioni |
|--|--|
| CAMBIARE LA LAMPADA "CHIAMARE UN ADDETTO ALLA MANUTENZIONE." | CAMBIARE LA LAMPADA "SOSTITUITA LA LAMPADA, AZZERARE IL TIMER DELLA LAMPADA." |
| CAMBIARE LA LAMPADA "CHIAMARE UN ADDETTO ALLA MANUTENZIONE." L'UNITÀ VIENE SPENTA DOPO 20 ORE. | CAMBIARE LA LAMPADA "SOSTITUITA LA LAMPADA, AZZERARE IL TIMER DELLA LAMPADA." L'UNITÀ VIENE SPENTA DOPO 20 ORE. |

ENGLISH

To customers,

Errors were found in the operating guide. Please note the following corrections.

- Back cover

Errors
Hitachi Home Electronics (America), Inc.
Multimedia Systems Division.
National Headquarters: 3890 Steve Reynolds
Blvd. Norcross GA 30093, U.S.A.
Tel: +1-770-279-5600 Fax: +1-770-279-5696



Corrections
Hitachi America, Ltd.
Computer Division
2000 Sierra Point Parkway
Brisbane, CA
Tel: 1-800-HITACHI Fax: 1-650-244-7525

ESPAÑOL

A los clientes,

En el manual de instrucciones se han encontrado errores. Tenga en cuenta las correcciones siguientes.

- "Visualización en pantalla" (P.29)

| Errores | Correcciones |
|--|--|
| CAMBIE LA LÁMPARA "LLAME A UN TÉCNICO DE MATENIMIENTO." | CAMBIE LA LAMPARA "DESPUES DE REEMPLAZAR LÁMPARA ,PONGA TEMPOR. LÁMPARA A CERO." |
| CAMBIE LA LÁMPARA "LLAME A UN TÉCNICO DE MATENIMIENTO." ENERGIA SE DESCONECT. | CAMBIE LA LÁMPARA "DESPUES DE REEMPLAZAR LAMPARA ,PONGA TEMPOR. LÁMPARA A CERO." ENERGÍA SE DESCONECT. DESPUES DE 20 HORAS. |

NEDERLANDS

Beste klant,

Er zijn wat fouten in de gebruiksaanwijzing. Zie de volgende correcties.

- "In-beeld display" (P.29)

| Fouten | Correcties |
|---|---|
| VERVANG LAMP "NEEM CONTACT OP MET DE ONDERHOUDSDIENST." | VERVANG LAMP "STEL DE LAMPTIMER TERUG NA HET VERVANGEN VAN DE LAMP " |
| VERVANG LAMP "NEEM CONTACT OP MET DE ONDERHOUDSDIENST." DE STROOM WORDT NA 20 UREN UITGESCHAKELD. | VERVANG LAMP "STEL DE LAMPTIMER TERUG NA HET VERVANGEN VAN DE LAMP " DE STROOM WORDT NA 20 UREN UITGESCHAKELD. |

NORSK

Til våre kunder,

Det ble funnet feil i brukerhåndbok. Følgende rettelser er gjort.

- "Vises på skjermen" (P.29)

| Feil | Rettelser |
|---|--|
| SKIFT LAMPEN "TILKALL EN SERVICE- PERSON." | SKIFT LAMPEN "ETTER AT LAMPEN ER SKIFTET UT, NULLSTILLES LAMPE-TIMEREN." |
| SKIFT LAMPEN "TILKALL EN SERVICE- PERSON." STRØMUTKOPLING ETTER 20 TIMER. | SKIFT LAMPEN "ETTER AT LAMPEN ER SKIFTET UT, NULLSTILLES LAMPE-TIMEREN." STRØMUTKOPLING ETTER 20 TIMER. |

HITACHI

Hitachi, Ltd. Tokyo, Japan
International Sales Division
THE HITACHI ATAGO BUILDING,
No. 15-12 Nishi Shinbashi, 2-Chome,
Minato-Ku, Tokyo 105-8430, Japan.
Tel: 03 35022111

HITACHI EUROPE LTD.

Dukes Meadow
Millboard Road
Bourne End
Buckinghamshire
SL8 5XF

UNITED KINGDOM

Tel: 01628 643000

Fax: 01628 643400

Email: consumer-service@hitachi-eu.com

HITACHI EUROPE S.A.

364, Kifissias Ave. & 1, Delfon Str.
152 33 Chalandri

Athens

GREECE

Tel: 1-6837200

Fax: 1-6835694

Email: service.hellas@hitachi-eu.com

HITACHI EUROPE GmbH

Munich Office
Dornacher Strasse 3
D-85622 Feldkirchen bei München

GERMANY

Tel: +49 -89-991 80-0

Fax: +49 - 89 - 991 80 -224

Hotline: +49 - 180 - 551 25 51 (12ct/min.)

Email: HSE-DUS.Service@Hitachi-eu.com

HITACHI EUROPE S.A.

Gran Via Carlos III, 101 - 1
08028 Barcelona

SPAIN

Tel: 93 409 2550

Fax: 93 491 3513

Email: rplan@hitachi-eu.com

HITACHI EUROPE SRL

Via T. Gulli n.39
20147 MILAN

ITALY

Tel: 02 487861

Fax: 02 48786381

Servizio Clienti

Tel. 02 38073415

Email: customerservice.italy@hitachi-eu.com

HITACHI EUROPE AB

Box 77

S-164 94 KISTA

SWEDEN

Tel: 08 562 711 00

Fax: 08 562 711 11

Email: csgswe@hitachi-eu.com

HITACHI EUROPE S.A.S

Lyon Office
B.P. 45, 69671 Bron Cedex

FRANCE

Tel: 04 72 14 29 70

Fax: 04 72 14 29 99

Email: france.consommateur@hitachi-eu.com

HITACHI EUROPE LTD.

Norwegian Branch Office
Strandveien 18
1366 Dysaker

NORWAY

Tel: 02205 9060

Fax: 02205 9061

Email: csgnor@hitachi-eu.com

ITEM N.V./S.A. (INTERNATIONAL TRADE FOR ELECTRONIC MATERIAL & MEDIA N.V./S.A)

UCO Tower - Bellevue, 17
B - 9050 GENT

BELGIUM (for BENELUX)

Tel: 09 230 48 01

Fax: 09 230 96 80

Email: hitachi.item@skynet.be

www.hitachi-consumer-eu.com