



Compaq MP1600 Microportable Projector

User's Guide



COMPAQ

ProSelecta

View :: Compare :: Select - www.ProSelecta.com

Notice

The information in this guide is subject to change without notice.

COMPAQ COMPUTER CORPORATION SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS MATERIAL.

This guide contains information protected by copyright. No part of this guide may be photocopied or reproduced in any form without prior written consent from Compaq Computer Corporation.

© 1999 Compaq Computer Corporation.
All rights reserved. Printed in Taiwan.

Compaq and Deskpro are registered in the U. S. Patent and Trademark Office.

Microsoft, MS-DOS, Windows, Windows NT, and other names of Microsoft products referenced herein are trademarks or registered trademarks of Microsoft Corporation.

Product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

The software described in this guide is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement.

User's Guide

Compaq MP1600 Microportable Projector

First Edition (May 1999)
Part Number 383706-001

Compaq Computer Corporation

CONTENTS

preface

USING THIS GUIDE

Symbols and Conventions v
Warning Messages vi

book 1

ENGLISH

Product Features 1-1
Introduction 1-2
Setting Up the Projector 1-3
 Connecting the Projector to a Portable Computer 1-4
 Connecting the Projector to a Desktop Computer 1-5
 Connecting the Projector to a Compaq PC Companion 1-6
 Connecting the Projector to Other Video Sources 1-7
 Attaching the Compaq Video Adapter to
 the MP1600 Microportable Projector 1-7
 Connecting the Compaq Video Adapter to
 a Camcorder or VCR 1-8
 Powering On the Projector 1-9
 Adjusting the Projected Image 1-10
 Adjusting the Projector Height 1-10
 Adjusting the Projector Focus 1-12
 Image Size Adjustment 1-13
 Using the Compaq Software Utility 1-14
 Powering Off the Projector 1-15
Operating the Projector 1-16
 Control Buttons 1-16
 On-Screen Menu Adjustments 1-17
 Adjusting the On-Screen Menu 1-18
 Explaining Functions in the On-Screen Menu 1-19
 Special On-Screen Messages 1-21
Care and Maintenance 1-22
 Protecting the Projector 1-22
 Cleaning the Lens 1-23
 Replacing the Projector Lamp Module 1-24

appendix A

TROUBLESHOOTING

appendix B

AGENCY REGULATORY NOTICES

Federal Communications Commission Notice	B-1
Modifications.....	B-1
Cables	B-1
Declaration of Conformity for Products Marked with the FCC Logo - United States Only.....	B-2
Canadian Notice.....	B-2
Avis Canadien.....	B-2
European Notice	B-3
Japanese Notice	B-3

SPECIFICATIONS

Specifications.....	B-4
Preset Display Resolutions Table.....	B-5
Color Display Values.....	B-6
Power Cord Set Requirements.....	B-6
General Requirements	B-6
Country-Specific Requirements	B-7

appendix C

USING THE COMPAQ VIDEO ADAPTER

Identifying the Buttons and Connectors	C-1
Attaching the Video Adapter to the MP1600 Microportable Projector.....	C-2
Connecting a Video Player	C-3

Using This Guide

The User's Guide includes general information about your projector, troubleshooting and diagnostics, and technical specifications.

Symbols and Conventions

The following words and symbols mark special messages throughout this guide:



WARNING: Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.



CAUTION: Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.



Text set off in this manner presents clarifying information, specific instructions, commentary, sidelights, or interesting points of view.

Warning Messages

Before operating the projector, please read the following messages.



WARNING:

- To reduce the risk of harm to your eyes, do not look directly into the bright light of the projection lens.
 - To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
 - To reduce the risk of electric shock, do not disassemble the projector other than to replace the lamp module.
 - To reduce the risk of personal injury, allow the unit to cool down before changing the lamp, and always unplug the power cord first.
-

English

Product Features


The Compaq MP1600 Microportable Projector generates crisp, clear images onto a projection screen by using Digital Light Processing (DLP) Technology. The features include the following:

- 120-watt UHP high-efficiency, long-life lamp
- 1024 × 768 native XGA resolution
- 1280 × 1024 SXGA resolution
- Zooms to 32x
- Weighs less than 4.5 pounds
- Standard VGA analog connection
- All digital DFP connection
- Convenient auto-image adjustment
- 16.7 million displayable colors
- Multilingual on-screen adjustment menu
- Plug and Play capability
- Compaq utility program for ease of use in setting up the projector with portable computers
- Carrying case, projector carrying handle, and lens cleaning cloth kit included
- Security lock slot
- User replaceable lamp module
- Optional video adapter

Introduction

The Compaq MP1600 Microportable Projector comes with the following items:

- Projector and lens cap
- Power cable
- Two signal cables:
 - one VGA signal cable for use with computers, portables, and some handheld products
 - one digital DFP (digital flat panel) signal cable for use with compatible digital sources
- Carrying case and separate projector carrying handle
- Lens cleaning cloth kit
- Philip's screwdriver
- Quick Setup card and this *User's Guide*
- CD-ROM containing Compaq utility program

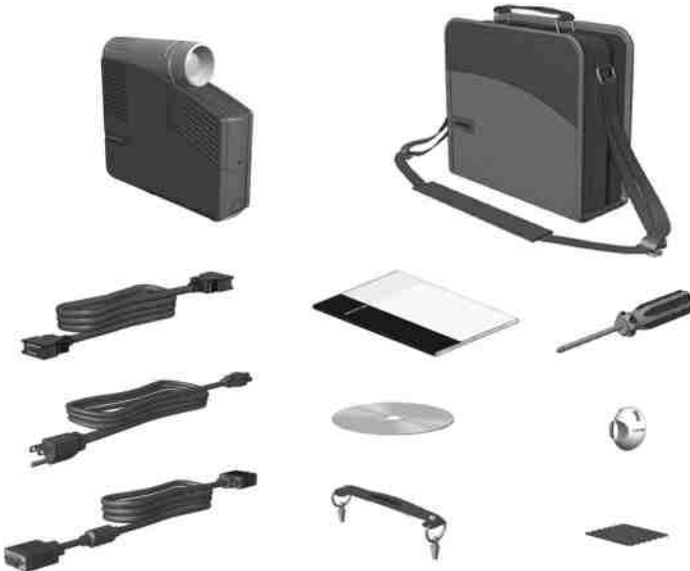

If your shipping box does not contain all of the items listed above, please contact your Compaq authorized dealer, reseller, or service provider.

Setting Up the Projector

Instructions below and on the following pages explain how to set up the projector. Separate setup instructions are described for the following products:

- portable and desktop computer
- handheld computers with VGA capability
- VCR or camcorder (requires optional video adapter)

 The projector is hot pluggable and can be connected, while powered on, to these products while they are powered on.


IMPORTANT: Place the projector on a stable desk or table at a distance not less than 3.3 feet and not greater than 35 feet from the projection screen.



WARNING: To reduce the risk of electric shock or damage to your equipment:

- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
 - Plug the power cord into a grounded (earthed) electrical outlet that is easily accessible at all times.
 - Disconnect power from the projector by unplugging the power cord from the electrical outlet.
 - Do not place anything on power cords or cables. Arrange them so that no one may accidentally step on or trip over them. Do not pull on a cord or cable. When unplugging from the electrical outlet, grasp the cord by the plug.
-

Connecting the Projector to a Portable Computer

1. Connect one end of the projector signal cable to the projector and the other end to the VGA connector **1B** or the DFP connector **1A** on the portable and tighten the screws. Use the VGA cable OR the DFP cable; do not connect both cables.
 Be sure the signal cable aligns with the connector. Do not force the cable onto the connector or you may damage the signal cable or the projector.
2. Connect one end of the power cord **2** into the back of the projector, and the other end to an electrical outlet that is easily accessible and close to the projector.




Connecting the Projector to a Desktop Computer

1. Connect one end of the projector signal cable ❶ to the projector and the other end to the VGA connector on the desktop computer and tighten the screws.

✍ Be sure the signal cable aligns with the connector. Do not force the cable onto the connector or you may damage the signal cable or the projector.

2. Connect one end of the power cord ❷ into the back of the projector, and the other end to an electrical outlet that is easily accessible and close to the projector.

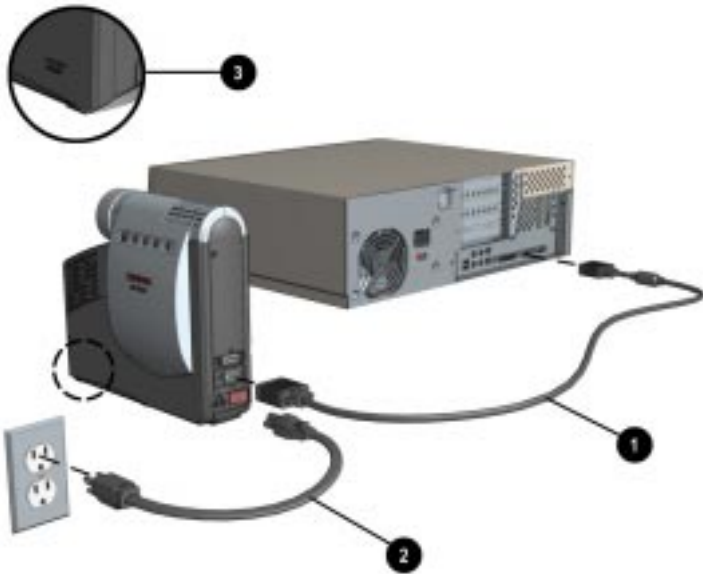

✍ For security purposes, this projector has been fitted with a slot ❸ for use with a security cable lock that can be purchased separately at most computer stores.

Connecting the Projector to a Compaq PC Companion

To connect the projector to a Compaq PC companion, the PC companion must have a male connector adapter and a VGA-out PC Card with a 15-pin connector.

✎ The VGA-out PC Card with the 15-pin connector is not included with the Compaq PC companion. It is sold separately. For information on purchasing this card, call your Compaq authorized dealer, seller, or reseller. To locate a reseller near you, call Compaq at 1-800-AT-COMPAQ or visit the Compaq web site at <http://www.compaq.com>.


1. Connect one end of the signal cable ❶ to the projector and connect the other end to the VGA-out PC Card. The VGA-out PC Card may be inserted into the PC slot on the Compaq PC companion before or after connecting the signal cable.
2. Connect one end of the power cord ❷ into the back of the projector, and the other end to an electrical outlet that is easily accessible and close to the projector.



✎ To connect a Compaq Aero device, follow the instructions for connecting the projector to a portable computer.


Connecting the Projector to Other Video Sources

To connect the projector to a camcorder or VCR, the Compaq Video Adapter must be connected to the projector. The Compaq Video Adapter has been specifically designed to fit the Compaq MP1600 Microportable Projector. This adapter converts the signals from the camcorder for compatibility with the projector.

 The Compaq Video Adapter is not included with the Compaq MP1600 Microportable Projector. It is sold separately. For information on purchasing this video adapter, call your Compaq authorized dealer, seller, or reseller. To locate a reseller near you, call 1-800-AT-COMPAQ or visit the Compaq web site at <http://www.compaq.com>.

Attaching the Compaq Video Adapter to the MP1600 Microportable Projector

1. Push in the two buttons **1** on the bottom sides of the video adapter.
2. Insert the hooks on top of the video adapter into the upper slots **2** on the projector and, at the same time, insert the adapter plug into the digital connector **3** on the back of the projector.
3. Release the buttons on the sides of the video adapter to complete the connection.

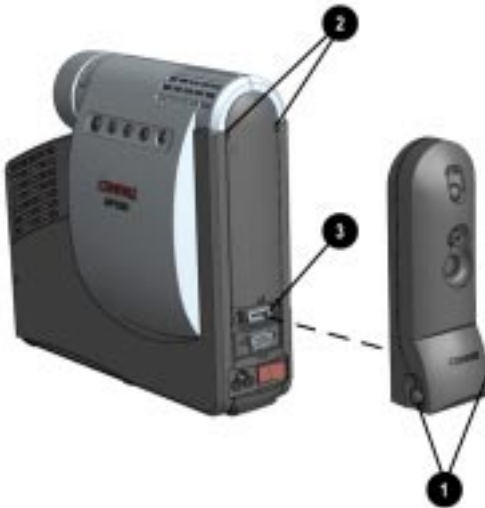

Connecting the Compaq Video Adapter to a Camcorder or VCR

1. Use an RCA cable to connect a VCR to the video connector ❶ on the video adapter. Use an S-video cable to connect a camcorder to the S-video connector ❷ on the video adapter.
2. Connect one end of the power cord ❸ into the back of the projector and the other end to an electrical outlet that is easily accessible and close to the projector.




The Compaq Video Adapter can remain attached to the projector, or it can be removed and stored in the carrying case. For more information on using the video adapter, see Appendix C, "Using the Compaq Video Adapter."

Powering On the Projector


Follow these instructions to power on the projector:


1. Ensure that the power cord and signal cable are securely connected.

 Make sure the projector is perpendicular to the screen.

2. Remove the lens cap **1** by pulling it straight out.

3. Turn on the Main power switch **2** on the back of the projector and allow the projector to warm up for 1-2 minutes.

 When the projector has warmed up, the Compaq startup screen will display for 30 seconds and the LED on the Standby button **3** will turn green. When the startup screen disappears, the video from the attached computer will display. If there is no incoming video, the "Check Video Cable" message will display on the projection screen.

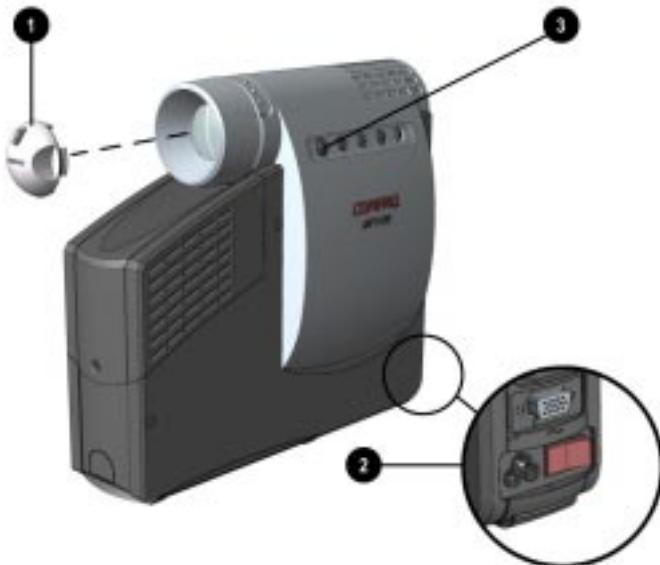

4. Power on your source (computer, PC Companion, or VCR, etc.) and launch the software application being used to display images on the projection screen.

- ✎ If there is a long delay between the time the startup screen displays and the time the presentation software is launched, the lamp may shut off and the projector will automatically go into standby mode. If this happens, press the Standby button **3** to power on the lamp.

- ✎ The Compaq startup screen display time is adjustable in the Standby Lamp Delay feature in the Management function of the on-screen menu.

Adjusting the Projected Image

There are two ways to adjust the projected image:

- Adjusting the projector height
- Adjusting the projector focus

Adjusting the Projector Height

This projector has a built-in elevator foot that can raise the projector approximately one inch. To adjust the height:

1. Turn the foot sideways to balance the projector.



2. Raise the projector to the desired display angle, then press the elevator button ❶ on the front of the projector to release the foot ❷.



3. To lower the display angle, press the button on the front of the projector again and press down on the projector to lower it.



WARNING: To reduce the risk of the projector tipping or overturning, always turn the elevator foot 90° from its original position before pressing the elevator button.


Adjusting the Projector Focus

To focus the projected image, rotate the focus ring ❶ until the image is clear. The projector will focus at distances from 3.3 feet to 35.64 feet (1 meter to 10.8 meters).

If vertical bars appear on the display after adjusting the focus, press the Resync button ❷ to automatically synchronize and track the display. If the button does not correct the display, use the Digital Conversion feature in the on-screen menu to manually adjust the synchronization and tracking (refer to the "On-Screen Menu Adjustments" section).



Image Size Adjustment

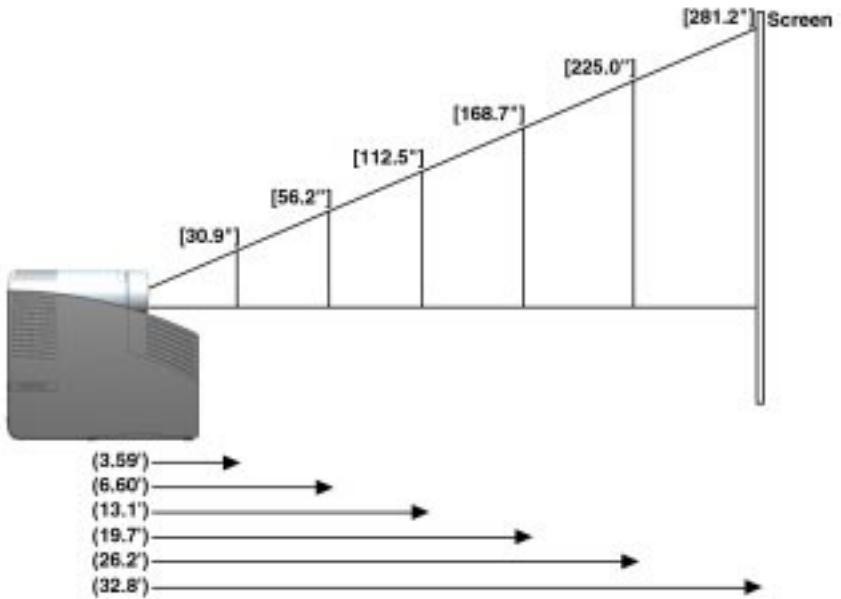


Screen Diagonal	42.2"	56.2"	84.3"	112.5"	140.6"	168.7"	196.9"	225"	253.1"	281.2"
Screen Width	33.8"	45"	67.4"	90"	112.4"	135"	157.5"	180"	202.4"	225"
Screen Height	25.3"	33.7"	50.6"	67.5"	84.4"	101.2"	118.1"	135"	151.9"	168.7"
Projection Distance	4.9'	6.6'	9.8'	13.1'	16.4'	19.7'	23.0'	26.2'	29.5'	32.8'



If the projector is used at the maximum distance in this chart, the display may appear to be dimmer than usual.

Using the Compaq Software Utility

The Compaq software utility included on the CD-ROM is for use with Compaq portable computers with Compaq BIOS only. The purpose of the software utility is to disable power management features of the portable computer while the Compaq MP1600 Microportable Projector is connected to it. The utility also disables the computer's screen savers and auto suspend feature.

 The software utility does NOT support Compaq portable computers with non-Compaq BIOS, nor does it support Compaq desktop computers or non-Compaq computers.

A graphical user interface (GUI) is required to control the MP1600 Projector's resolution settings and enabled/disabled status. The Compaq software utility supports the following GUI operating systems: Microsoft Windows 95, 98, and NT 4.0.

To install the software utility onto a Compaq portable computer:

1. Insert the CD-ROM into the computer's CD drive.
2. From Microsoft Windows 95, 98, or NT 4.0 desktop, click START→RUN and type D:\SETUP.EXE in the dialog box.
3. Select OK in the dialog box to install the program. The software utility installs on the hard drive and places a program icon in the Windows system tray.
4. Double-click the program icon to launch the Presentation Properties dialog box.
5. Set the Presentation Mode Duration time in the dialog box.

The dialog box has default settings enabled to turn off the computer's power management features and for the video resolution.

6. Select OK or APPLY from the dialog box to execute the default settings. The software dialog box closes and the computer is ready to continue with the presentation.

This software utility is provided on the CD-ROM in the following languages: English, Dutch, French, German, Italian, and Spanish. Once Setup is executed, the appropriate language is installed on the computer based on the computer's operating system language.

Powering Off the Projector

1. Press the Standby button to turn off the projector lamp.

The Compaq startup screen displays and the LED on the Standby button turns amber. Allow the projector to cool down for about 5 to 10 minutes before turning it off.

✎ The Compaq startup screen display time is adjustable in the Standby Lamp Delay feature in the Management function of the on-screen menu.


2. Turn off the Main power switch on the back of the projector.
3. Disconnect the power cord from the electrical outlet and the projector.








CAUTION: If the LED on the Standby button rapidly flashes amber, this indicates that the lamp has overheated and the projector will automatically shut down. Remove any obstruction that may prevent proper ventilation to the projector, and wait 5 to 10 minutes to allow the projector to cool down before powering it on again.

Operating the Projector

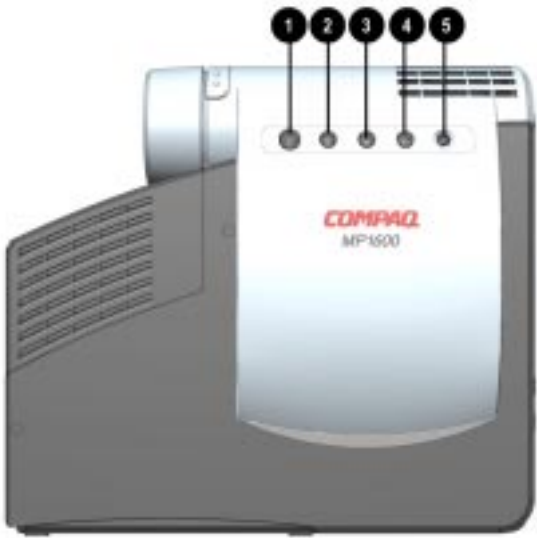Control Buttons



Symbol	Control	Function
❶ 	Standby button and LED	Powers the projector lamp on and off. The Standby LED changes colors to indicate the following operating modes: <ol style="list-style-type: none">1. Green glow indicates power is on.2. Amber glow indicates warm-up, suspend, or standby mode.3. Amber flashing rapidly indicates projector is overheating and will automatically shut down.
❷ 	Select button	<ol style="list-style-type: none">1. Launches first, second, and third-level on-screen menus.2. Exits the on-screen menus.
❸ 	Minus button	Selects and adjusts the on-screen menu functions.
❹ 	Plus button	Selects and adjusts the on-screen menu functions.
❺ 	Resync button	Automatically synchronizes the projector to track the input source.

On-Screen Menu Adjustments

The adjustments for screen settings are located in the on-screen menu and can be viewed in one of six available languages. The following menu shows the functions at each level:

Main Menu	Menu Level 2	Menu Level 3
Brightness	Adjustment scale	
Contrast	Adjustment scale	
Position	Horizontal Position Vertical Position Save and Return Cancel	Adjustment scale Adjustment scale
Zoom	Adjustment scale	
Keystone	Adjustment scale	
Picture	Dark - Light	
Color	7100 K Custom Color Saturation Save and Return Cancel	Adjustment scale Adjustment scale
Digital Conversion	Clock Clock Phase Save and Return Cancel	Adjustment scale Adjustment scale
Language	Deutsche English Espanol Francais Italiano Nederlands Save and Return	
Menu Location	Up-Down Left-Right Save and Return Cancel	Adjustment scale
Management	Power Saver Lamp Hours Reset Lamp Hours Standby Lamp Delay Serial Number Master Reset Save and Return Cancel	On-Off Display hours - 5 digits Confirmation Delay adjustment Display Serial Number Confirmation
Factory Reset	Confirm Reset	
Exit		

Adjusting the On-Screen Menu

To launch and make adjustments to the on-screen menu:


1. Press the Select button ❶ located on the projector panel. The Main menu will display on the projection screen.
2. To select a function, press the Minus (-) button ❷ to scroll down the Display menu. To reverse the scroll direction, press the Plus (+) button ❸.
3. Highlight the function to be adjusted and press the Select button ❶ again.



✎ The bar on the bottom of the on-screen menu shows the current operating resolution and identifies it as either a factory preset mode (Preset) or a user-adjusted mode (User Mode).

For example, to select the *Position* function, press the Minus button ❷ until *Position* is highlighted, then press the Select button ❶ to display the level 2 menu for *Position*. The level 2 menu displays expanded menu items.

4. To make a selection from the level 2 menu, press the Minus (-) button to scroll down the level 2 menu, or press the Plus (+) button to reverse the scroll direction.

5. Highlight the selection and press the Select button to confirm the selection. The level 3 menu displays.
 6. Level 3 for Position functions display the adjustment scales. Use the Minus button to decrease and the Plus button to increase the screen Horizontal and Vertical positions.
-  Some menu functions display adjustment scales in the level 2 menu, while others display adjustment scales in the level 3 menu.
7. After making the adjustment, select *Save and Return*. To void any changes made, select *Cancel* instead of *Save and Return*.
 8. To exit from the on-screen menu, select Exit from the Main menu. If the display is a second, or third-level menu, select *Save and Return* or *Cancel*, then select *Exit* from the Main menu.

The on-screen menu is easy to use; just follow the instructions on the screen.

Explaining Functions in the On-Screen Menu

- **Brightness and Contrast**—Adjusts the displayed image brightness and contrast ranges from 0 to 100.
- **Position**—Fine-tunes the horizontal and vertical positions of the display.
- **Zoom**—Magnifies an image up to a factor of 32 on the projection screen.
- **Keystone**—Adjusts image distortion caused by tilting the projector. The only adjustment direction allowed is to narrow the top width of the image.
- **Picture**—Adjusts the gamma value or degree of contrast of darkness or light for the projected image.
- **Color**—Adjusts color balance to compensate for ambient conditions using three submenus:
 - 7100°K—The factory default.
 - Custom Color—Modify the color temperature balance.
 - Saturation—Magnify the color intensity.

- **Digital Conversion**—Improves picture stability of user modes by adjusting:
 - **Clock**—Increase/decrease the value to stretch or shrink the image on the screen.
 - **Clock Phase**—Increase/decrease the value to minimize video distortion or video jitter.
- ✎ If the projector image becomes distorted when adjusting the **Clock** and **Clock Phase** values, continue adjusting the values until the distortion disappears. To restore the factory settings, select **Factory Reset** in the on-screen menu.
- **Language**—Select display from six languages in their native spelling. The current language is highlighted. Select another language to display all menu functions in that language.
- **Menu Location**—Positions the on-screen menu at a convenient location on the projector screen; moves up and down, left and right.
- **Management**—Allows the user to control power saver characteristics of the display, or to view the cumulative lamp hours, reset the lamp hour timer, view the unit's serial number, or perform a Master Reset.
- **Factory Reset**—Resets the current operating option to its original factory setting.

Special On-Screen Messages

Special on-screen messages will appear on the projection display to identify the following conditions:

- **Check Video Cable:** Indicates the video cable may not be plugged into the projector or the selected video input is not accurate.
- **Input Signal Out of Range:** Indicates the projector is unable to access the appropriate input signal.
- **2 Inputs Active - Remove One:** The projector has two data inputs: one is an analog D-Sub input and the other is a digital DFP input. This message indicates that both inputs are active simultaneously and the user should detach one of them.
- **Going to Standby:** Indicates the projector is entering a sleep mode or powering off the lamp.
- **Lamp May Fail Soon, Replacement Suggested:** Indicates the lamp is approaching failure. The message will remain on the screen for five seconds or until the on-screen menu Select button is pressed.

Care and Maintenance

This section explains how to care for and maintain your Compaq projector during normal everyday use.

Protecting the Projector

To protect your projector from overheating and other types of damage, follow these suggestions:

- Use only a power source and connection appropriate for this projector as indicated on the marking label.
- Do not overload an electrical outlet, power strip, or convenience receptacle. The overall system load must not exceed 80 percent of the branch circuit rating. If an extension cord or power strip is used, make sure that the cord or strip is rated for the product and that the total ampere ratings of all products plugged into the extension cord or power strip do not exceed 80 percent of the extension cord or strip ampere ratings limit.
- Install the projector near an outlet that you can easily reach. Disconnect the product by grasping the plug firmly and pulling it from the outlet. Never disconnect it by pulling the cord.
- Unplug the projector from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
- Slots and openings in the cabinet are provided for ventilation. These openings must not be blocked or covered. Never push objects of any kind into cabinet slots or other openings.
- Do not drop the projector or place it on an unstable surface.
- Do not expose this product to rain or moisture.
- Do not allow anything to rest on the power cord. Do not walk on the cord.
- Do not open the projector or attempt to service this product for any other reason than to replace the lamp module. Adjust only those controls that are covered by the operating instructions. If the projector is not operating properly or has been dropped or damaged, contact your Compaq authorized dealer, reseller, or service provider.

Cleaning the Lens

To minimize the risk of damaging the coating or scratching the lens surface, this cleaning procedure has been developed. The first recommendation is to remove any dust particles from the lens by blowing it off with clean, dry, deionized air. However, this may not be a convenient method and an alternate method is described below using the cloth included with the projector.

To clean the lens, use only the **clean** cloth that was included with the projector and follow these steps:



CAUTION: Do not spray any type of fluid or cleaner directly on the lens surface. Do not use liquid cleaners on the cloth as this may contaminate the cloth.

1. Wipe the lens in a single direction with the **clean, dry** cloth. Do not wipe back and forth across the lens surface.
2. If the cloth is dirty or smears the lens, wash the cloth. If the cloth is still dirty after washing it or the fabric is damaged, replace it.



Do not use fabric softener when washing the cloth or softener sheets when drying the cloth.



CAUTION: Do not store the cloth in contact with the lens for a long time as doing so may contaminate the lens with dye from the cloth. Keep the cloth in its case when it is not being used. The cloth can be contaminated if left in the open air or in a lab coat pocket.

Replacing the Projector Lamp Module

When the projector lamp reaches its end of life, it may make a slight sound when it burns out. The lamp will need to be replaced before the projector can be used again.

The projector will alert you when the lamp approaches its failure mode or end of life. When the message "Lamp May Fail Soon - Replacement Suggested" displays on the projection screen, you should change the lamp as soon as possible. Contact your local Compaq authorized dealer, seller, or reseller to purchase a spare lamp or have the lamp changed.

To replace the projector lamp module, follow these steps:

1. Turn off the power to the projector by pressing the Standby button ❶.
2. Allow the projector to cool down for at least 30 minutes.




WARNING: The lamp assembly operates at a very high temperature. To reduce the risk of personal injury, allow the projector to cool down for at least 30 minutes before opening the lamp cover. Never open the lamp cover while the projector is operating or when the lamp is hot.

3. Turn off the main power switch ❷.
4. Disconnect the power cord ❸.



5. Use the provided Philips screwdriver to remove the screw ❹ from the lamp cover.
6. Remove the cover ❺.
7. On the left side of the lamp module, push the electrical connector ❻ up to disengage it from the projector base.
8. Remove the three screws ❼ from the lamp module.
9. Pull out the lamp module ❸.

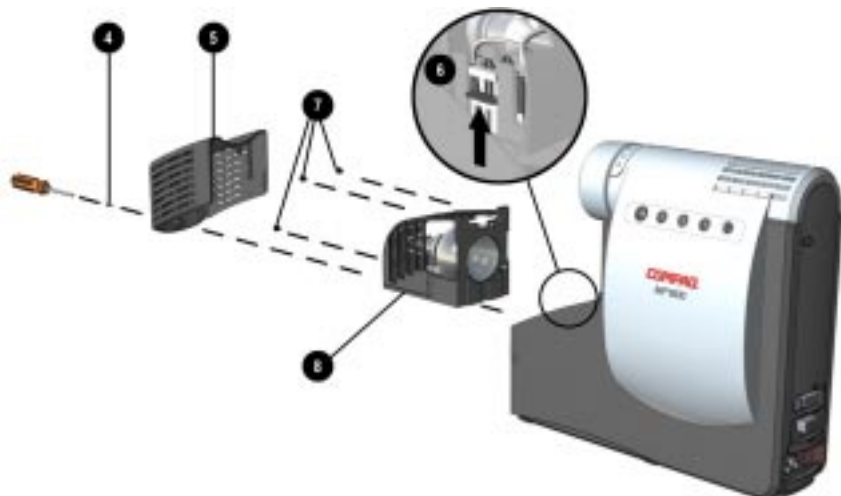

WARNING: To reduce the risk of personal injury, do not drop the lamp module or touch the glass bulb. The glass may shatter and cause an injury if it is dropped.

To replace the lamp module, reverse the previous steps.

✍ After replacing the lamp module, remember to reset the lamp hours in the on-screen menu.

IMPORTANT: This lamp contains < 0.125 percent mercury by weight. If the projection lamp breaks, the mercury may be released into the atmosphere. Please follow applicable federal, state, and local regulations for disposal and/or recycling.

Troubleshooting

Image does not appear on the projection screen

1. Make sure the projector is powered on.
2. Ensure the lens cap has been removed.
3. Press the Standby button again.
4. Ensure that the power cable is securely connected.
5. Ensure the pins on the connectors are not crooked or broken.
6. Turn off or disable the portable or desktop computer screen saver function.
7. Ensure the projection lamp has been securely installed.
8. Ensure your portable computer's external video port is turned on. Toggle the **Fn + F4** function keys.

Scrolling, cut-off, or incorrect image displayed

1. Press the Resync button.
2. Turn everything off; then power on the projector first and power on the portable or desktop computer second.
3. If the above steps do not correct the display image, adjust the resolution of the portable or desktop computer to 1024 × 768.

Continued

**Portable computer or PC
Companion screen is not
displaying the presentation**

Portable computer:

Portable computers have a monitor loop-through or simultaneous viewing function. Press the **Fn** and the **F4** function keys on the portable computer to switch the image from the portable screen to the projection screen or to toggle through the following three options:

1. LCD: Output displays only on the portable screen.
2. CRT: Output displays only on the projection screen.
3. CRT/LCD: Output displays on the portable screen and the projection screen.

Activate CRT/LCD "ON" at the same time. To identify any alternate function keys to be used, refer to your portable computer's user manual.

Mac PowerBooks:

1. To control video mirroring, click Control Panel → Display, then set Video Mirroring to ON for both internal and external viewing.
2. Set Video Mirroring OFF for image on external monitor only or internal only, depending on monitor selection in Monitors.

**Image is flickering or
unstable**

Press the Resync button on the projector panel to adjust the tracking. If that doesn't stop the flickering, adjust the Clock Phase function in the on-screen menu.

Image is out of focus

1. Adjust the Focus Ring on the projection lens.
 2. Make sure the projection screen is between the required distance (3.3 - 35 feet) from the projector.
 3. Check the projection lens to see if it needs cleaning. Follow the "Cleaning the Lens" procedures on page 1-23 to clean the lens.
-

Projected colors do not match computer or camcorder color

1. Adjust the Brightness, Contrast, or Color functions in the on-screen menu.
 2. Make sure the pins on the cable connectors are not bent or broken.
-

Only the Compaq startup screen displays

1. Check that the cables are connected securely.
 2. Verify that the proper input source is connected.
 3. Make sure your portable computer's external video port is activated.
-

Continued

Lamp shuts off

1. If the LED on the Standby button flashes amber, the projector has overheated and will automatically shut down. Wait 5 to 10 minutes until the Standby button stops flashing and turns amber before restarting the projector again.
 2. A minor power surge may cause the lamp to shut off. Wait a few minutes, then turn it back on.
-

Lamp burns out

When the lamp reaches its end of life, it will burn out and may make a slight sound. Contact your local Compaq authorized dealer, seller, or reseller to purchase a replacement lamp module. To replace the lamp, follow the procedures in the "Replacing the Projector Lamp Module" section.

Agency Regulatory Notices

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from the circuit that the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Modifications

The FCC requires the user to be notified that if any changes or modifications are made to this device, not expressly approved by Compaq Computer Corporation, this may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Declaration of Conformity for Products Marked with the FCC Logo - United States Only

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions regarding your product, contact:

Compaq Computer Corporation
P.O. Box 692000, Mail Stop 530113
Houston, Texas 77269-2000

Or, call 1-800-652-6672 (1-800-OK COMPAQ)

For questions regarding this FCC declaration, contact:

Compaq Computer Corporation
P.O. Box 692000, Mail Stop 510101
Houston, Texas 77269-2000

Or, call (281) 514-3333

To identify this product, refer to the Part, Series, or Model number found on the product.

Canadian Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis Canadien

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Notice

Products with the CE Marking comply with both the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European norms:

- EN55022 (CISPR 22) - Radio Frequency Interference
- EN50082-1 (IEC801-2, IEC801-3, IEC801-4) - Electromagnetic Immunity
- EN60950 (IEC950) - Product Safety

Japanese Notice

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

Specifications

Compaq MP1600 Microportable Projector		
Projection Panel	DMD XGA 1024 × 768 × 1	
Lamp Type	120 watt UHP	
Image Size	See the Image Size Adjustment table.	
Avg. Lamp Life in Hours	1,500 hours	
Noise Level	Less than 43dBA	
Projection Distance	3.3 feet - 35.64 feet	1 meter - 10.8 meters
Maximum Weight (Unpacked)	4.2 lbs (without cables)	1.9 kg
Maximum Dimensions W × H × D	3 in × 8 in × 9 3/8 in	
Maximum Graphics Resolution	1280 × 1024	
Displayable Colors	16.7 million colors	
Horizontal Frequencies		
Analog signals	15 - 69 kHz	
Digital signals	15 - 60 kHz	
Vertical Frequencies		
Analog signals	48 - 85 Hz	
Digital signals	48 - 75 Hz	
Required Environmental Temperatures for the Following Altitudes:		
Sea Level		
Operating Temperature	50 to 104°F	10 to 40°C
Storage Temperature	-22 to 149°F	-40 to 65°C
2,500 - 5,000 Feet		
Operating Temperature	50 to 95°F	10 to 35°C
Storage Temperature	-22 to 149°F	-40 to 65°C
5,000 - 10,000 Feet		
Operating Temperature	50 to 82°F	10 to 28°C
Storage Temperature	-22 to 149°F	-40 to 65°C
Humidity (Non-Condensing)		
Operating	20 to 80%	
Non-Operating	5 to 95%	
Power Source	90 - 265 VAC, 50-60 Hz	
Power Consumption	< 185 watts	
Input Terminal	One 15-pin D-type connector with one cable included One Digital FP connector with one cable included	

Preset Display Resolutions Table

This projector automatically recognizes the preset display resolutions listed in the following table.

Display Resolutions	
Preset Modes	Resolutions
1. Industry Standard	640 × 350 at 31.5 kHz/70 Hz
2. VESA Standard	640 × 350 at 37.8 kHz/85 Hz
3. Industry Standard	640 × 480 at 37.8 kHz/72 Hz
4. VESA Standard	640 × 480 at 37.5 kHz/75 Hz
5. VESA Standard	640 × 480 at 43.3 kHz/85 Hz
6. Industry Standard	720 × 400 at 31.5 kHz/70 Hz
7. VESA Standard	720 × 400 at 37.9 kHz/85 Hz
8. VESA Standard	800 × 600 at 35.1 kHz/56 Hz
9. VESA Standard	800 × 600 at 37.8 kHz/60 Hz
10. VESA Standard	800 × 600 at 48 kHz/72 Hz
11. VESA Standard	800 × 600 at 46.9 kHz/75 Hz
12. VESA Standard	800 × 600 at 53.7 kHz/85 Hz
13. Macintosh-compatible	832 × 624 at 49.7 kHz/75 Hz
14. VESA Standard	1024 × 768 at 35.5 kHz/43.4 Hz
15. VESA Standard	1024 × 768 at 48.4 kHz/60 Hz
16. VESA Standard	1024 × 768 at 56.4 kHz/70 Hz
17. VESA Standard	1024 × 768 at 60 kHz/75 Hz
18. VESA Standard	1024 × 768 at 68.7 kHz/85 Hz
19. VESA Standard	1280 × 1024 at 63.9 kHz/60 Hz

Color Display Values

CIE* Chromaticity Coordinates		
	x (+/- 0.030)	y (+/- 0.030)
Red	0.62	0.362
Green	0.32	0.574
Blue	0.149	0.08
White Point (7100 K)	0.301	0.354

Gamma: 2.2

*Commission International d'Eclairage, 1931 Standard.

Power Cord Set Requirements

The projector power supply is provided with Automatic Line Switching (ALS). This feature allows the monitor to operate on input voltages between 90-130V or 195-265V.

The power cord set (flexible cord or wall plug) received with the projector meets the requirements for use in the country where you purchased the equipment.

Power cord sets must meet the requirements of the country where you use the projector. For more information on power cord set requirements, contact your Compaq authorized dealer, reseller or service provider.

General Requirements

The requirements listed below are applicable to all countries:

1. The length of the power cord set must be at least 5.00 feet (1.5 m) and a maximum of 10 feet (3.0 m).
2. All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country where the power cord set will be used.
3. The power cord set must have a minimum current capacity of 10A and a nominal voltage rating of 125 VAC or 5 Amps at 250 volts AC, as required by each country's power system.

4. The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector, for mating with appliance inlet on the rear of the unit.

Country-Specific Requirements

Power Cord Set Requirements: By Country

Country	Accredited Agency	Applicable Note Numbers
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
China	CCEE	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	MITI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
Singapore	PSB or PUB	1
Sweden	SEMKO	1
Switzerland	SEV	1
United Kingdom	BSI	1
United States	UL	2

Notes:


1. The flexible cord must be <HAR> Type HO5VV-F, 3-conductor, 1.0 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
2. The flexible cord must be Type SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15A, 125V) or NEMA 6-15P (15A 250V) configuration.

3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 0.75mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (15A, 125V) configuration.

Using the Compaq Video Adapter

Identifying the Buttons and Connectors

The Compaq Video Adapter converts video signals for compatibility with the Compaq MP1600 Microportable Projector.

 The Compaq Video Adapter is not included with the Compaq MP1600 Microportable Projector. It is sold separately. For information on purchasing this video adapter, call your Compaq authorized dealer, seller, or reseller. To locate a reseller, call Compaq at 1-800-AT-COMPAQ or visit the Compaq web site at <http://www.compaq.com>.




Video Adapter LEDs, Buttons, and Ports

❶	Video LED	❷	Data LED
❸	Source button to switch between data and video signals	❹	Video/RCA port
		❺	S-Video port
		❻	Install buttons to connect to projector

Attaching the Video Adapter to the MP1600 Microportable Projector

To attach the Compaq Video Adapter to the projector:

1. Push in the two buttons **1** on the bottom sides of the video adapter.
2. Insert the hooks on top of the video adapter into the upper slots **2** on the projector and, at the same time, insert the adapter plug into the digital connector **3** on the back of the projector.
3. Release the buttons on the sides of the video adapter to complete the connection.

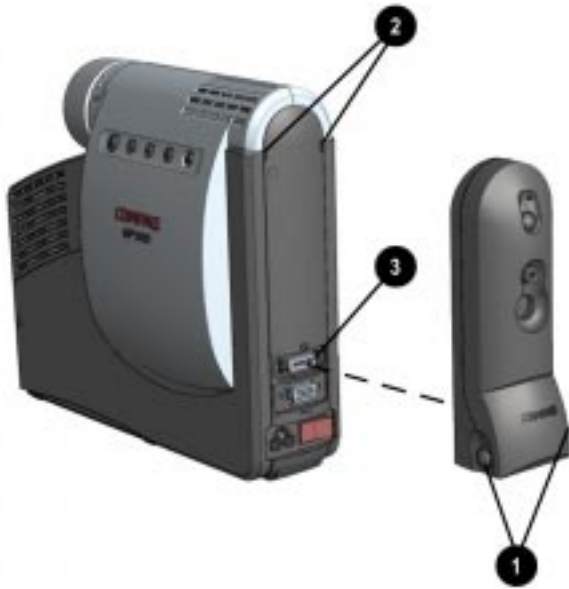

Connecting a Video Player



If your video player uses a round, one-prong composite video connector, use the RCA video cable. If your video player uses a round, four-prong S-video connector, use the S-video cable. Both cables are included with the Compaq Video Adapter.

1. Plug the RCA video cable into the "video out" port on the video player and the video port on the video adapter. If you are using the S-video cable, connect it to the "s-video out" connector on the video player and the s-video port on the video adapter.
2. Turn on the projector first, then the video player.
3. Push the Source button on the back of the video adapter to switch the projector signal from data (computer icon) to video (TV icon). The data mode receives computer inputs and the video mode receives video input such as a TV tuner, VCR, video, and camera.

With the Compaq Video Adapter attached, the projector is compatible with major video standards such as NTSC, PAL and SECAM. Use the on-screen menu to adjust the video performance manually or press the Resync button to optimize it automatically.