

ENGLISH

Declaration of Conformity

Manufacturer: TEC SA Dream Vision, 7 Rue La Caille, 75017 Paris, France

Local distributor: Contact details available on www.dreamvision.net

We declare under our sole responsibility that the DreamWeaver projector conforms to the following directives and norms:

EMC Directive 89/336/EEC, Amended by 93/68/EEC

EMC: EN 55022

EN 55024

EN 61000-3-2

EN 61000-3-3

Low Voltage Directive 73/23/EEC, Amended by 93/68/EEC

Safety: EN 60950: 2000

October, 2002

Trademarks

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Digital Light Processing is a trademark or registered trademark of Texas Instruments. Faroudja, DCDI, and TrueLife are trademarks or registered trademarks of Faroudja. DreamVision and DreamWeaver are trademarks or registered trademarks of TEC SA.

FCC Warning

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by DreamVision can void the user's authority to operate the equipment.

Safety Certifications

UL, CE

Important Note:

Be aware that:

The lamp of a projector is never covered by the warranty, except as listed in the Warranty conditions (page 43)

The DreamWeaver uses a DMD™ chip from TI™. This micromirror device is the main component of the DLP™ system. Although DreamVision produces the DreamWeaver with the maximum percentage of active micro-mirrors, there may be some micro mirrors that do not produce light. To know more about that, you can contact DreamVision at info@dreamvision.net

Table of Contents


Introduction	3
Positioning the projector	5
Video connections	6
Connecting a video device	7
Displaying a video image	8
Connecting a computer	10
Shutting down the projector	11
Troubleshooting your setup	11
Using the keypad buttons	18
Using the remote control	19
Optimizing video images	20
Customizing the projector	20
Using the menus	21
Picture menu	22
Settings menu	28
Maintenance	30
Cleaning the lens	30
Replacing the projection lamp	31
Appendix	33
Specifications	33
Accessories	33
Red LED behavior and projector errors	34
Projected image size	34
Source compatibility	35
Projector dimensions for ceiling mount installations	36
RS-232 terminal specifications	37

For complete details on connecting and operating the projector, refer to this User's Guide.

Important Operating Considerations

Do not place the projector on a tablecloth or other soft covering that may block the vents. Vents are placed along the left and right sides of the projector, as well close to the projector front lens. Do not use a non-approved ceiling mount. In the unlikely event of the lamp rupturing, discard any edible items placed in the surrounding area and thoroughly clean the area along the sides and in the front of the projector.


Do not place objects in the areas along the side and in the front of the projector

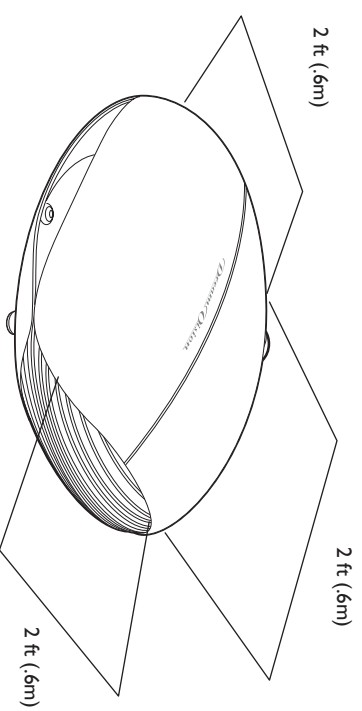



Introduction

First of all, we would like to thank you for choosing a DreamVision® Home Cinema Projector. Your new DreamWeaver projector from Dream Vision® is specifically designed for home cinema applications. The DreamWeaver sets the standard for high-definition digital perfection, featuring true High Definition 1280x720 resolution using the latest DLP™ technology and new DCDI video processing from Faroudja™. Calibrated to D65 color mastering standards, the DreamWeaver reproduces colors and details the way the director intended. Whether you are watching movies or High Definition broadcasts, you will enjoy breathtaking image quality.

Projector components and features

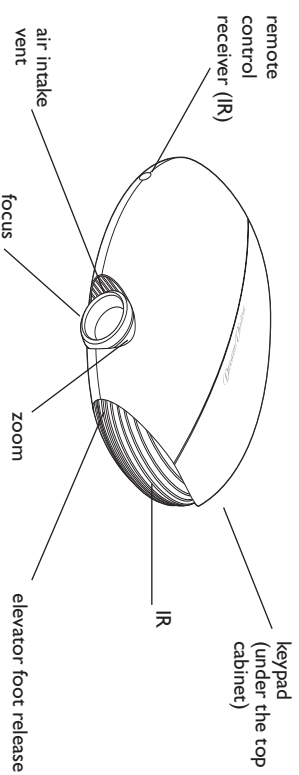

Included items

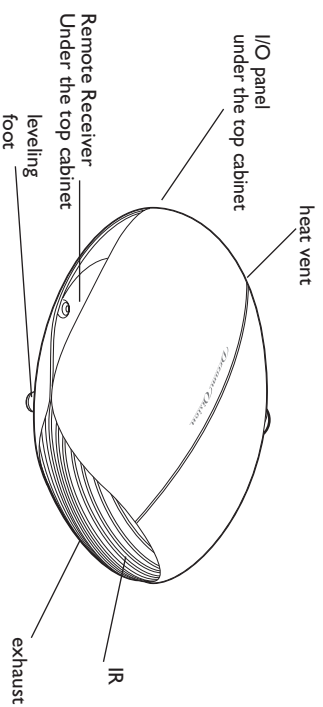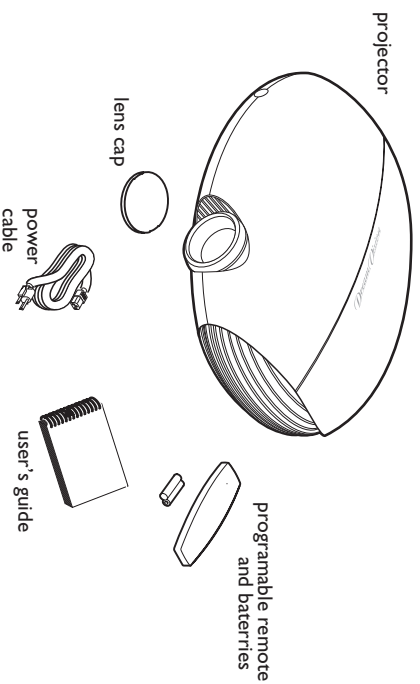

Connector Panel



The projector provides eight discreet video connectors, located under the top cover of the top cabinet:

- two component RCA
- two S-video
- one composite RCA
- one MI-DA (HD, DVI, and computer)
- one VESA (HD, HD component, and computer)
- one component D5

It also has a mini-jack input for a Niles or Xantech-compatible IR repeater and an RS-232 connector for serial control. The Command Line Interface (CLI) specifications and commands are listed in the Appendix starting on page 37.

Two 3.5 mm mini-jack triggers provide 12 volt current. Trigger 1 provides a constant output while the projector is on. If you connect your projection screen to Trigger 1, when you turn on the projector the screen will move down; when you turn the projector off, the screen will return to the storage position. Trigger 2 provides a 4:3 aspect trigger. When you select 4:3 in the Aspect Ratio menu or from the **Resize** button on the remote, a 12v signal will be sent after a five second delay. Use this trigger for screens with 4:3 aspect curtains. When you switch back to 16:9 format, the curtains open to reveal the entire screen.

For details on each connector type and their inputs, see page 35.

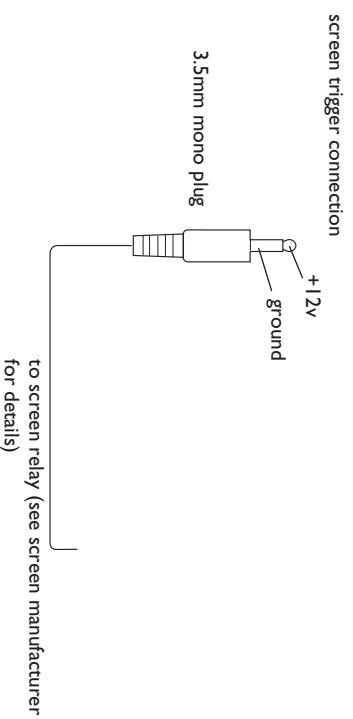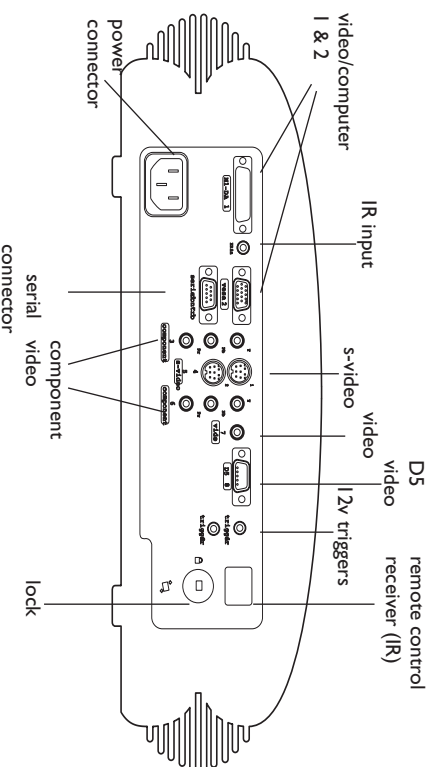

Positioning the projector

There are a number of factors to consider when determining where to set up the projector, including the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Here are some general guidelines.

1 Position the projector on a flat surface at a right angle to the screen.

The projector must be within 10 feet (3 m) of your power source. To ensure adequate cable access, place the projector at least 6 inches (0.15m) from a wall or other objects. Place the projector at least 5.6 feet (1.7 m) from the projection screen.



If you install the projector on the ceiling, refer to the installation guide that comes with the Ceiling Mount Kit for more information. To turn the image upside down, see page 28. DreamVision recommends use of an authorized DreamVision ceiling mount. The Ceiling Mount Kit is sold separately, see page 33.

2 Position the projector the desired distance from the screen.

The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image. For more information about projected image sizes, see page 34.

The image exits the projector at a given angle. This image offset is 11.6%. This means that if you have an image 10' high, the bottom of the image will be 1.6' above the center of the lens.

Check Page 34 for further help.

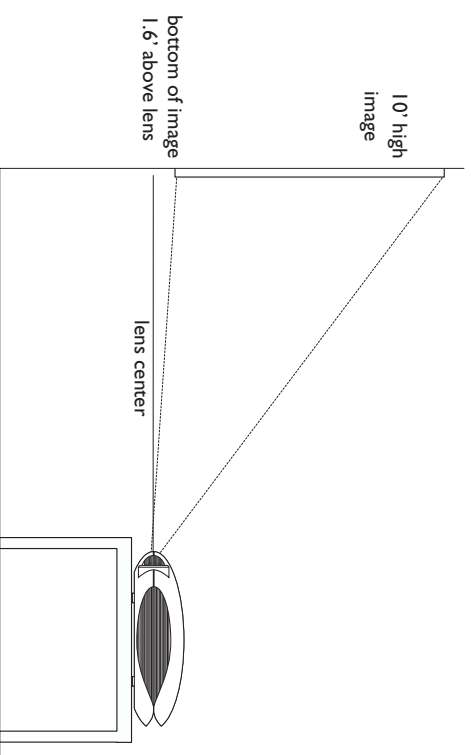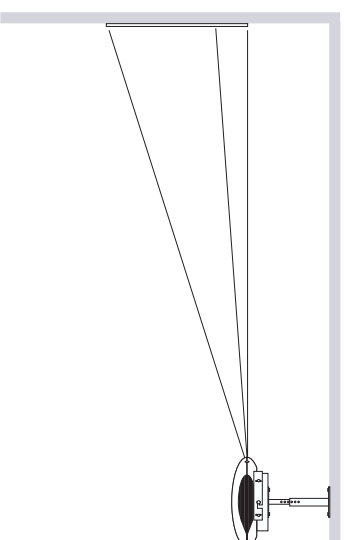


Video connections

You can connect VCRs, DVD players, camcorders, digital cameras, video games, HDTV receivers, and TV tuners to the projector. (You cannot directly connect the coaxial cable that enters your house from a cable or satellite company; the signal must pass through a tuner first. Examples of tuners are digital cable boxes, VCRs, digital video recorders, and satellite TV boxes. Basically, any device that can change channels is considered a tuner.) Audio must be provided by your own speakers, as the projector has no separate audio controls. If there is more than one output, select the highest quality one. DVI, Component video and RGB (M1, HD15) have the best quality, followed by S-video, and then composite video.

Table 1: Video connections

Input signal	Connector	Connector label on projector
Standard Broadcast TV (not HDTV), via cable, digital cable, satellite TV, DirectTV	Component video S-video Composite video	Component 3, 6 S-video 4, 5 Video 7
HDTV	Component video VESA DVI	Component 3, 6 VESA 2 M1-DA 1
DVD	Component video S-video Composite video	Component 3, 6 S-video 4, 5 Video 7
VCR	Composite video S-video Component video	Video 7 S-video 4, 5 Component 3, 6
Video Camera	Composite video S-video	Video 7 S-video 4, 5
Video Game	VESA Composite video S-video Component video	VESA 2 Video 7 S-video 4, 5 Component 3, 6

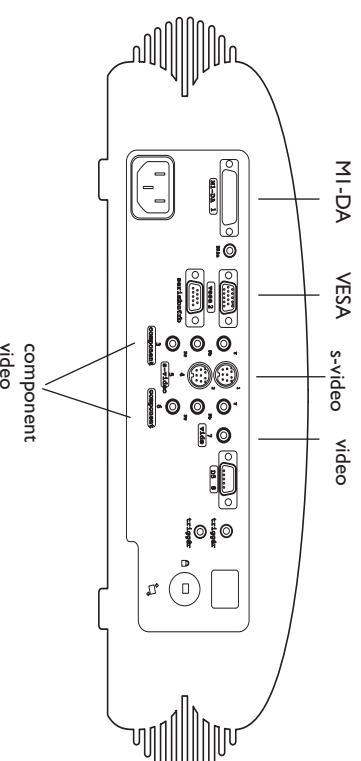

For a complete list of compatible sources, see page 35 of the Appendix.

Connecting a video device

If your video device has more than one output, select the highest quality one. DVI video has the best quality, followed by Component video, S-video, and then composite video.

If the video device uses component cable connectors, plug the cable's green connectors into the green component-out connector on the video device and into the green component connector (labeled "Y") on the projector. Plug the component cable's blue connectors into the blue component-out connector on the video device and into the blue component connector (labeled "Pb") on the projector. Plug the component cable's red connectors into the red component-out connector on the video device and into the red component connector (labeled "Pr") on the projector.

If the video device uses a round, four-prong S-video connector, plug an S-video cable into the S-video connector on the video device and into the **S-video** connector on the projector.

If the video device uses a yellow composite video connector, plug a composite video cable's yellow connector into the video-out connector on the video device. Plug the other yellow connector into the yellow **Video** connector on the projector.

If the video device uses a DVI connector, plug an M1-D cable into the video-out connector on the video device. Plug the other connector into the **M1-DA** connector on the projector.


If the video device uses a VESA connector, plug a VESA cable into the video-out connector on the video device. Plug the other connector into the **VESA** connector on the projector.

Connecting the power cable


Connect the power cable to the connector on the back of the projector and to your electrical outlet. The Power LED on the keypad turns solid green.

NOTE: Always use the power cable that shipped with the projector.


connect component cable

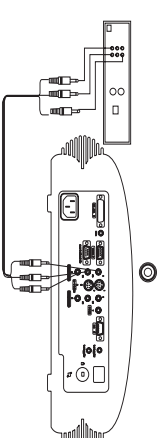


connect S-video cable

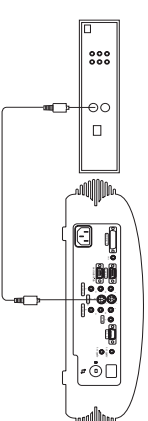


connect composite video cable

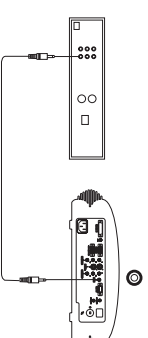


connect M1-D cable

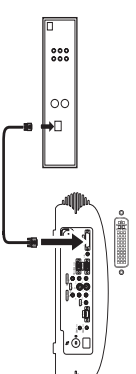

connect VESA cable

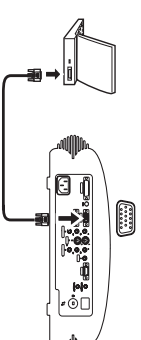

connect power cable

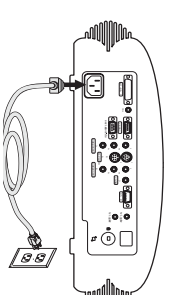

Displaying a video image


Remove the lens cap.

Press the **Power** button on the top of the projector.


The LED flashes green and the fans start to run. When the lamp comes on, the startup screen displays and the LED is steady green. It can take a minute for the image to achieve full brightness.

? No startup screen? Get help on page 11.


press Power

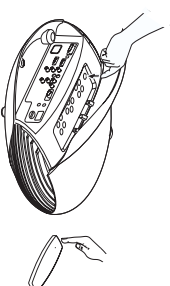


turn on video device

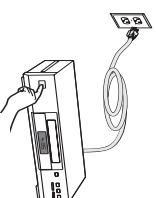


adjust height

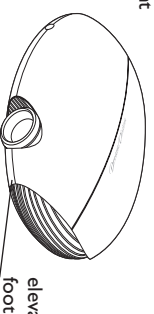

rotate leveling foot

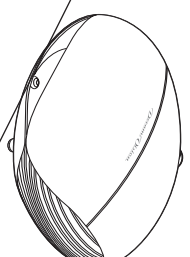

adjust distance

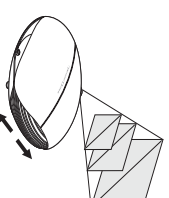

Adjust the height of the projector by pressing the release button to extend the elevator foot. Rotate the leveling foot, if necessary.


Plug in and turn on the video device.

An image from the video device should appear on the projection screen. If it doesn't, press the **Source** button on the keypad.

Position the projector the desired distance from the screen at a 90 degree angle to the screen. See page 34 for a table listing screen projected image sizes and distances to the screen.


Adjust the zoom or focus rings by rotating them until the desired image size and sharpness are produced.

adjust zoom and focus

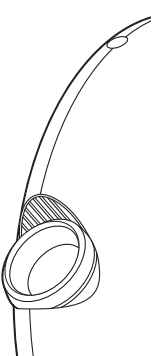


If the image is not square, adjust the keystone using the buttons on the keypad. Press the upper **Keystone** button to reduce the width of the upper portion of the image, and press the lower **Keystone** button to reduce the width of the lower portion.

adjust keystone

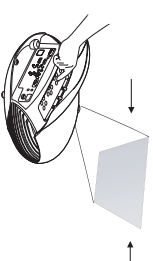

The **Contrast**, **Brightness**, **Color**, and **Tint** are factory calibrated to D65 colors, but you can adjust these settings in the Picture menu if necessary. See page 21 for help with the menus.


adjust Picture menu

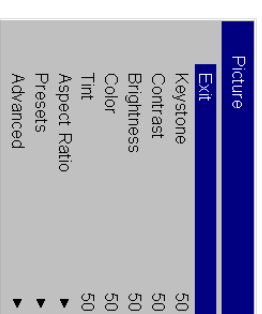

Connecting a computer


Connect either a VESA cable or M1 cable into the appropriate connector on the projector. Connect the other end to the video port on your computer. If you are using a desktop computer, you first need to disconnect the monitor cable from the computer's video port.

connect computer cable

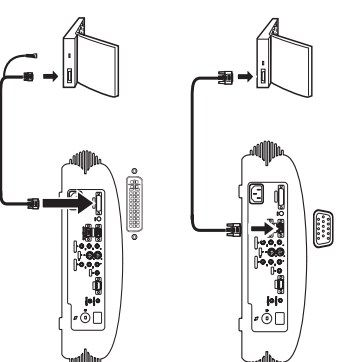

Connect the power cable to the connector on the back of the projector and to your electrical outlet.

connect power cable

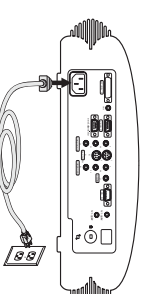


The Power LED on the projector's keypad turns solid green.

NOTE: Always use the power cable that shipped with the projector.

Turn on the projector, then your computer.

You can control the projector from an LCD control panel or computer by connecting an RS-232 cable to the projector's **Serial** connector. Specific RS-232 commands can be found in the Appendix starting on page 38

connect RS-232 cable

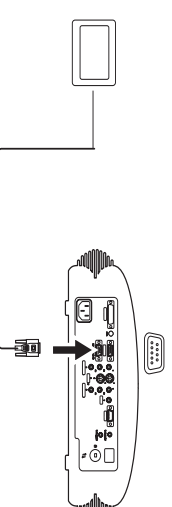

Troubleshooting your setup

If your image appears correctly on the screen, skip to the next section (page 19). If it does not, troubleshoot the setup.

The LED on top of the projector's keypad indicates the state of the projector and can help you troubleshoot.

Shutting down the projector

Power Save

The projector has a Power Save feature in the System menu that automatically turns the lamp off after no signals are detected for 20 minutes. After 10 additional minutes with no signal, the projector powers down. If an active signal is received before the projector powers down, the image is displayed. You must press the **Power** button to display an image after 30 minutes have passed.





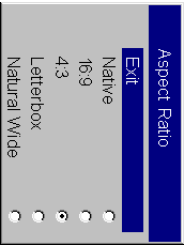


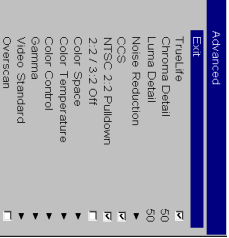
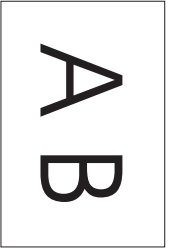
Turning off the projector











To turn off the projector, press the **Power** button. The lamp turns off and the LED blinks green for about one minute while the fans continue to run to cool the lamp. When the lamp has cooled, the LED lights green and the fans stop. Unplug the power cable to completely power off the projector.




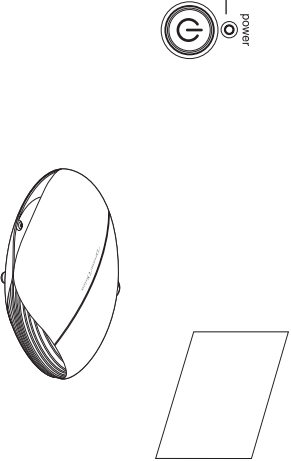
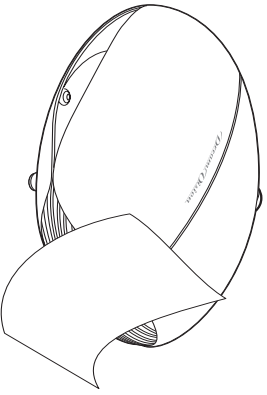
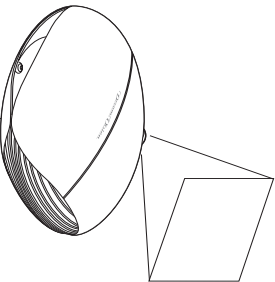
Table 2: LED behavior and meaning

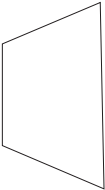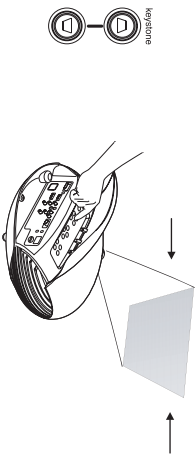LED color/behavior	Meaning
solid green	The projector is plugged in, or the projector has been turned on and the software has initialized. The projector has been turned off and the fans have stopped.
blinking green	The Power button has been pressed and the software is initializing, or the projector is powering down and the fans are running to cool the lamp.
blinking red	A fan (blinks 4 times) or lamp (blinks 3 times) failure has occurred. Turn off the projector and wait one minute, then turn the projector on again. Also check for a blocked vent or a stopped fan (blinks 5 times).
See page 34 for more information on blinking red LEDs.	
solid red	An unidentifiable error: please contact Technical Support.

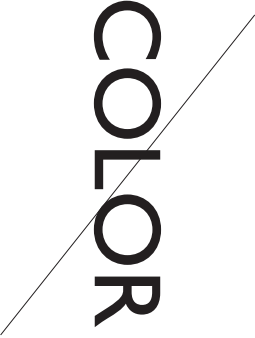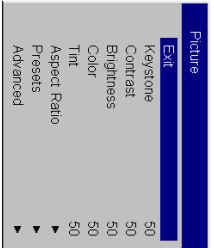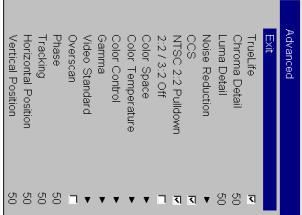The following table shows some potential problems. In some cases, more than one possible solution is provided. Try the solutions in the order they are presented. When the problem is solved, you can skip the additional solutions.
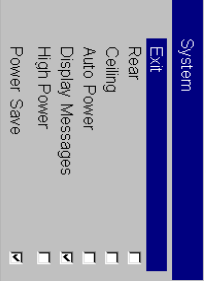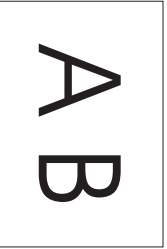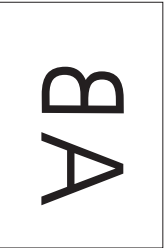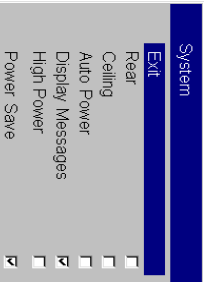
<p>Image not square</p> 	<p>Adjust keystone on keypad</p> 	<p>Square image</p> 
<p>Image does not fit 16:9 screen</p> 	<p>Change aspect ratio to 16:9 in Picture->Aspect ratio menu</p> 	<p>Correct image</p> 
<p>Edges of image distorted</p> 	<p>Turn Overscan on in the Picture->Advanced menu</p> 	<p>Correct image</p> 

<p>1. Projected colors don't match source</p> <p>2. Colors are washed out or too deep</p> <p>3. Image from component source appears greenish</p> 	<p>1. Adjust color, tint, color temperature, brightness, or contrast in the menus.</p> <p>2. Pick another gamma setting</p> <p>3. Pick another color space</p>  	<p>Correct image</p> 
<p>Image upside down</p> 	<p>Turn off Ceiling in Settings->System menu</p> 	<p>Correct image</p> 
<p>Image reversed left to right</p> 	<p>Turn off Rear in Settings->System menu</p> 	<p>Correct image</p> 

<p>Video image “torri” and fragmented</p> 	<p>Change Video Standard in Picture->Advanced menu</p> 	<p>Correct image</p> 
<p>Lamp won't turn on, LED blinking red (page 11)</p> <p>blinks ——— power red</p> 	<p>Make sure vents aren't blocked; allow projector to cool for one minute</p> 	<p>Unplug projector; wait one minute; plug in projector and turn it on: lamp lights</p> 


Computer-specific troubleshooting

Only startup screen appears




Press the Source button
 computer
Activate laptop's external port


or restart
laptop

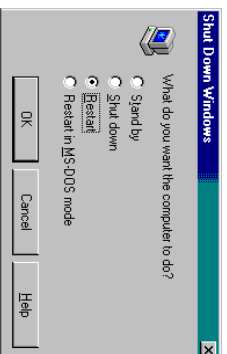


Computer image projected

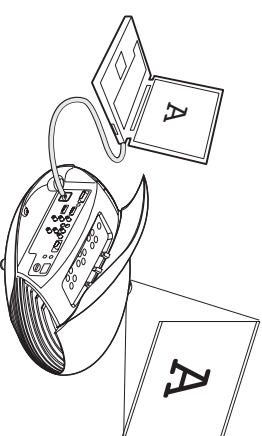


No computer image, just the words "Signal out of range"

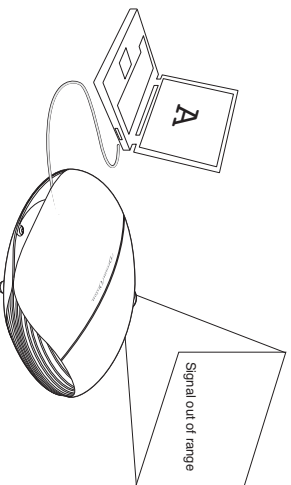


Adjust computer refresh rate in Control Panel>Display>Settings>Advanced>Adapter (location varies by operating system)

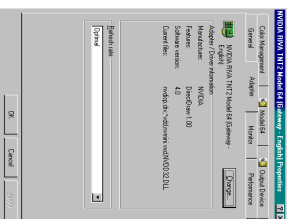

Computer image projected

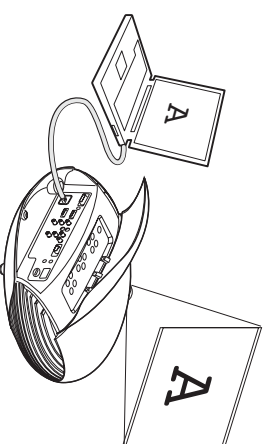
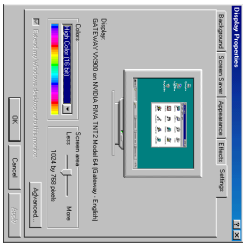
<p>Image fuzzy or cropped</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin: 5px;">A</div> <div style="border: 1px solid black; padding: 5px; margin: 5px;">A</div> </div>	<p>Set your computer's display resolution to the native resolution of the projector (Start->Settings->Control Panel->Display->Settings tab, select 1280x720)</p> <p>For a laptop, disable laptop monitor or turn-on dual-display mode</p> 	<p>Image clear and not cropped</p> <div style="border: 1px solid black; padding: 5px; margin: 5px;">A</div>
--	--	--

Still having problems?

If you need assistance, call directly you DreamVision retailer or contact our local importer (www.dreamvision.net)
Or, send us an e-mail at: service@dreamvision.net

When sending your DreamWeaver to one of our DreamVision Service Centers for repair, we recommend shipping the unit in its original packing material, or having a professional packaging company pack the unit with all accessories for shipping. Never forget to insure your shipment for its full value.

Using the keypad buttons

Most buttons are described in detail in other sections, but here is an overview of their functions:

Power—turns the DreamWeaver on (page 8) and off (page 8).

Menu—opens the on-screen menus (page 21).

Select—confirms choices made in the menus (page 21).

Up/down arrows—navigates to and adjusts settings in the menus (page 21).

Auto image—resets the projector to the source.


Presets—cycles through the 3 available user preset settings (page 24).

Keystone—adjusts squareness of the image (page 11).

Brightness—adjusts intensity of the image (page 22).

Resize—changes the aspect ratio (page 22).

Source—changes the active source (page 28).

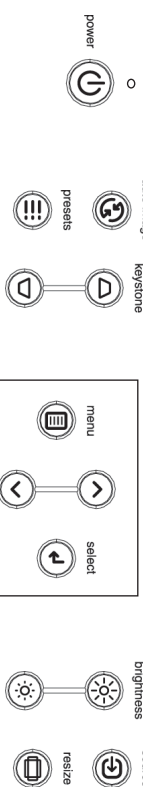

menu navigation buttons

Using the remote control

Use the provided four batteries in install them in the Remote. To operate, point the remote at the screen or at the projector. The range of optimum operation is 0 to 9,14 m. (30 feet).

Press the remote's **DREAM** button to have access to the DreamWeaver functions. Press then the **MENU** button (11) to enter the DreamWeavers' menu. Use the arrow buttons (12) to navigate, and the **Select** button (13 or 8) to select features and adjust values in the menus. See page 21 for more info on the menus.

The remote also has:

- **Power** button (1) to turn the projector on and **OFF** button (2) to turn it off (see page 11 for shutdown info)
- backlight button (3) to light the remote's buttons in the dark

On **Page 1** of the LCD screen you have also direct access to



- **Brightness +/-** and **Contrast +/-** (4) buttons to adjust the image
- **4 pre-set video inputs** (5) buttons to select the source
- **Resize** (6) button to change the Aspect Ratio (see page 22)

Then, press the Page (7) button to have access to the **Page 2** of the menu:

- **Blank** (9) button to display a blank screen instead of the current image (to change the color of the screen, see page 29)
- **Auto** (10) button to resynch the projector to the source

Troubleshooting the remote

- Make sure the batteries are installed in the proper orientation and are not dead.
- Make sure you're pointing the remote at the projector or the screen, not at the video device or the computer, and are within the remote range of 30 feet (9.14m).

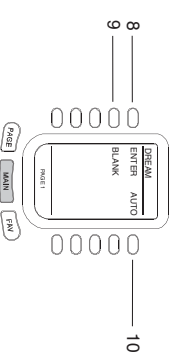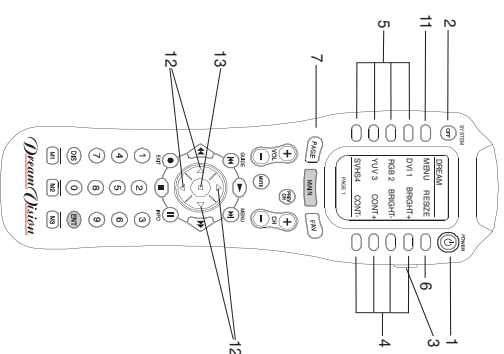

Optimizing video images

After the video device is connected properly and the image is on the screen, you can optimize the image using the onscreen menus. For general information on using the menus, see page 21.

- Change the Aspect ratio. Aspect ratio is the ratio of the image width to image height. TV screens are usually 1.33:1, also known as 4:3. HDTV and most DVDs are 1.78:1, or 16:9. Choose the option that best fits your input source in the menus, or press the **Resize** button on the remote to cycle through the options. See page 22.
- Adjust the Keystone, Contrast, Brightness, Color, or Tint in the Picture menu. See page 22.
- Select a different Color Temperature or use the Color Control to adjust the gain and offset of the red, green, and blue color. See page 26.
- Select a specific Color Space or Gamma. See page 26.
- Select a different Video Standard. Auto tries to determine the standard of the incoming video. Select a different standard if necessary. See page 26.
- Turn overscan on to remove noise around the video image. See page 27.
- Fine tune component inputs using the TruLife™ adjustments. See page 25.
- Choose High Power to maximize the light output. Remember that the High Power choice is not necessary, and may even bring over saturated white, when your room is dark enough. See page 28.
- Make sure your DVD player is set for a 16:9 television. See your DVD player's user's guide for instructions.

Customizing the projector

You can customize the projector for your specific setup and needs. See page 28 to page 30 for details on these features.

- For rear projection, turn Rear mode on in the **Settings>System** menu.
- For ceiling mounted projection, turn Ceiling mode on in the **Settings>System** menu.
- Turn the projector's display messages and power-on chime on and off.
- Turn on power saving features.
- Specify blank screen colors and startup logos. Make the menus translucent.
- Specify the menu language.

Using the menus



To open the menus, press the menu button on the keypad or remote. (The menus automatically close after 60 seconds if no buttons are pressed.) The Main menu appears. Use the arrow buttons to move up and down to highlight the desired submenu, then press the **Select** button.

To change a menu setting, highlight it, press **Select**, then use the up and down arrow buttons to adjust the value, select an option using radio buttons, or turn the feature on or off using check boxes. Press **Select** to confirm your changes. Use the arrows to navigate to another setting. When your adjustments are complete, navigate to Exit, then press **Select** to go to the previous menu; press the **Menu** button at any time to close the menus.


The menus are grouped by usage:

- The Picture menu provides image adjustments.
- The Settings menu provides set-up type adjustments that are not changed often.
- The About menu provides a read-only display of information about the projector and source.

Certain menu items may be hidden until a particular source is connected. For example, Tint is only available for NTSC video sources and will be hidden when other sources are active. Other menu items may be grayed out when they are not available. For example, Brightness is grayed out until an image is active.

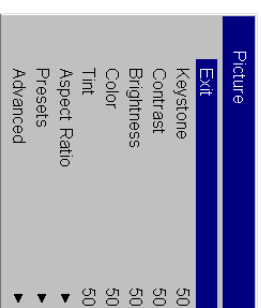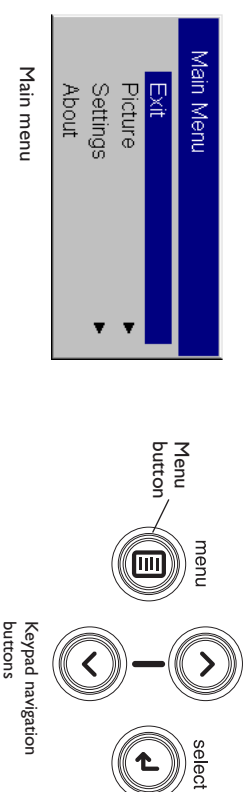

Picture menu

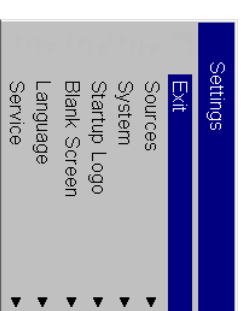


Settings menu




About menu


16:9: the default is **16:9**, which preserves the 16:9 aspect ratio and is designed to be used with content that is Enhanced for Widescreen TVs.

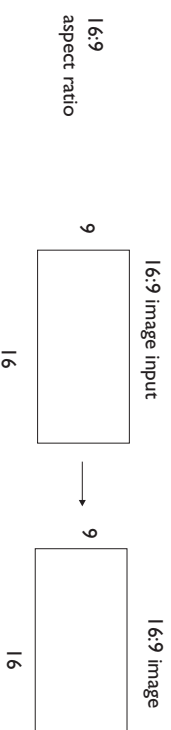


4:3: resizes the image from its original version to fit a standard 4:3 aspect ratio screen. If you have a 4:3 source on a 16:9 screen, the image is placed in a 16:9 space, so black bars appear at the sides of the image.

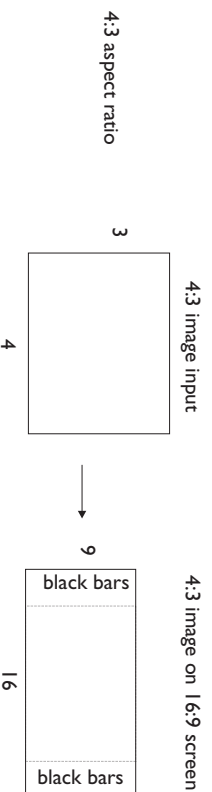

Letterbox: preserves the 16:9 aspect ratio. If you have a 16:9 source and screen, the image fills the screen. If your source is letterboxed, the image expanded to fill the screen.

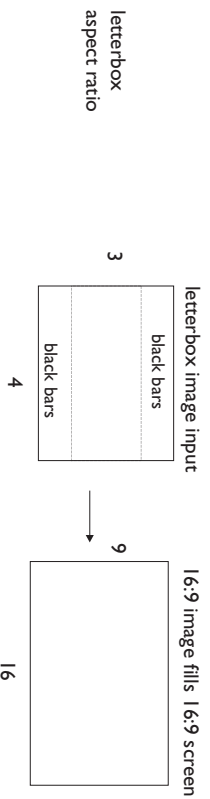


Natural Wide: this mode stretches a 4:3 image to fill the entire 16:9 screen. The center two-thirds of the image is unchanged; the edges of the image are stretched.

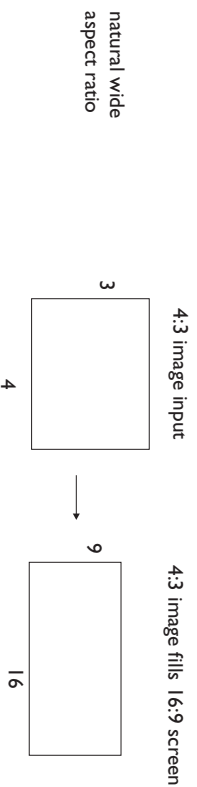

Presets: This allows you to customize settings and save the settings to be restored later. To restore the factory default settings, choose Factory Reset in the **Settings>Service** menu.

To set a preset for the current source, adjust the image, select **Save Settings** in the Presets menu, then choose Save User 1, 2, or 3. You can recall these settings in the future by selecting the appropriate user presets.

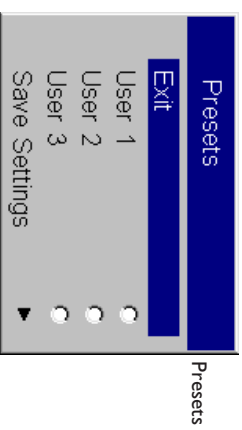


Advanced settings

TrueLife: This option refers to Faroudja's TrueLife processing of the image. All standard definition interlaced video signals (composite, S-video and component) are routed through this processor. Extended and High Definition progressive component sources are not routed through this processor by default. You can turn TrueLife on to route these signals through the processor and then adjust the following 2 options:

Chroma Detail: This adjusts the color sharpness.

Luma Detail: This adjusts the sharpness.

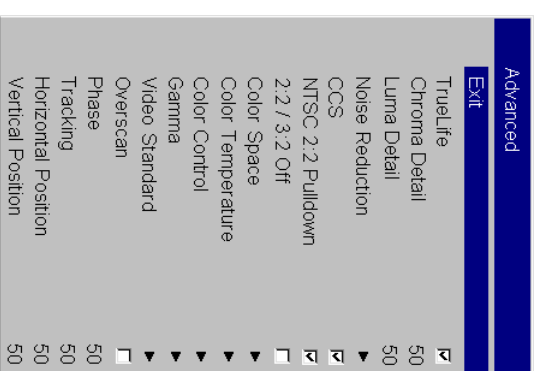

Advanced


Noise Reduction: adjusts signal noise reduction. Choose Off to have no noise reduction, choose Auto to have the software determine the amount of noise reduction, or choose Manual and adjust the Level.

Skintone Bypass prevents the noise reduction processing from being applied to skin tones. Images of people often look better with less processing. Available when Auto or Manual are selected.

CCS: (Cross Color Suppression) processes the signal to remove any color information from the luma portion of the signal. It is On for all composite signals, Off for all component signals, and can be turned on or off for all S-video signals.


NTSC 2:2 Pulldown: Turn this feature on to correctly display NTSC signals created from 30 frames/second source material (instead of the film standard 24 frames/second).

2:2/3:2 Off: Turn this feature on to turn off film mode detection. Some video material (especially film animation) is difficult to distinguish from film.

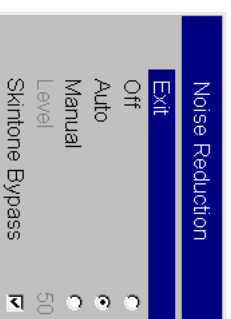

Noise reduction

Color Space: This option applies to computer and HDTV sources (it won't appear in the menu for video sources). It allows you to select a color space that has been specifically tuned for the video input. When Auto is selected, the projector automatically determines the standard. To choose a different setting, turn off Auto, then choose RGB for computer sources, choose REC709 for component 1080i or 720p sources, or choose REC601 for component 480p or 576p sources.

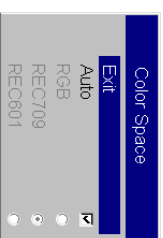


Color Space

Color Temperature: changes the intensity of the colors. Select a listed value.




Color Temperature

Color Control: allows you to individually adjust the gain (relative warmth of the color) and the offset (the amount of black in the color) of the red, green, and blue colors.

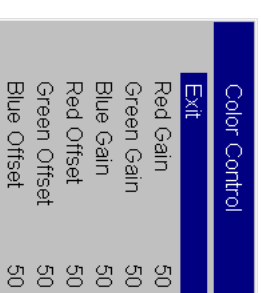

Color Control

Gamma: Gamma tables contain preset intensity configurations optimized for the input source. You can select a gamma table that has been specifically tuned for either film, video, Bright Room, or PC input. (Film input is material originally captured on a film camera, like a movie; video input is material originally captured on a video camera, like a TV show or sporting event.)

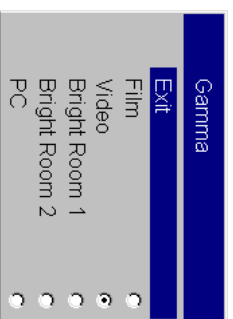

Gamma

NOTE: Your viewing preferences may vary. Cycle through the gamma options and pick the one you like the best.

Video Standard: When it is set to Auto, the projector attempts to pick the video standard automatically based on the input signal it receives. (The video standard options may vary depending on your region of the world.) If the projector is unable to detect the correct standard, the colors may not look right or the image may appear "torn." If this happens, manually select a video standard by selecting NTSC, PAL, or SECAM from the Video Standard menu.



Video Standard

Overscan: (video sources only) removes noise around the video image.

The following 4 options are for computer or HDTV sources only:

Phase: adjusts the phase of the video signal's digital conversion.

Tracking: adjusts the frequency of the video signal's digital conversion.

Horizontal/Vertical Position: adjusts the position of the source.

Settings menu

Sources: allows you to assign a particular input to a specific source key on the remote and enables or disables Autosource. When Autosource is not checked, the projector defaults to the last-used source. If no source is found, a blank screen displays. When Autosource is checked, the projector checks the last-used source first at power up. If no signal is present, the projector checks the sources in order until a source is found or until power down.

You can use the Source Enable feature to eliminate certain sources from this search, which will speed the search. By default, the check boxes for all sources are checked. Uncheck a source's box to eliminate it from the search.

System

All options in this menu toggle between on and off.

Rear: reverses the image so you can project from behind a translucent screen.


Ceiling: turns the image upside down for ceiling-mounted projection.

NOTE: It is recommended that all final image adjustments in Ceiling mode are made once the unit has fully warmed up (approximately 20 minutes).


Auto Power: When Auto Power is checked, the projector automatically goes into the startup state after the projector receives power. This allows control of ceiling mounted projectors with a wall power switch.

Display Messages: displays status messages (such as "Searching") in the lower-left corner of the screen.


High Power: Turn this on to increase the light output of the lamp. This also shortens lamp life and increases fan noise.

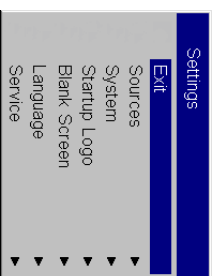


Settings menu

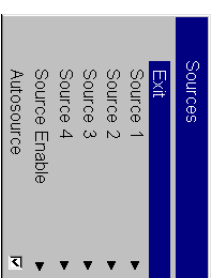


Sources

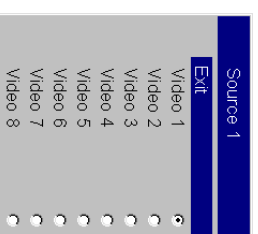

Source 1

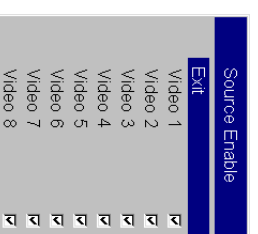


Source Enable

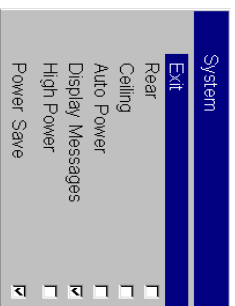

System menu

Power Save: when On, the lamp is automatically turned off after no signals are detected for 20 minutes. After 10 additional minutes with no signal, the projector powers down. If an active signal is received before the projector powers down, the image will be displayed.

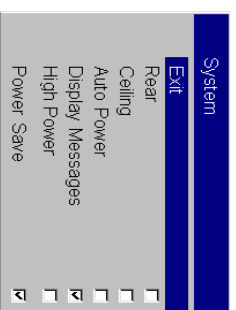


System menu

Startup Logo: allows you to display a blank Black, White, or Blue screen instead of the default screen at startup and when no source is detected.




Startup logo

Blank Screen: determines what color displays when you press the Blank button on the remote or when no source is active.

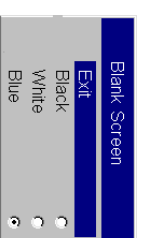

Blank Screen

Language: allows you to select a language for the onscreen display of menus and messages.

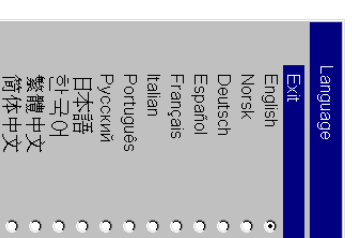

Language

Service: to use these features, highlight them and press **Select**.

Factory Reset: restores all settings (except Lamp Hours, Ceiling, and Rear) to their default after displaying a confirmation dialog box.

Test Pattern: displays a test pattern when the **Blank** button on the remote is pressed. To select the patterns, use the up/down arrows on the remote or keypad.

Service Code: only used by authorized service personnel.

Maintenance

Cleaning the lens

- 1 Apply a non-abrasive camera lens cleaner to a soft, dry cloth.


Avoid using an excessive amount of cleaner, and don't apply the cleaner directly to the lens. Abrasive cleaners, solvents or other harsh chemicals might scratch the lens.

- 2 Lightly wipe the cleaning cloth over the lens in a circular motion. If you don't intend to use the projector immediately, replace the lens cap.



Service menu

clean the lens
with a soft dry cloth
and non-abrasive
cleaner

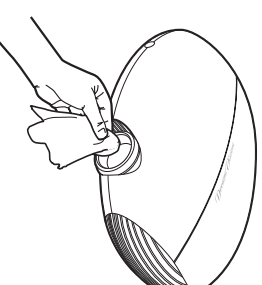

Replacing the projection lamp

The lamp hour timer in the About menu counts the number of hours the lamp has been in use. After 1980 hours, the message "Change lamp" briefly appears on the screen at each startup. To maintain optimal video performance, we recommend changing the lamp after 2000 hours, depending on usage.

- 1 Turn off the projector and unplug the power cable.
- 2 Wait 60 minutes to allow the projector to cool thoroughly.

- 3 Turn the projector upside down and remove the lamp door by removing the two screws and sliding the lamp door tabs out of the three tab bays.


CAUTION: Never operate the projector with the lamp door removed. This disrupts the air flow and causes the projector to overheat.

- 4 Loosen the captive screw on the lamp module.

About	
Lamp Hours Used	1980
Active Source	Video 1
Signal Format	1024x768 @ 72Hz
Version	2.1

Lamp hours used

turn off and unplug
the projector

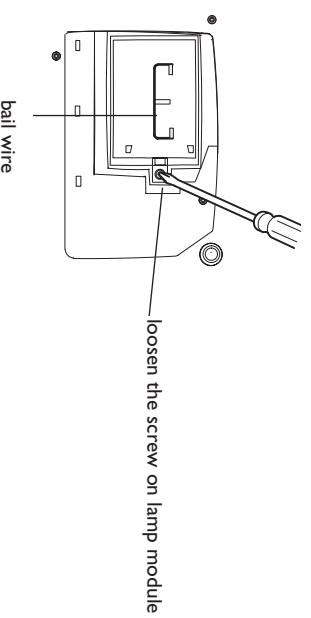

WARNINGS:

- To avoid burns, allow the projector to cool for at least 60 minutes before you replace the lamp.
- Do not drop the lamp module. The glass may shatter and cause injury.
- Do not touch the glass lamp screen. Fingerprints can obscure projection sharpness.
- Be extremely careful when removing the lamp module. In the unlikely event that the lamp ruptures, small glass fragments may be generated. The lamp module is designed to contain most of these fragments, but use caution when removing it.


- 5 Carefully remove the lamp module by grasping and lifting the metal bail wire. Dispose of the lamp in an environmentally proper manner.
- 6 Install the new lamp module, making sure that it is properly seated.
- 7 Tighten the single screw.
- 8 Replace the lamp door by sliding the tabs into the tab bays and tightening the two screws.
- 9 Plug in the power cable, then press the **Power** button to turn the projector back on.
- 10 Reset the lamp hour timer.

Resetting the lamp timer

To reset the lamp age, simultaneously holding down the two **Brightness** buttons on the projector's keypad for 10 seconds.

Using the security lock

The projector has a security lock for use with a PC Guardian Cable Lock System. Refer to the information that came with the lock for instructions on how to use it.

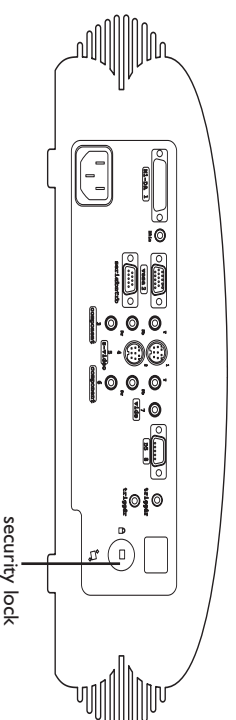

Appendix

Specifications

Temperature Operating	50 to 95° F (10 to 35° C) at 0 - 10,000 feet
Non-operating	-4 to 158° F (-20 to 70° C) at 0 -20,000 feet
Altitude Operating	0 to 3,048 meters (10,000 feet)
Non-operating	0 to 6,096 meters (20,000 feet)
Humidity Operating	10% to 95% relative humidity, non-condensing
Non-operating	10% to 90% relative humidity, non-condensing
Dimensions	Diameter: 439 mm - Height: 127 mm
Weight	4.4 kg unpacked
Optics Focus Range	1.5 - 10 meters (5 - 32.8 feet)
Lamp Type	UHP lamp (dual watt: 200 and 250 watt)
Input Power Requirements	100V-120V 4A, 50/60 Hz 200V-240V 2A 50 Hz

Accessories

Standard Accessories (ship with the projector)

Shipping Box (with packaging)
Power Cable (country-dependent)
Programmable Remote (and batteries)
Projection Lamp Module (included in projector)
Lens Cap
User's Guide

Optional Accessories

Projector Mount
Replacement Lamp Module

NOTE: Use only approved accessories.

Red LED behavior and projector errors

If the projector is not functioning properly and the red LED is blinking, consult **Table 2** to determine a possible cause. There are two second pauses between the blinking cycles.

Table 3: Red LEDs

Red LED Behavior	Explanation
One (1) blink	The lamp won't strike after five (5) attempts. Check the lamp and lamp door installations for loose connections.
Three (3) blinks	The projector has shut down the lamp. Turn off the projector, wait one minute, then turn it back on. Replace the lamp. Contact Technical Support for repair if replacing the lamp does not solve the problem.
Four (4) blinks	The fan has failed. Replace the lamp (the lamp module contains a fan). Contact Technical Support for repair if replacing the fan does not solve the problem.
Five (5) blinks	The projector is overheating. Check for a blocked air vent. Contact Technical Support for repair if clearing the air vents does not solve the problem.

Projected image size

Table 4:
Range of projection distances for a given screen size

16:9 Screen dimensions (inches/m)	Screen diagonal (inches/m)	Projection Distance	
		Maximum zoom (feet/m)	Minimum zoom (feet/m)
27x48 .69x1.22	55.1/1.4	6.0/1.82	8.3/2.54
34x60 .9x1.5	68.8/1.75	7.5/2.3	10.4/3.2
40.5x72 1.0/1.8	82.6/2.1	9.0/2.7	12.5/3.8
45x80 1.1x2.0	91.8/2.3	10.0/3.0	13.9/4.2
49x87 1.2/2.2	99.8/2.5	10.8/3.3	15.1/4.6
52X92 1.3X2.3	105.6/2.7	11.4/3.5	16.0/4.9
54X96 1.4X2.4	110.1/2.8	11.9/3.6	16.7/5.1
58X104 1.5X2.6	119.3/3.0	12.9/3.9	18.1/5.5
65X116 1.7X3	133.1/3.4	14.4/4.4	20.1/6.1

Source compatibility



Table 5:
Source Compatibility

Video	Component and RGB HDTV (720p, 1035i, 1080p, 1080p-24Hz) DVI/HDCP for digital video and encrypted digital video Component EDTV (480p, 576p progressive scan), SECAM: M, Component, Composite and S-Video standard video (480i, 576i; 576i RGB SCART with adapter, NTSC, NTSC M 4.43, PAL: B, H, I, M, N)
Computer	Digital and analog PC, Macintosh, 1280x1024 resolution
Communi- cation	USB and RS-232

Table 6:
Projector Inputs and Outputs

2-Component (Gold RCA)	HDTV, EDTV, and Standard TV component
1-Component (D5)	HDTV, EDTV, Standard TV, RGB SCART with adapter
2-S-Video	Standard Video
1-Composite (RCA)	Standard Video
1-M1-DA VESA	HDTV RGB, HDTV component, DVI, computer, and USB
1-HDI 15 VESA	HDTV RGB, HDTV component, computer
1-9-pin Dsub male	RS-232
1-3.5 mm mini jack	IR Repeater (Niles/Xantech compatible)
2-3.5 mm mini jack	1-12v screen drop, 1-12v 4:3 aspect "curtains"

Projector dimensions for ceiling mount installations

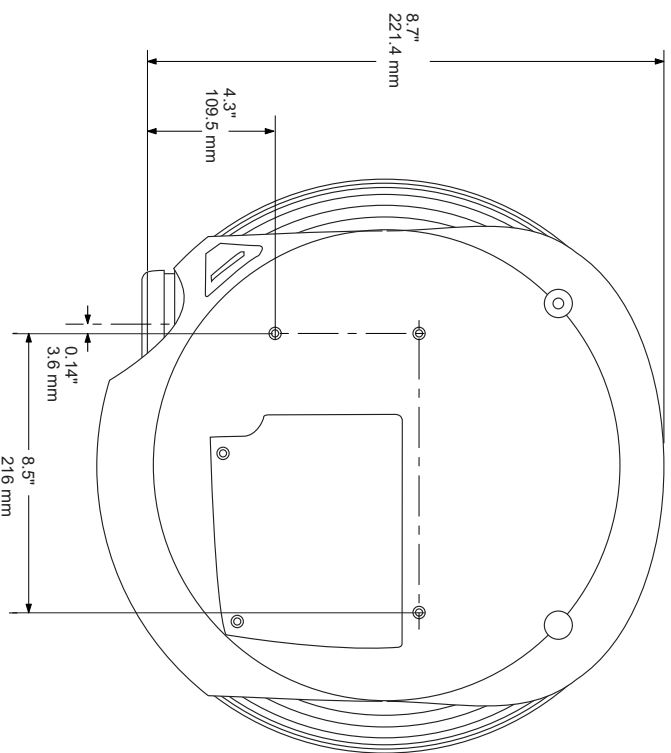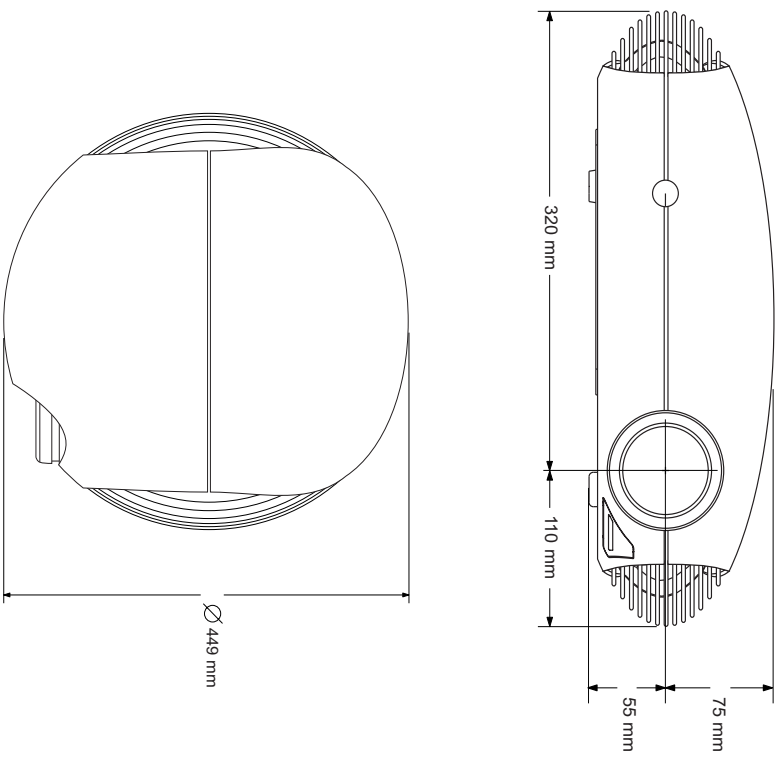

RS-232 terminal specifications

Communication configuration

To control the projector from an LCD control panel, connect an RS-232 cable to the serial control connector on the projector and set your computer's serial port settings to match this communication configuration:

Setting	Value
Bits per second	19,200
Data bits	8
Parity	None
Stop bits	1
Flow control	None
Emulation	VT100

Command format

All commands consist of 3 alpha characters followed by a request, all enclosed in parentheses. The request can be a read request (indicated by a “?”) or a write request (indicated by 1 to 4 ASCII digits).

A read request format: (AAA?) where

(starts the command
AAA	denotes the command
?	denotes the read request
)	ends the command

A read command returns the range and the current setting, for example:

Function	Command	Response
Brightness	(BRT?)	(0-22, 10)
Lamp hours	(LMP?)	(0-9999, 421)

A write request example: (AAA###) where

(starts the command
AAA	denotes the command
###	denotes the value to be written (leading zeros not necessary)
)	ends the command

Some commands have ranges, while others are absolute. If a number greater than the maximum range is received, it is automatically set to the maximum number for that function. If a command is received that is not understood, a “?” is returned. With absolute settings, “0” is off, 1-9999 is on. The one exception is the Power command, where 0 is off and 1 is on.

Function	Command	Response
Brightness	(BRT10)	Sets the brightness to 10
Power	(PWR0)	Turns power off
Power	(PWR1)	Turns power on
Power	(PWR9999)	?

Supported commands

Function	Command	Range	Default				
Aspect Ratio	ARZ	0-4 0 = Native 1 = 16:9 2 = 4:3 3 = Letterbox 4 = Natural Wide	1	Color Temp	TMP	0-2 0 = 9300 1 = 8200 2 = 6500	2
Auto Chirpe Enable	ACE	0-1	1	Contrast	CON	8-252	128
Auto Power	APO	0-1	0	CCS	CCS	0-1	0
Auto Source	ASC	0-1	1	Display Messages	DMG	0-1	1
Blank	BLK	0-1	0	Factory Reset (Write only)	RST	0-1	n/a
Blank Screen	BSC	0-2 0 = black 1 = blue 2 = white	0	Gamma Table	GTB	0-4 0 = PC 1 = Video 2 = Film 3 = Bright Room 1 4 = Bright Room 2	2
Blue Color Offset	BCO	1-63	32	Green Color Offset	GCO	1-63	32
Blue Gain	BCG	1-63	32	Green Gain	GCG	1-63	32
Brightness	BRT	8-252	128	High Power Enable	HPE	0-1	0
Ceiling	CEL	0-1	0	Horizontal Position	HPS	n/a	n/a
Chroma Detail	CDE	8-248	128	Keystone	DKC	2-254	128
Color	CLR	8-252	128	Lamp Hours (Read only)	LMP	0-32767	0
Color Space	CSM	0-7 0 = RGB 3 = REC601 2 = REC709 7 = Auto	7	Lamp Reset	LMR	0-32767	0
				Luma Detail	LDE	8-248	128
				Menu	MNU	0-1	0
				Menu Navigation	NAV	0-4 0 = up 1 = down 4 = select	n/a

Language	LAN	0-11	0	Skirtone Bypass Enable	SBE	0-1	1
		0 = English		Source	SRC	0-7	2
		1 = French				0 = Video 1, M1	
		2 = German				1 = Video 2, YESA	
		3 = Spanish				2 = Video 3, Component 1	
		4 = Chinese Traditional				3 = Video 4, S-Video 1	
		5 = Japanese				4 = Video 5, S-Video 2	
		6 = Korean				5 = Video 6, Component 2	
		7 = Portuguese				6 = Video 7, Composite	
		8 = Russian				7 = Video 8, D5	
		9 = Norwegian					
		10 = Chinese Simplified					
		11 = Italian					
NTSC 2:2 Pulldown Enable	NPE	0-1	0	Startup Logo	DSU	0-1	1
Noise Reduction Enable	NRE	0-2	8	Tint	TNT	8-252	128
		0 = Off		Tracking	MTS	2148-2248	n/a
		1 = Auto		Translucent OSD	TOE	0-1	1
		3 = Manual		Truelife Enable	TLE	0-1	1
Noise Reduction Level	NRL	8-248	8	Vertical Position	VPS	n/a	n/a
Overscan	OVS	0-1	0	Video Standard	VSU	0-3	0
Phase	MSS	0-31	n/a			0 = Auto	
Power	PWR	0-1	0			1 = NTSC	
Power Save	PSV	0-1	0			2 = PAL	
Presets	PST	0-2	0			3 = SECAM	
		0 = User 1					
		1 = User 2					
		2 = User 3					
Rear Project	REA	0-1	0				
Red Color Offset	RCO	1-63	32				
Red Gain	RCG	1-63	32				

Numerics

- 12v triggers 4, 35
- 16x9 4, 13, 20, 22, 23
- 4x3 23
- 4x3 aspect trigger 4

A

- Adjusting image 9, 22
- Advanced menu 25
- Altitude limits 33
- Aspect Ratio 22
- Auto Power 28
- Autosource 28

B

- Blank Screen 29
- Blinking green 11
- Blinking red 11

C

- Cable box 6
- CCS 25
- Ceiling 28
- Chroma Detail 25
- Cleaning the lens 30
- CLI commands 38
- Color Space 26
- Color suppression 25
- Colors are incorrect 14
- Command line interface commands 38
- Component cable connector 7
- Composite video connector 7
- Computer, connecting 10

Connecting

- computer 10

power cable 7

video device 7

Connector panel 4

Contacting DreamVision 17

Customer service contact information 17

D

- D65 colors 9
- Dimensions of projector 36
- Display Messages 28
- DreamVision website 2
- DVI connector 7

E

- Error codes 34

F

- Factory Reset 30
- Faroudja video processing 25
- Focus 9
- Fuzzy image 17

H

- HDTV 6, 20, 22, 35
- HDTV sources 26, 27
- Height, adjusting 8
- High Power 28
- Horizontal Position 27

- I**
 - Image
 - display video 8
 - focussing 9
 - size 5
 - zooming 9
 - Inputs 35
 - IR repeater 4
- K**
 - Keystone 9, 22
- L**
 - Lamp replacement 31
 - Lamp timer, resetting 32
 - Lamp won't turn on 15
 - Language 29
 - LED
 - blinking green 11
 - blinking red 15
 - solid green 11
 - LED behavior 11, 34
 - Lens cleaning 30
 - Letterbox 23
 - Luma Detail 25
- M**
 - Main menu 21
 - Maintenance 30
 - Menus 21
 - changing the language 29
 - making translucent 29
- N**
 - Native 22
- Natural Wide** 23
- No computer image** 16
- No startup screen** 12
- Noise Reduction** 25
- NTSC Pulldown** 25
- O**
 - Offset 5
 - Only startup screen appears 16
 - Optional accessories 33
 - Overscan 27
- P**
 - Phase 27
 - Picture menu 22
 - Power button 8
 - power cable 7, 10
 - Power Save 11, 29
 - Presets 24
 - projection distance 5, 34
 - projector
 - adjusting height 8
 - cleaning the lens 30
 - compatible sources 35
 - connecting a video device 7
 - connector panel 4
 - controlling projection screen 4
 - customizing 20
 - dimensions 36
 - displaying a video image 8
 - image sizes 34
 - included items 3
 - inputs and outputs 35
 - LED behavior 11
 - maintaining 30
 - menus 21

- optimizing images 20
- optional accessories 33
 - overview 3
 - positioning 5, 8
 - remote control 19
 - replacing the lamp 31
 - resetting lamp timer 32
 - saving settings 24
 - security lock 32
 - setting up 5
 - shutting down 11
 - specifications 33
 - standard accessories 33
 - troubleshooting 11

R

- Rear 28
- Remote control 19
- Replacing the lamp 31
- Resetting the lamp timer 32
- Resize button 22
- Resolution 3
- RS-232
 - connecting 4, 10
- RS232
 - specifications 37

S

- Security lock 32
- Serial connection 10
- Serial connection 4, 37
- Service Code 30
- Service menu 30
- Settings menu 28
- Shutting down the projector 11
- Skintone Bypass 25

- Solid green 11
- Solid red 11
- Source compatibility 35
- Source troubleshooting 12, 16
- Sources 28
- Specifications 33
- Standard accessories 33
- Startup Logo 29
- S-video connector 7
- System menu 28

T

- Temperature limits 33
- Test Pattern 30
- Tracking 27
- Triggers 4
- Troubleshooting 11, 12, 16
- Truelife settings 25
- TV tuner 6

V

- Vertical Position 27
- VESA connector 7
- Video connections 6
- Video images, optimizing 20
- Video processing 25

W

- Warranty 17
- Website 2

Z

- zoom 9

Limited Warranty

Subject to the Limitations, Exclusions and Disclaimers hereof, TEC SA DreamVision (DreamVision) warrants that the Projector, Lamps and Accessories (hereinafter collectively or individually referred to as "Product" as appropriate) purchased from DreamVision or the if tge DreamVision distributors will conform to DreamVisions' specifications and be free from defects in material or workmanship for the respective Limited Warranty period. DreamVision does not warrant that the Product will meet the specific requirements of the end-user customer.

If the Product while subject to this Limited Warranty, is defective in material or workmanship during the warranty period, then DreamVision, at its option, will REPAIR or REPLACE the Product.

All exchanged parts and Products replaced under this Limited Warranty will become property of DreamVision. DreamVisions' sole obligation is to supply (or pay for) all labor necessary to repair the Product found to be defective within the Limited Warranty period and to repair or replace defective parts with new parts or, at the option of DreamVision, serviceable used parts that are equivalent or superior to new parts performance. Limited Warranty periods are as follows:

- **Projector Product Limited Warranty Period (Excluding Lamps):**
- See distributors' specific conditions.
- **Lamp Product Limited Warranty Periods:** From the date of Projector Product purchase, the original installed Lamp shall have a **90-day or 500 hours** usage Limited Warranty Period, whichever comes first, and replacement Lamps purchased at the time of Projector Product purchase will have a **500 hours** usage Limited Warranty period.
- **Accessory Product Limited Warranty Period:** one (1) year from date of purchase.

WARRANTY LIMITATION AND EXCLUSION

THIS WARRANTY SETS FORTH DREAMVISIONS' MAXIMUM LIABILITY FOR ITS PRODUCT. THIS WARRANTY EXTENDS ONLY TO PRODUCTS PURCHASED FROM DREAMVISION OR A DREAMVISION AUTHORIZED RESELLER.

DreamVision shall have no further obligation under the foregoing Limited Warranty if the Product has been damaged due to abuse, misuse, neglect, smoke exposure (cigarette or otherwise), accident, unusual physical or electrical stress, unauthorized modifications (including use of an unauthorized mount), tampering, alterations, or service other than by DreamVision or its authorized agents, causes other than from ordinary use or failure to properly use the Product in the application for which said Product was intended.

This Limited Warranty excludes Product cleaning, repair, or replacement of plastics due to cosmetic damage and damage as a result of normal wear. Product repair outside of the terms of the Limited Warranty will be on a time and materials basis. Prolonged Product "demonstration" causes unusual Product wear and is not considered normal use under the terms of this Limited Warranty.

The Accessory Product Limited Warranty covers the accessory item only and excludes normal wear. The Lamp Product Limited Warranty excludes expected lamp degradation.

Remanufactured Products and Software Products are exempt from the foregoing Limited Warranty. Please refer to the appropriate Remanufactured Product Limited Warranty or Software Product Limited Warranty for applicable Warranty information.

DISCLAIMER OF UNSTATED WARRANTIES

THE WARRANTY PRINTED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE ARE DISCLAIMED. THERE ARE NO WARRANTIES THAT EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF AND THE FOREGOING WARRANTY SHALL NOT BE EXTENDED, ALTERED OR VARIED EXCEPT BY WRITTEN INSTRUMENT SIGNED BY DREAMVISION. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY MAY LAST, SO SUCH LIMITATIONS MAY NOT APPLY TO YOU.